User Manual GM7MG0P GM7MG7P

Notice

The information in this user's manual is protected by copyright laws, all parts of this manual, including the products and software described in it, can not be reproduced, transmitted, transcribed, stored in a retrieval system, nor translated into any language.

THE MANUFACTURER OR RESELLER SHALL NOT BE LIABLE FOR ERRORS OR OMISSIONS CONTAINED IN THIS MANUAL AND SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES, WHICH MAY RESULT FROM THE PERFORMANCE OR USE OF THIS MANUAL.

The illustrations in this user's manual are for reference only. Actual product specifications may vary with territories.

The information in this user's manual is subject to change without notice.

TABLE OF CONTENTS

Notice	2
Preface	5
1.1 Regulations Information	6
1.2 Safety Instructions	10
1.3 Conventions for this Manual	11
1.4 Release History	12
Getting to know the basics	13
2.1 Product Specification	14
2.2 Preparing your Computer	
2.3 Product Overview	19
Getting started	
3.1 AC Adapter	
3.2 Knowing the Keyboard	30
3.2.1 For keyboard users	31
3.3 Using the touchpad / clickpad	
BIOS setup	35

4.1 About BIOS Setup	35
4.1.1 When to Use BIOS Setup ?	35
4.1.2 How to Run BIOS Setup ?	35
4.2 BIOS Setup Menu	. 37
4.2.1 Main Menu	38
4.2.2 Advanced Menu	40
4.2.3 Security Menu	42
4.2.4 Boot Menu	43
4.2.5 Exit Menu	45

Chapter 1





1.1 Regulations Information

¤ CE compliance

This device is classed as a technical information equipment (ITE) in class B and is intended for use in living room and office. The CE-mark approves the conformity by the EU-guidelines:

- EMC Directive 2014/30/EU,
- Low Voltage Directive 2014/35/EU(equals A2 : 2013),
- RF Directive 2014/53/EU

SAR/DAS refers to the rate at which the body absorbs RF energy.

The SAR limit set by the ICNIRP Guidelines is 2.0 W/kg(10g).

Testing for SAR is conducted using standard operating positions accepted by the EN standard.

During testing, the radio is set to its highest transmission levels and placed in positions that simulate use against the body.

This product is compliant with ICNIRP Guidelines with respect to Electromagnetic Fields (EMF) which specifies a Specific Absorption Rate (SAR) limit of 2W/kg. DAS*/SAR: 0.041W/kg (corps/body)



Rechargeable Battery Notice Do not

- 1. Throw into fire or a hot oven, or mechanically crush or cutting of a BATTERY
- 2. Throw or immerse into water
- 3.Heat to more than 60°C
- 4.Repaire or disassemble
- 5.Leave in an extremely low air pressure environment
- 6.Leave in an extremely high-temperature environment
- A power cord is connected to a socket-outlet with earthing connection.



The unit can be operated at an ambient temperature of max. 35°C (95°F). Do not subject it to temperatures below 5°C (41°F) or above 40°C (104 °F).

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

PREVENTION OF HEARING LOSS

CAUTION: Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels. Headsets should comply with EN 50332-2 requirements.

FCC Information

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/ TV technician for help.



CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF Exposure Information(SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/eot/ea/fccid after searching on FCC ID: 2AKHFAX201NG.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

1.2 Safety Instructions



1

Do not apply heavy pressure to the computer or subject it to any form of strong impact as this can damage the computer's components or otherwise cause it to malfunction.

Never cover or block the air vents including those located at the base of the computer. Never cover your computer or AC adapter with any object.



2

To keep your computer in prime operating condition, protect your work area from direct sunlight.



Do NOT expose to or use near liquid, rain, or moisture. Do NOT use the modem during electrical storms.



Do not use or expose this device around magnetic fields as magnetic interference may affect the performance of the device.

1.3 Conventions for this Manual



1.4 Release History




Chapter 2

Getting to know the basics

2.1 Product Specification

This User's Manual provides technical information of instructions and illustrations on how to operate this notebook for the customer. Please read this manual carefully before using this notebook.

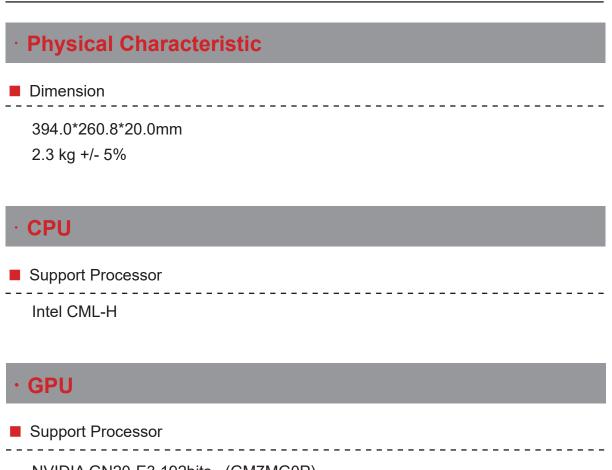

NVIDIA GN20-E3,192bits (GM7MG0P)

NVIDIA GN20-E5,256bits (GM7MG7P)

· Memory

RAM

DDR4 2933MHz

· I/O Port	
DC-in	x 1
USB	USB Type A @Right side x2:
	USB 3.1 (Gen1) X2 (Power off mode support USB power but w/o_bc1.2 protocol)
	USB Type A @Left side x1:
	USB 3,1 (Gen2) X1 (Power off mode support USB power, but w/o_bc1.2 protocol)
	USB Type C x1 @Rear side x1
	USB 3.1 Gen2 + DP (Power off mode support USB power but w/o_bc1.2 protocol)
RJ45	x 1
HDMI	x 1
Audio out & Mic in	x 2
Card reader	x 1 USB3.0 Interface
	-Support Micro SD /SDHC/SDXC card
	-SD Card support up to UHS-I

· Audio

Audio Codec Realtek ALC274CG / AMP: Realtek ALC1306-CGT

Azalia standard support, D3 mode support

Smart AMP support

Speaker/MIC

Build-in 2 speakers

Speaker : 2W/each

Digitial Microphone support

· Display

LCD

17.3" FHD, 16:9, 144Hz/165HZ

FHD, 1920x1080 /QHD, 2560x1440

Webcam

Infrared capability for facial reconition camera

IR Camera w/ D-MIC*2

· Communication Port

LAN

*RTL8125BG *Supports 10/100/1000/2500 Mb/sec *PCIE interface *Power Down Mode D1~D3 support *PCIE ASPM L1.1, L1.2 support *UI for network package management

Wireless LAN +BT

*M.2 2230 w/ CNVi interface, Intel WiFi6 AX201

IEEE802.11AX mode support

*M.2 2230 w/ CNVi interface, Intel 9 series WiFi 9462 IEEE802.11AC mode support (for China only)

Input

Keyboard

Membrane KB(333X104mm) travel=1.4mm backlight = 4zone RGB(NEW)

Pointing Device

TDA3072

Outline: 130.0*72.5mm +/- 0.15mm

Glass like

Enable/Disable area :10mmx10mm

Palm Rejection:Support

Power

AC Adapter

Gaming sku: Automatics Voltage adjustment between 100 and 240VAC 50/60Hz, 230 Watts(19.5V/11.8A), 3 Pins (Turbo mode supper on 230 Watts)



Li- polymer Battery, SW Gas Gauge IC, soft pack, 6cells (3s2p 7900mAh) 91.24wh




.

2.2 Preparing your Computer




Connect the AC adapter's DC output plug to the DC IN jack.

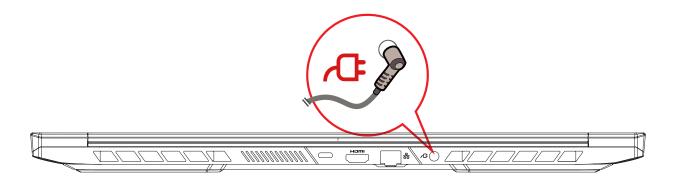




The display panel can be opened to a wide range of angles for optimal viewing.

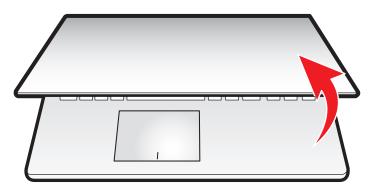



Press the power button to turn on your notebook computer.

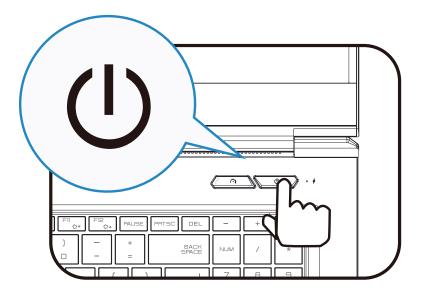


2.3 Product Overview

Please become familiar with each component before you operate the computer.

Top-Open View

NOTE: The product's color/ LED color, I/O port, indicator location, and specification will depend upon the actually shipping product.

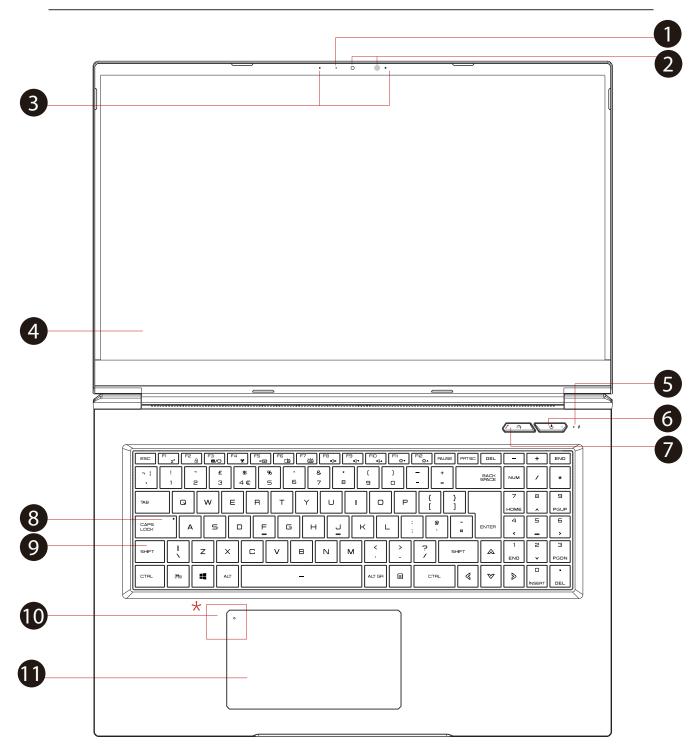



Camera Status LED

The Camera Status LED shows the Camera status.



Camera

A device that allows you to record video or take photographs with your computer.

Infrared capability for facial reconition camera

can be used to identify and authenticate user to unlock notebook, conduct payment and other security functions.



Microphone

Built-in microphones.

IR CCD MIC*2



LCD screen

Displays of your notebook computer.



Charging & Battery indicator

Charging : Blinking White Battery Low (<6%): Blinking Amber Charging finish : OFF



 
screen closed to protect it from dust.

CAUTION: When you are not using the computer, keep the LCD-



Power Button

Press this button to turn the computer's power on or off.



Power ON: White Suspend: Blinking White Power Off: OFF

 Turbo / Game / Office Mode Switch

 On screen display

 Image: Comparison of the strength of the strengt of the strength of the strength of the strength of the



7

Caps Lock Status LED

Default: ON (White)



Keyboard

The keyboard provides keys with comfortable travel

(The keyboard legend will depend on the spec / region)



Touchpad LED indicator/ Touchpad switch

 
• Please refer to the description at the end of the manual



Touchpad/Click pad

Touch-sensitive pointing device which functions like the mouse.

Right Side View





Card Reader

Insert Memory Card. USB3.0 Interface -Support Micro SD /SDHC/SDXC card -SDCard support up to UHS-I



USB Port

 
Connects an USB device (such as USB Zip drive, keyboard or mouse) into this jack. With charging function.



Vents

The thermal vents are designed to cool the internal components and avoid overheating.

Left Side View





Kensington® Lock Port

To be secured using Kensington® Lock Port security products.



Vents

The thermal vents are designed to cool the internal components and avoid overheating.



USB Port

Connects an USB device. (such as USB Zip drive, keyboard or mouse) into this jack.



Mic In Jack

Connects amplified speakers, headphones or microphone into this jack.




Audio Out Jack

Connects amplified speakers, headphones or microphone into this jack.

Bottom Side View

NOTE : The product's thermal vent will depend upon the actually shipping product.

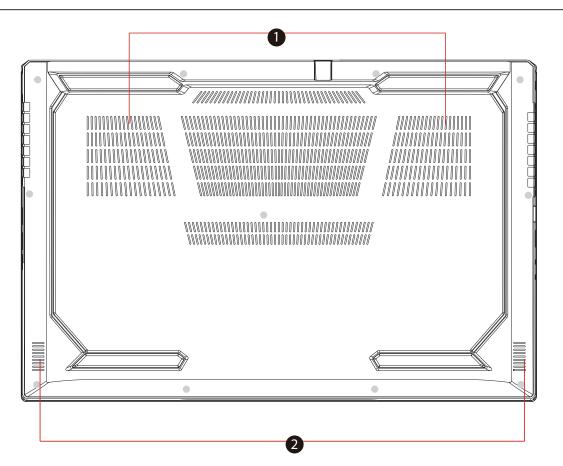



Vents

The thermal vents are designed to cool the internal components and avoid overheating.




Speaker

0

CAUTION: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation.

Compartment View


NOTE: Specification will depend upon the actually shipping product.

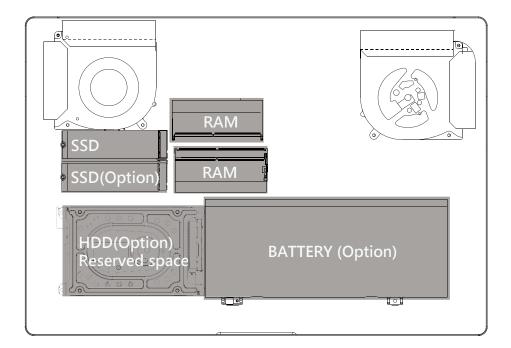



If need to upgrade Please contact technical support and after-sales service.

Front Side View

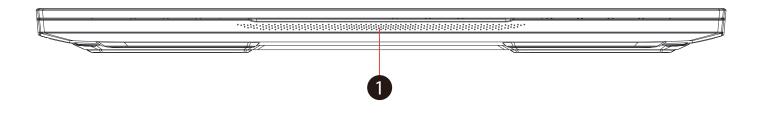




Light bar

Smart lighting color control of Light Bar.

Back Side View

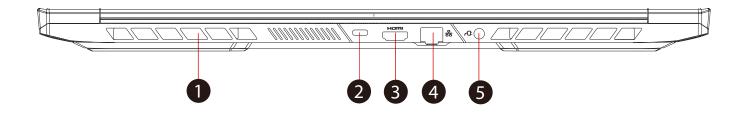



Vents

The thermal vents are designed to cool the internal components and avoid overheating.



USB Type C Port

USB Type C / DP / USB Power Delivery



HDMI port

Connected to the screen, or home theater system.



Network Jack

This jack lets you connect to a LAN.



Power Connector

Connects the AC adapter into this connector.


Chapter 3


Getting started

3.1 AC Adapter

Please be noted that it is strongly recommended to connect the AC adapter and use the AC power while using this notebook for the first time. When the AC adapter is connected, the battery is being charged immediately. Attach the AC adapter when you need to charge the battery or you want to operate from AC power. It is also the fastest way to get started, because the battery pack will need to be charged before you can operate from battery power.

Note that the AC adapter included in the package is approved for your notebook; using other adapter model may damage either the notebook or other devices attached to it.

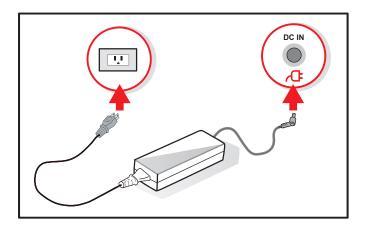

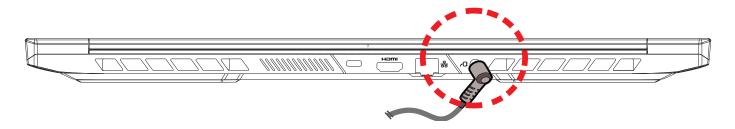

CAUTION: The use of inferior extension cords may result in damage to your notebook. Your notebook comes with its own authorized AC adapter. Use of a different AC adapter or cable extension which is not authorized for use will void warranty protection if damage to hardware is found in association to said adapter or extension cable.

NOTE: The power adapter can become hot when in use. Please be sure the AC adapter is not covered with any materials keep it away from exposed parts of your body. The AC adapter appearance may vary depending on your region.

3.2 Knowing the Keyboard

The following defines the colored hot keys on the Keyboard.

The colored commands can only be accessed by first pressing and holding the function key while pressing a key with a colored command.

ESC F1 F	F3			F10 ⊄▲	F11 Q*	F12 Ø*	PRTSC	DEL	-	+	END
~ ! , 1	e 2	# 3	\$ % ^ & * 4 5 5 7 8	()	- + - =		BACK SPACE	NUM	/	*
тав	W	E	П Т Ү И І		P	(} []			7 HOME	8	9 PGUP
CAPS LOCK	A .	5		K	-	, ¹¹		ENTER	4	5	5
SHIFT	Z	×		< ,	>	? /	HIFT	A	1 END	2	3 PGDN
CTRL Fin		ALT	-	ALT	Ξ	CTRL	4	~	⊳	0 INSERT	DEL

NOTE: The number of keys available on your keyboard will depend on the country/region in which the keyboard was designed and built.

3.2.1 For keyboard users

To activate these functions, press the hot key associated with the desired function as below :


Function Keys

Keypad		Function Description
$\boxed{Fn} + \begin{bmatrix} FI \\ z^z \end{bmatrix}$	Suspend:	Press this key combination (Fn+F1) to enter sleep mode.
	Windows Lock/On:	Press this key combination (Fn+F2) to turn Windows Lock/On .
	Display mode:	Press this key combination (Fn+F3) to enable Display Mode.
Fn + F4 (%)	RADIO On/Off:	Press this key combination (Fn+F4) to turn all radios on or off.
	Touch pad On/Off:	Press this key combination (Fn+F5) to On/Off Touch pad mode.

Function Keys

Keypad		Function Description
	Keyboard Brightness down:	Press this key combination (Fn+F6) to decrease brightness of Keyboard.
	Keyboard Brightness up:	Press this key combination (Fn+F7) to increase brightness of Keyboard.
	MUTE:	Press this key combination (Fn+F8) to enter MUTE mode.
	Volume down:	Press this key combination (Fn+F9) to enter Volume down mode.
	Volume up:	Press this key combination (Fn+F10) to enter Volume up mode.
	Brightness down:	Press this key combination (Fn+F11) to decrease brightness of LCD display.
	Brightness up:	Press this key combination (Fn+F12) to increase brightness of LCD display.

 Function Keys




For a full list of Windows keyboard shortcuts, please visit the Microsoft official website

https://support.microsoft.com/en-us/

3.3 Using the touchpad / clickpad

The touchpad / clickpad is a rectangular electronic panel located just below your keyboard. Click twice left corner will open or close (Green light) touchpad functionality. You can use the static-sensitive panel of the touchpad / clickpad and slide it to move the cursor. You can use the buttons below the touchpad as left and right mouse buttons.

Press the left **1** and right **2** buttons located on the edge of the touchpad / clickpad to make selections and run functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad / clickpad produces similar results.

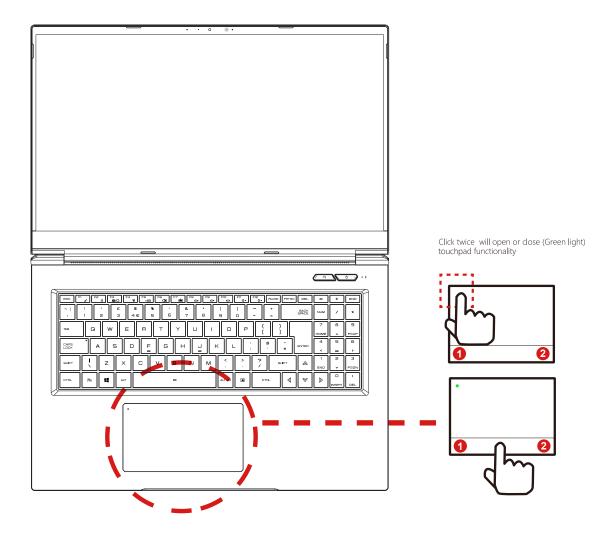

Chapter 4

BIOS setup

4.1 About BIOS Setup

4.1.1 When to Use BIOS Setup ?

You may need to run the BIOS Setup when:

- An error message appears on the screen during the system booting up and is requested to run SETUP.
- You want to change the default settings for customized features.
- · You want to reload the default BIOS settings.

4.1.2 How to Run BIOS Setup ?

To run the BIOS Setup Utility, turn on the notebook and press the [Del] key during the POST procedure.

If the message disappears before you respond and you still wish to enter Setup, either restart the system by turning it OFF and ON, or simultaneously pressing [Ctrl]+[Alt]+[Del] keys to restart.

Be noted that the screen snaps and setting options in this chapter are for your references only. The actual setting screens and options on your Notebook may be different because of BIOS update.

The setup function only can be invoked by pressing [Del] or [F2] key during POST that provide a approach to change some setting and configuration the user prefer, and the changed values will save in the NVRAM and will take effect after the system rebooted. The setup uses a menu interface to allow the user to configure their system and the features are briefly listed as follow.

Press [F7] key for Boot Menu.

NOTE : The drivers, BIOS and utilities bundled in the support DVD may vary by models and are subject to change without notice.

4.2 BIOS Setup Menu

Once you enter the BIOS Setup Utility, the Main Menu will appear on the screen. Select the tags to enter the other menus.

Main Menu

Show system overview about memory size and setting of system time and date.

Advanced Menu

To select the XD feature enable or disable XD feature only work with Intel platform + Windows.

Security Menu

Install or clear the password settings for supervisor and user.

Boot Menu

Configure Settings during System Boot.

EXIT Menu

Save or discard the changes before leaving the BIOS Setup Menu.

4.2.1 Main Menu

Water Advanced Occurrity Deet D	Aptio Setup – AMI	Prote Online & Suite
Main Hovanced Security Boot Ex	kit Main Advanced Chipset Security	BUUL SAVE & EXIL
System Information		<enter> selects field.</enter>
System Time	[19:24:36]	
System Date	[Thu 12/17/2020]	
BIOS Version	N.1.01STD00	
EC Version	1.00.33.00	
Build Date and Time	12/21/2020 19:41:37	
Manufacturer Name	Standard	
Product Name	99999	
Serial Number	Standard	
Asset Tag	Standard	
UUID Number	00020003000400050006000700080	
Ethernet MAC Address	B0:25:AA:3E:70:44	↔+: Select Screen
		↑↓: Select Item
Processon		Enter: Select
Processor Type	Intel(R) Core(TM) i7–10870H C	+/-: Change Opt.
Processor Speed	2200 MHz	F1: General Help
		F2: Previous Values
Total Memory	32768 MB	F3: Optimized Defaults
Memory Frequency	2933 MHz	F4: Save & Exit
ME Information		ESC: Exit
ME FW Version	14.0.39.1339	
ME Firmware SKU	Consumer SKU	
Usersion	0.04.4070.0-publisht (0).0000.0NT	
Version	2.21.1278Copyright (C) 2020AMI	

· System Time

This item allows you to set the system time. There is a small internal (CMOS) battery which is designed to maintain your system clock. It is designed to maintain time even when the PC is powered down or in sleep mode. The time format is [hour:minute:second].

Use [+] or [-] to configure system Time.

· System Date

This item allows you to set the system date. The date format is [day:month:date:year].

Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.

Day	Day of the week, from Sun to Sat, which is determined by BIOS (read-only).
Month (Month)	The month from 01 (January) to 12 (December).
Date (Date)	The date from 01 to 31.
Year (Year)	The year can be adjusted by users.

· Total Memory

This allows you to see the total amount of memory.

4.2.2 Advanced Menu

Main Advanced Security Boot Exit	Aptio Setup – AMI Main Advanced Chipset Security	Boot Save & Exit
Light Bar Effect Advanced Setting	[Disabled]	Select Light Bar mode when power on. If remove AC power, USB
OS Support Wake on LAN Wake From Sleep (S3) With USB Devic	[UEFI OS] [Disabled] [Enabled]	light Bar will be disabled
SATA Device SATA Mode Selection Serial ATA Port 0 Serial ATA Port 1 Serial ATA Port 2 Serial ATA Port 3 Serial ATA Port 4	[AHCI] Empty Empty Empty Empty Empty	++: Select Screen 11: Select Item
NVMe Device NVMe Controller NVMe Controller	PM81024GPMCB27BTF-E13T4 (1024 PM81024GPMCB27BTF-E13T4 (1024	Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values
Intel Virtualization Technology	[Enabled]	F3: Optimized Defaults F4: Save & Exit ESC: Exit
Operating Mode ▶ Switchable Graphics	[Turbo Mode]	

/ersion 2.21.1278 Copyright (C) 2020 AMI

Main Advanced Security Boot Exit	Aptio Setup – AMI Main Advanced Chipset Security	Boot Save & Exit
Advanced Setting		Memory Overclocking Menu
OS Support Wake on LAN Wake From Sleep (S3) With USB Devic	[UEFI OS] [Disabled] [Enabled]	nenu
SATA Device SATA Mode Selection Serial ATA Port 0 Serial ATA Port 1 Serial ATA Port 2 Serial ATA Port 3 Serial ATA Port 4	[AHCI] Empty Empty Empty Empty Empty	
NVMe Device NVMe Controller NVMe Controller	PM81024GPMCB27BTF-E13T4 (1024 PM81024GPMCB27BTF-E13T4 (1024	↔: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help
Intel Virtualization Technology	[Enabled]	F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Operating Mode ▶ Switchable Graphics ▶ Memory	[Office Mode]	
Version 2 2	21.1278 Copyright (C) 2020 AMI	

- Operating system support [UFEI OS]
 If you choose UEFI operating system, it will support UEFI mode compatible operating systems
- NVME Device
 AHCI NVME SSD info will be displayed
- Intel Virtualization Technology
 When enabled, VMM can take advantage of additional hardware features provided by Vanderpool technology
 - Operating mode (Optional)
 Enable Turbo mode/ Gameing mode/office mode
 - For details of Control center, please refer to the following instructions

4.2.3 Security Menu

Main Advanced Security Boot Ex	Aptio Setup – AMI it Main Advanced Chipset Security	, Root Save & Exit
Security Settings Access Level Administrator Password User Password Change Administrator Password	Administrator Not Installed Not Installed	Set Setup Administrator Password
Change User Password Password Login Control	[Both]	
Secure Boot System Mode	Not Active User	 ≁+: Select Screen
Secure Boot	[Disabled]	<pre>fl: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</pre>
Version :	2.21.1278 Copyright (C) 2020 AMI	

· Change Administrator Password

When this item is selected, a message box shall appear on the screen as below:

Enter New Password

Type a maximum of 20-digit password and press [Enter].

The password typed now will replace any previously set password from CMOS memory. You may also press [ESC] to abandon new password setting. It is extremely important to keep record for any BIOS password which is set as it can not be reset even with the removal of a CMOS battery for the security of your PC. Select Change User Password to give or to abandon password setting same as Change Administrator Password item above.

Note that Administrator Password field allows users to enter and change the settings of the BIOS SETUP UTILITY, while User Password field only allows users to enter the BIOS SETUP UTILITY without having the authorization to make any change.

The Password Check item is used to specify the type of BIOS password protection that is implemented.

To clear a set Administrator Password/ User Password, just press [Enter] under Change Administrator Password/ Change User Password field when you are prompted to enter the password. A message box will pop up confirming password will be disabled. Once the password is disabled, the system will boot and user can enter setup without entering password.

Key Management:

Enables expert user to modify Secure Boot Policy variables without full authentication.

4.2.4 Boot Menu

Boot Configuration Enable/Disable CSM Launch CSM [Disabled] LAN Remote Boot [Disabled] Boot Option Priorities [Disabled] Boot Option #1 [UEFI USB Key:UEFI: SanDisk] Boot Option #2 [UEFI USB Hard Disk] Boot Option #3 [UEFI USB Floppy] Boot Option #4 [UEFI NVME:Windows Boot Man] Boot Option #6 [UEFI Hard Disk]	Main Advanced Security Boot Exit	Aptio Setup – AMI Main Advanced Chipset Security	Boot Save & Exit
Launch CSM [Disabled] LAN Remote Boot [Disabled] Boot Option Priorities Boot Option #1 [UEFI USB Key:UEFI: SanDisk] Boot Option #2 [UEFI USB Hard Disk] Boot Option #3 [UEFI USB Floppy] Boot Option #5 [UEFI NVME:Windows Boot Man] Boot Option #6 [UEFI Hard Disk]	Boot Configuration		
Boot Option #1[UEFI USB Key:UEFI: SanDisk]Boot Option #2[UEFI USB Hard Disk]Boot Option #3[UEFI USB CD/DVD]Boot Option #4[UEFI USB Floppy]Boot Option #5[UEFI NVME:Windows Boot Man]Boot Option #6[UEFI Hard Disk]			
Boot Option #8 [UEFI CD/DVD] 11: Select Item • UEFI USB Key Drive BBS Priorities +/-: Change Opt. • UEFI NVME Drive BBS Priorities F1: General Help F2: Previous Values	Boot Option #1 Boot Option #2 Boot Option #3 Boot Option #4 Boot Option #5 Boot Option #6 Boot Option #7 Boot Option #8 • UEFI USB Key Drive BBS Priorities	[UEFI USB Hard Disk] [UEFI USB CD/DVD] [UEFI USB Floppy] [UEFI NVME:Windows Boot Man] [UEFI Hard Disk] [UEFI Network]	Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit

- Boot Configuration
 Configure Settings during System Boot.
- · LAN Remote Boot [Disable]: Boot from LAN or not.
- Set Boot Priority (1st/2nd/3rd/..... Boot)
 Specifies the boot sequence from the available devices.
 A device enclosed in parenthesis has been disabled in the corresponding type menu.
- Hard Disk Drive / USB HardDisk Drive Specifies the Boot Device Priority sequence.

4.2.5 Exit Menu



· Save Changes and Reset

Exit system setup after saving the changes.F4 key can be used for this operation.

· Discard Changes and Exit

Exit system setup without saving any changes. ESC key can be used for this operation.

· Restore Defaults

Restore/Load Defaults values for all the setup options. F3 key can be used for this operation.