

USER'S MANUAL

notebook

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©December 2009

Trademarks

Intel and **Intel Core** are trademarks/registered trademarks of Intel Corporation.

FCC Statement (Federal Communications Commission)

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1. This device may not cause interference.
And
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

If your purchase option includes both **Wireless LAN** and **3.5G** modules, then the appropriate antennas will be installed. Note that In order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 4.74A (**90 Watts**) minimum AC/DC Adapter.

CAUTION

Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.

TO REDUCE THE RISK OF FIRE, USE ONLY NO. 26 AWG OR LARGER, TELE-COMMUNICATION LINE CORD

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



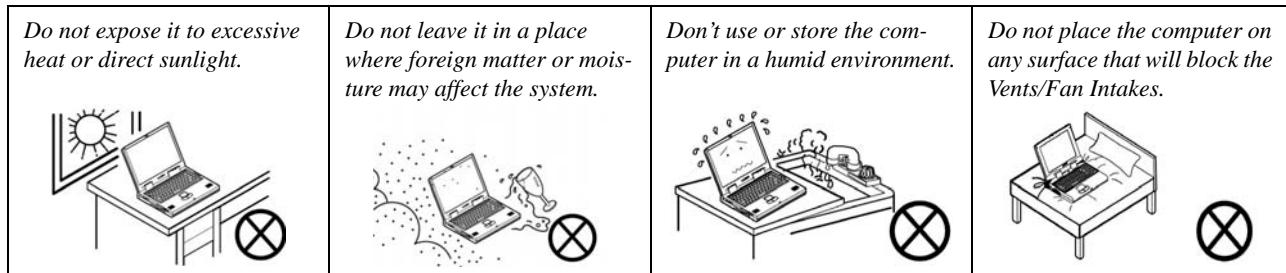



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.


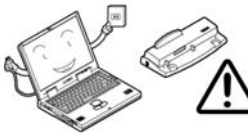


Preface

3. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
4. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.
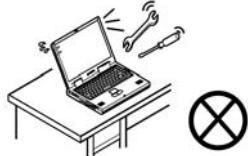
<p><i>Do not turn off the power until you properly shut down all programs.</i></p> 	<p><i>Do not turn off any peripheral devices when the computer is on.</i></p> 	<p><i>Do not disassemble the computer by yourself.</i></p> 	<p><i>Perform routine maintenance on your computer.</i></p> 
--	---	---	---

5. **Take care when using peripheral devices.**

<p><i>Use only approved brands of peripherals.</i></p> 	<p><i>Unplug the power cord before attaching peripheral devices.</i></p> 
--	---

Power Safety


The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

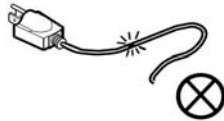

Do not place heavy objects on the power cord.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.



Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.

Travel Considerations

Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your documents are prepared.



Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vent(s)/fan intake(s)/outlet(s) to be blocked. To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s)/outlet(s) while the computer is in use.

On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

Hand-carry the notebook - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with normal luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

Beware of Electromagnetic fields - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note:** Some airports also scan luggage with these devices.

Fly safely - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

Get power where you can - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.


Keep it dry - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:



- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.

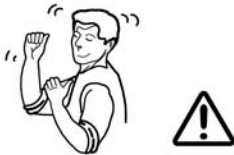

Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.

Lighting

Proper lighting and comfortable display viewing angle can reduce eye strain and muscle fatigue in your neck and shoulders.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

Contents

Notice	I	Keyboard - Model A	1-11
FCC Statement	II	Keyboard - Model B	1-12
FCC RF Radiation Exposure Statement:	III	Function/Hot Key Indicators	1-13
Instructions for Care and Operation	V	System Map: Front & Left Views	1-14
Power Safety	VII	System Map: Right & Rear Views	1-15
Battery Precautions	VIII	System Map: Bottom View - Model A	1-16
Cleaning	IX	System Map: Bottom View - Model B	1-17
Servicing	IX	Windows Vista Start Menu & Control Panel	1-18
Travel Considerations	X	Video Features	1-19
		Display Devices & Options	1-20
		Power Options	1-21

Quick Start Guide

Overview	1-1
Advanced Users	1-2
Beginners and Not-So-Advanced Users	1-2
Warning Boxes	1-2
Not Included	1-3
System Startup	1-4
System Software	1-5
Model Differences	1-6
System Map: LCD Panel Open - Model A	1-7
System Map: LCD Panel Open - Model B	1-8
LED Indicators	1-9
Hot Key Buttons & Keyboard	1-10

Features & Components

Overview	2-1
Hard Disk Drive	2-2
Optical (CD/DVD) Device	2-3
Loading Discs	2-3
Handling CDs or DVDs	2-4
DVD Regional Codes	2-5
7-in-1 Card Reader	2-6
ExpressCard Slot	2-7
Inserting and Removing ExpressCards	2-7
TouchPad and Buttons/Mouse	2-8

Preface

Gestures and Device Settings	2-9
Audio Features	2-12
Adding a Printer	2-13
USB Printer	2-13
Parallel Printer	2-13

Power Management

Overview	3-1
The Power Sources	3-2
AC/DC Adapter	3-2
Battery	3-2
Turning on the Computer	3-3
Power Plans	3-4
Power-Saving States	3-6
Sleep	3-6
Hibernate	3-7
Shut Down	3-7
Configuring the Power Buttons	3-8
Resuming Operation	3-9
Energy Star Power Saving	3-10
Battery Information	3-11
Battery Power	3-11
Conserving Battery Power	3-12
Battery Life	3-13
New Battery	3-13

Recharging the Battery with the AC/DC Adapter	3-13
Proper handling of the Battery Pack	3-14
Battery FAQ	3-15

Drivers & Utilities

What to Install	4-1
Module Driver Installation	4-1
Driver Installation	4-2
Updating/Reinstalling Individual Drivers	4-4
User Account Control (Win Vista)	4-4
Windows Security Message	4-4
New Hardware Found	4-5
Driver Installation Procedure	4-5
Chipset	4-5
Video	4-5
Audio	4-6
Modem	4-6
LAN	4-6
TouchPad	4-6
CardReader	4-6
Hot Key	4-6
MEI Driver	4-7
Windows Experience Index	4-7
Optional Drivers	4-8
Wireless LAN Module	4-8

3.75G/HSPA Module	4-8
Fingerprint Reader Module	4-8
PC Camera Module	4-8

BIOS Utilities

Overview	5-1
The Power-On Self Test (POST)	5-2
Failing the POST	5-3
Fatal Errors	5-3
Non-Fatal Errors	5-3
The Setup Program	5-4
Entering Setup	5-4
Setup Screens	5-5
Main Menu	5-6
System Time & Date (Main Menu)	5-6
SATA Port 1/2/5 (Main Menu)	5-7
System Memory (Main Menu)	5-7
BIOS Revision/KBC/	
EC Firmware Revision (Main Menu)	5-7
VGA Card/VBIOS Revision/	
VBIOS Build Date (Main Menu)	5-7
Advanced Menu	5-8
Legacy USB Support (Advanced Menu)	5-8
Boot-time Diagnostic Screen (Advanced Menu)	5-9
Legacy OS Boot: (Advanced Menu)	5-9

Battery Low Alarm Beep (Advanced Menu)	5-9
Security Menu	5-10
Set Supervisor Password (Security Menu)	5-10
Set User Password (Security Menu)	5-11
Fixed disk boot sector: (Security Menu)	5-11
Password on boot: (Security Menu)	5-11
Boot Menu	5-12
Exit Menu	5-13

Upgrading The Computer

Overview	6-1
When Not to Upgrade	6-2
Removing the Battery	6-3
Upgrading the Hard Disk Drive	6-4
Upgrading the Optical (CD/DVD) Device	6-7
Upgrading the System Memory (RAM)	6-9

Modules & Options

Overview	7-1
Bluetooth Module	7-2
Bluetooth Configuration in Windows Vista	7-3
Wireless LAN Module	7-7
Intel® Wi-Fi Link Series Driver Installation	7-8
3rd Party 802.11b/g/n or 802.11b/g/n	
Driver Installation	7-8

Preface

Connecting to a Wireless Network	7-9
Intel® My WiFi Installation & Configuration	7-12
Intel® Wi-Fi Link Series My WiFi	
Driver Installation	7-13
Windows Mobility Center	7-24
3.75G/HSPA Module	7-25
HSPA Modem Interface	7-29
HSPA Modem Interface Installation	7-29
HSPA Modem Interface	7-30
Adding a Profile	7-32
Contacts	7-34
Messages	7-35
Settings	7-36
Mobile Partner	7-38
Mobile Partner Application Installation	7-38
Mobile Partner Application	7-39
Profile Management	7-39
Fingerprint Reader Module	7-43
Fingerprint Reader Driver Installation	7-43
User Enrollment	7-44
Fingerprint Control Center Features	7-47
PC Camera Module	7-48
PC Camera Driver Installation	7-49

Troubleshooting

Overview	8-1
Basic Hints and Tips	8-2
Backup and General Maintenance	8-3
Viruses	8-4
Upgrading and Adding New Hardware/Software	8-5
Problems and Possible Solutions	8-7
Screen Resolution Error	8-12

Interface (Ports & Jacks)

Overview	A-1
----------------	-----

ATI Video Driver Controls

ATI Video Driver Installation	B-1
ATI Catalyst® Control Center	B-2
Attaching Other Displays	B-4
HDMI Audio Configuration	B-6
Display Modes	B-9
Clone Mode	B-10
Extended Mode	B-11
Theater Mode	B-14
PowerPlay™	B-15

Specifications

Processor	C-2
Processor (cont'd)	C-2
Core Logic	C-2
Display	C-2
Memory	C-2
Video Adapter	C-2
BIOS	C-3
Storage	C-3
Audio	C-3
Keyboard & Pointing Device	C-3
Card Reader	C-3
Interface	C-3
Slots	C-3
Communication	C-3
Communication (cont'd)	C-4
Power Management	C-4
Power	C-4
Security	C-4
Operating System	C-4
Environmental Spec	C-4
Dimensions & Weight	C-4
Factory Options	C-5

Windows 7 Information

Model Differences	D-2
DVD Regional Codes	D-3
Windows 7 Start Menu & Control Panel	D-4
Function/Hot Key Indicators	D-5
Hot Key Buttons & Keyboard	D-6
Video Features	D-7
Screen Resolution	D-8
Attaching Other Displays	D-9
ATI Catalyst® Control Center	D-11
The Power Sources	D-14
AC/DC Adapter	D-14
Battery.....	D-14
Turning On the Computer	D-15
Power Plans	D-16
Power-Saving States	D-18
Sleep	D-18
Hibernate	D-19
Shut down	D-19
Configuring the Power Buttons	D-20
Resuming Operation	D-21
Energy Star Power Saving	D-22
Battery Information	D-23
Battery Power	D-23
Conserving Battery Power	D-24

Preface

Battery Life	D-25
New Battery	D-25
Recharging the Battery with the AC/DC Adapter	D-25
Proper handling of the Battery Pack	D-26
Battery FAQ	D-27
Driver Installation	D-29
Updating/Reinstalling Individual Drivers.....	D-30
Driver Installation Procedure.....	D-31
Optional Drivers	D-34
Bluetooth Module (Win 7)	D-36
Bluetooth Configuration in Windows 7	D-37
Wireless LAN Module (Win 7)	D-41
Connecting to a Wireless Network	D-43
Windows Mobility Center	D-46
Fingerprint Reader Module (Win 7)	D-47


Chapter 1: Quick Start Guide

Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices (hard disk, optical device, 7-in-1 card reader, ExpressCard/34/54), TouchPad & Mouse, Audio & Printer.**
- **Chapter 3** The computer's **power** saving options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** Instructions for **upgrading** your computer.
- **Chapter 7** A quick guide to the computer's **Bluetooth, PC Camera, Wireless LAN, 3.75G/HSPA** and **Security** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 8** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface, ports/jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on the **ATI Video driver controls.**
- **Appendix C** The computer's **specification.**

Advanced Users


If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *“What to Install” on page 4 - 1*, *“BIOS Utilities” on page 5 - 1* and *“Upgrading The Computer” on page 6 - 1* in the remainder of the User’s Manual. You may also find the notes marked with a  of interest to you.

Beginners and Not-So-Advanced Users




Notes

Check the light colored boxes with the mark above to find detailed information about the computer’s features.

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in the Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User’s Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a  as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *“Interface (Ports & Jacks)” on page A - 1*.

Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the  symbol. Also please note the safety and handling instructions as indicated in the *Preface*.

Not Included

Operating Systems (e.g. *Windows Vista/Windows 7*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals.



Drivers



If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the drivers listed in ***“Drivers & Utilities” on page 4 - 1***. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed. You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you); refer to ***Chapter 4*** for installation instructions.

Ports and Jacks

See ***Appendix A*** for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
4. Attach the AC/DC adapter to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
5. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 120 degrees); use the other hand (as illustrated in **Figure 1 - 1** below) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).

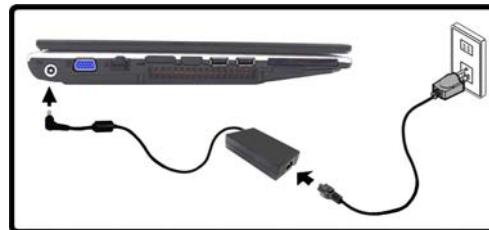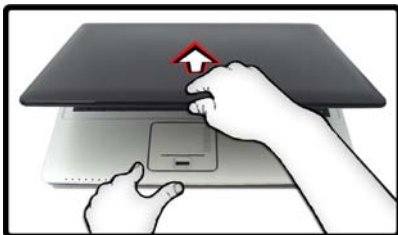

Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Lock Button Menu** in **Windows Vista**. This will help prevent hard disk or system problems.

Figure 1 - 1 - Opening the Lid/LCD/Computer with AC/DC Adapter Plugged-In

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the following operating systems are supported (see *Appendix D* for *Windows 7* specific information).

Operating System & Version	Note
Windows Vista - SP2	In order to run <i>Windows Vista/Windows 7</i> without limitations or decreased performance, your computer requires a minimum 1GB of system memory (RAM).
Windows 7	

Table 1 - 1 - Operating Systems Supported



Windows Vista Service Pack 2

Make sure you install **Windows Vista Service Pack 2** (or a *Windows Vista* version which includes Service Pack 2) **before installing any drivers**. Go to the Microsoft website for download details, or contact your service center.

Model Differences

This notebook series includes **two** different model types. The models differ as indicated in the table below however all other features, modules and specifications are identical (see [Appendix D](#)).



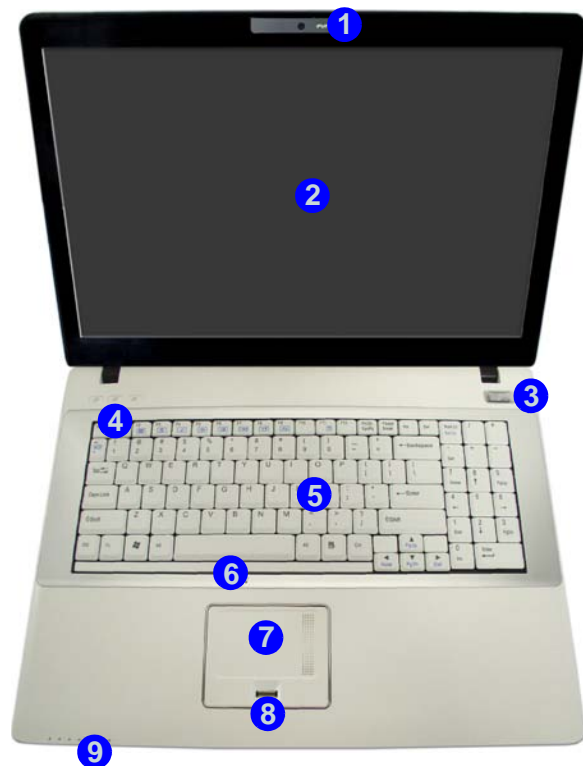
Feature	Model A	Model B
Display Type Supported	17" WXGA(1440 * 900) / WUXGA (1920 * 1200) TFT LCD	15.6" HD 16:9 Wide Screen (1366 * 768) / HD+ (1600 * 900) / FHD (1920 * 1080) TFT LCD
Design		

Table 1 - 2 - Model Differences


System Map: LCD Panel Open - Model A



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.


Use the key combinations to toggle power to the **3.75G/HSPA/WLAN/Bluetooth** modules, and check the LED indicator icon to see if the modules are powered on or not (see [Table 1 - 6, on page 1 - 13](#) / [Table 1 - 4, on page 1 - 9](#)).

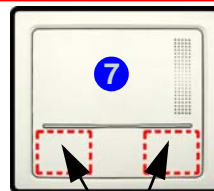

Touchpad Buttons
(valid operation area)

Figure 1 - 2
**LCD Panel Open
(Model A Computers)**

1. Built-In PC Camera
2. LCD
3. Power Button
4. Hot Key Buttons
5. Keyboard
6. Built-In Microphone
7. Touchpad & Buttons
8. Fingerprint Module (Optional)
9. LED Indicators



System Map: LCD Panel Open - Model B

Figure 1 - 3
LCD Panel Open
(Model B Computers)

1. Built-In PC Camera
2. LCD
3. Power Button
4. Hot Key Buttons
5. Keyboard
6. Built-In Microphone
7. Touchpad & Buttons
8. LED Indicators


Note: The Fingerprint Reader module is also an option for **Model B** computers.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the key combinations to toggle power to the **3.75G/HSPA/WLAN/Bluetooth** modules, and check the LED indicator icon to see if the modules are powered on or not (see [Table 1 - 6, on page 1 - 13](#) / [Table 1 - 4, on page 1 - 9](#)).

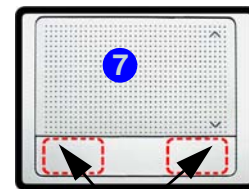

Touchpad Buttons (valid operation area)

LED Indicators

The LED indicators on the computer display helpful information about the current status of the computer.





Icon	Color	Description
	Green	Hard Disk Activity
	Green	Number Lock Activated
	Green	Caps Lock Activated
	Green	Scroll Lock Activated (to activate press Fn & Scr Lk)

Table 1 - 3 - LED Status Indicators




Icon	Color	Description
	Orange	DC Power is Plugged In
	Green	The Computer is On
	Blinking Green	The Computer is in Sleep Mode
	Orange	The Battery is Charging
	Green	The Battery is Fully Charged
	Blinking Orange	The Battery Has Reached Critically Low Power Status
	Green	The (optional) Wireless LAN Module is Powered On
	Orange	The (optional) Bluetooth Module is Powered On

Table 1 - 4 - LED Power & Communication Indicators



Other Keyboards

If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

NumLk & ScrLk

Hold down the **Fn Key** and either NumLk or ScrLk to enable number or scroll lock, and check the LED indicator for status.

Hot Key Buttons & Keyboard

These buttons give instant access to the default Internet browser and e-mail program, and allow you to toggle the **Silent Mode** on/off with one quick button press.




Hot Key	Function
	Activate the Default E-Mail Browser (Note that in Windows 7 this button will only function after Outlook or Outlook Express are installed)
	Activate the Default Internet Program
	Toggle *Silent Mode (for power saving)

Table 1 - 5 - Hot Key Buttons

*When enabled, **Silent Mode** will reduce fan noise and save power consumption. Note this may reduce computer performance.



Special Characters

Some software applications allow the number-keys to be used with **Alt** to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that **NumLk** is on.

Keyboard - Model A

The keyboard has a numerical keypad on the right for easy numeric data input, and features function keys to allow you to change operational features instantly. See [Table 1 - 6, on page 1 - 13](#) for full function key combination details.

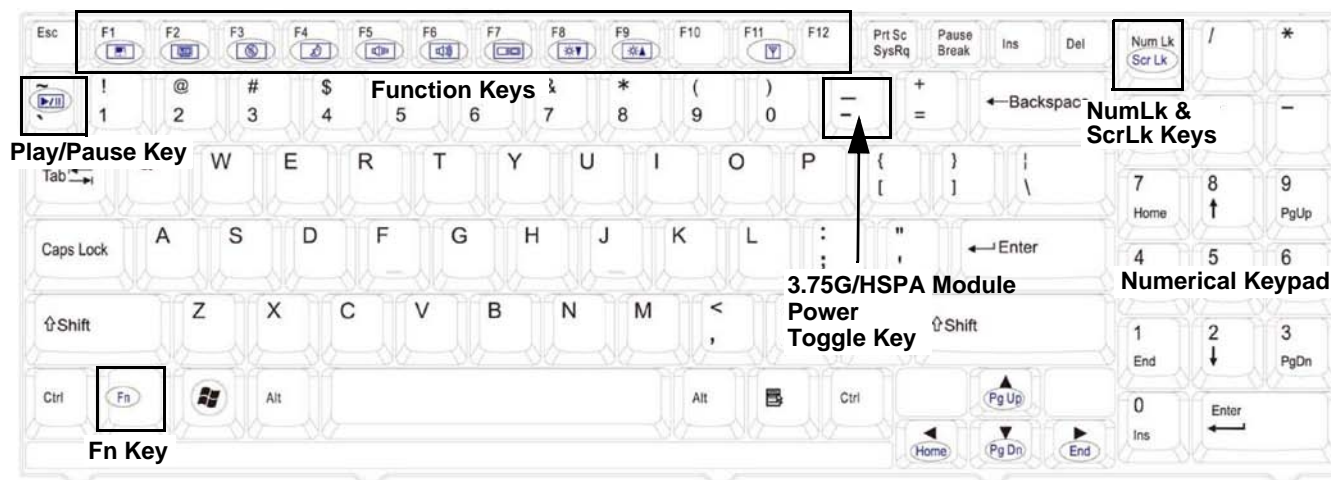


Figure 1 - 4 - Keyboard - Model A

Keyboard - Model B

The keyboard has a numerical keypad on the right for easy numeric data input, and features function keys to allow you to change operational features instantly. See [Table 1 - 6, on page 1 - 13](#) for full function key combination details.

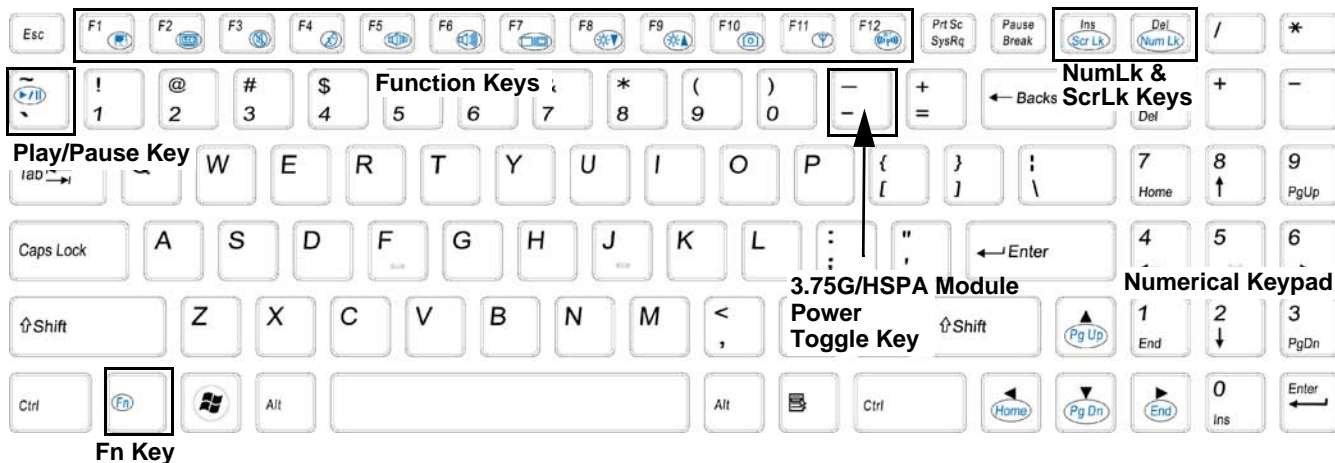


Figure 1 - 5 - Keyboard - Model B

Function/Hot Key Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators are available when the hot key utility is installed.





















Fn Keys	Function		Fn Keys	Function	
Fn + ~	Play/Pause (in Audio/Video Programs)		Fn + F5/F6	Volume Decrease/Increase	 
Fn + 	3.75G Module Power Toggle*	 	Fn + F7	Display Toggle. See <i>“Switching Displays Using Fn + F7” on page B - 4</i>	
Fn + F1	Touchpad Toggle	 	Fn + F8/F9	Brightness Decrease/Increase	 
Fn + F2	Turn LCD Backlight Off (Press a key to or use TouchPad to turn on)		Fn + F10	PC Camera Power Toggle	 
Fn + F3	Mute Toggle	 	Fn + F11	WLAN Module Power Toggle	 
Fn + F4	Sleep Toggle		Fn + F12	Bluetooth Module Power Toggle	 
	*Silent Mode Toggle	 	*When enabled, Silent Mode will reduce fan noise and save power consumption. Note this may reduce computer performance.		

Table 1 - 6 - Function & Hot Key Indicators

System Map: Front & Left Views

Figure 1 - 6

Front & Left Views

1. LED Power & Communication Indicators
2. DC-In Jack
3. External Monitor Port
4. RJ-45 LAN Jack
5. e-SATA Port
6. HDMI-Out Port
7. Vent/Fan Intake/Outlet
8. 2 * USB 2.0 Ports
9. ExpressCard Slot
10. 7-in-1 Card Reader



7-in-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / SD (Secure Digital) / MS (Memory Stick) /
MS Pro (Memory Stick Pro) / MS Duo (requires PC adapter) /
Mini SD (requires PC adapter) / RS MMC (requires PC adapter)



System Map: Right & Rear Views



Figure 1 - 7
Right & Rear Views

1. S/PDIF-Out Jack
2. Microphone-In Jack
3. Headphone-Out Jack
4. USB 2.0 Port
5. Optical Device Drive Bay (for CD/DVD Device - see page 2 - 3)
6. RJ-11 Phone Jack
7. Security Lock Slot
8. Battery



CD/DVD Emergency Eject

If you need to manually eject a CD/DVD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. Do not use a sharpened pencil or any object that may break and become lodged in the hole. Don't try to remove a floppy disk/CD/DVD while the system is accessing it. This may cause the system to "crash".



Changing DVD Regional Codes

Go to the **Control Panel** and double-click **Device Manager (Hardware and Sound)**, then click the + next to **DVD/CD-ROM drives**. Double-click on the DVD-ROM device to bring up the **Properties** dialog box, and select the **DVD Region** (tab) to bring up the control panel to allow you to adjust the regional code.

DVD region detection is device dependent, not OS-dependent. You can select your module's region code **5** times. The fifth selection is permanent. This cannot be altered even if you change your operating system or you use the module in another computer.



Disk Eject Warning


Don't try to eject a CD/DVD while the system is accessing it. This may cause the system to "crash". Stop the disk first then eject it, or press the stop button twice.

Figure 1 - 8
Bottom View
(Model A
Computers)

1. Battery
2. RAM & CPU Bay Cover
3. Vent/Fan Intake/Outlet
4. Hard Disk Bay Cover
5. 3.75G/HSPA USIM Card Location
6. Speakers

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***“Energy Star Power Saving”*** on page 3 - 10 for full instructions.

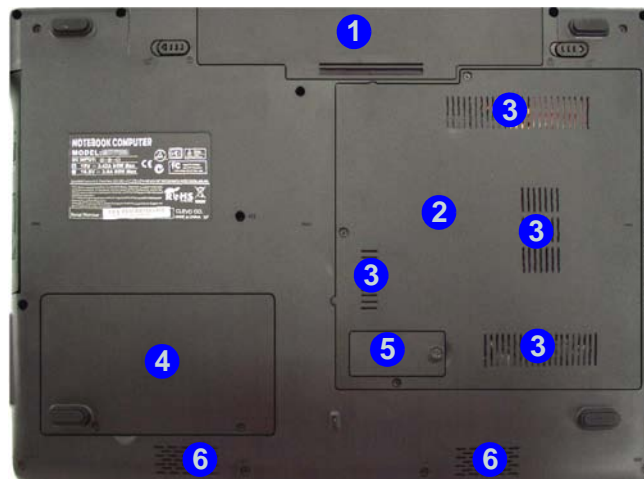

CPU

The CPU is not a user serviceable part.

Overheating

To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intake while the computer is in use.

System Map: Bottom View - Model B



Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***“Energy Star Power Saving”*** on page 3 - 10 for full instructions.

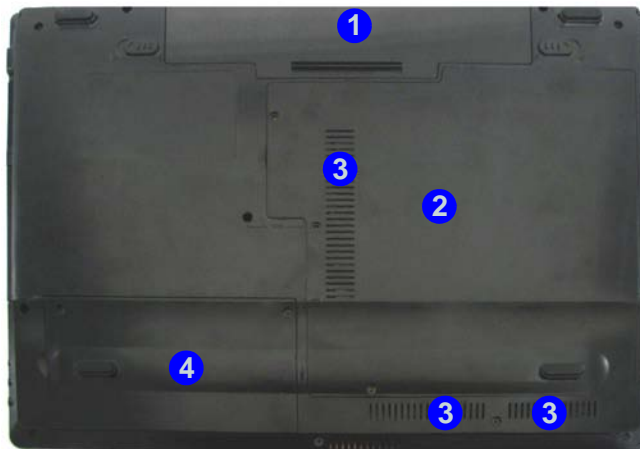


Figure 1 - 9
**Bottom View
(Model B
Computers)**

1. Battery
2. RAM & CPU Bay Cover
3. Vent/Fan Intake/Outlet
4. Hard Disk Bay Cover

Note: the 3.75G/HSPA USIM Card is located under the RAM & CPU Bay Cover.




CPU

The CPU is not a user serviceable part.

Overheating

To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intake while the computer is in use.

Windows Vista Start Menu & Control Panel

Most of the control panels, utilities and programs within *Windows Vista* (and most other *Windows* versions) are accessed from the **Start** menu. When you install programs and utilities they will be installed on your hard disk drive, and a shortcut will usually be placed in the **Start** menu and/or the desktop. Right-click the **Start** menu icon , and then select **Properties** if you want to customize the appearance of the **Start** menu.

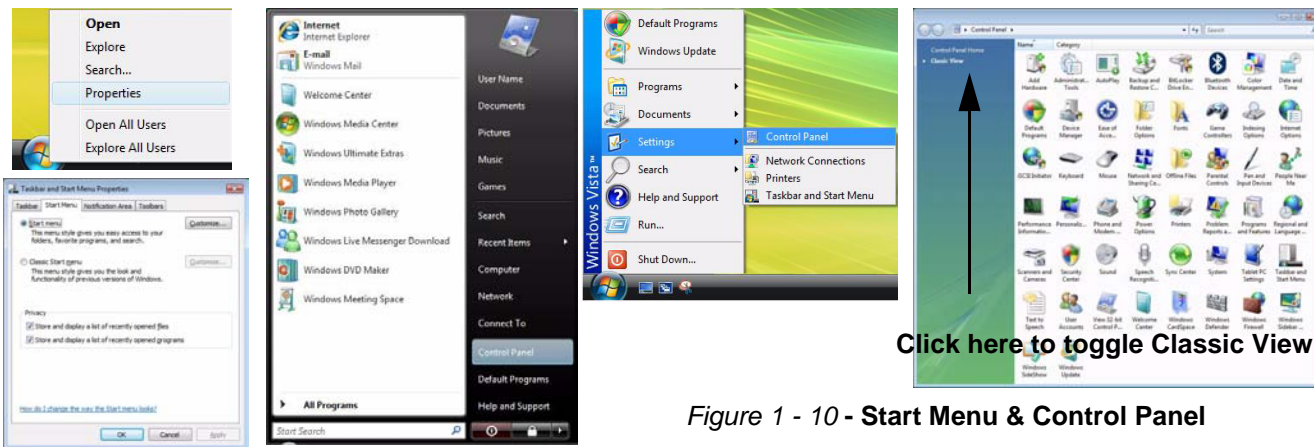


Figure 1 - 10 - Start Menu & Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The **Control Panel** is accessed from the **Start** menu, and it allows you to configure the settings for most of the key features in *Windows* (e.g. power, video, network, audio etc.). *Windows Vista* provides basic controls for many of the features, however many new controls are added (or existing ones are enhanced) when you install the drivers listed in *Table 4 - 1, on page 4 - 3*. To see all controls it may be necessary to toggle to Classic View on.

Video Features

You can configure display options, from the **Display Settings** control panel in *Windows* as long as the appropriate **video driver** is installed. For more detailed video information see “*ATI Video Driver Controls*” on *page B - 1*.

To access **Display Settings** in *Windows*:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Adjust screen resolution** under the **Appearance and Personalization** menu (or double-click **Personalization > Display Settings**).
3. Move the slider to the preferred setting in **Resolution**: ① (*Figure 1 - 11 on page 1 - 20*).
4. Click the arrow, and scroll to the preferred setting in **Colors**: ② (*Figure 1 - 11 on page 1 - 20*).
5. Click **Advanced Settings** (button) ③ (*Figure 1 - 11 on page 1 - 20*).


To access the *ATI Catalyst Control Center* (See *Appendix B* for detailed information):

1. Click **Advanced Settings** (button) ③ (*Figure 1 - 11 on page 1 - 20*).
2. Click **ATI Catalyst Control Center** (tab) ④ (*Figure 1 - 11 on page 1 - 20*).
3. Click **ATI Catalyst Control Center** (button) ⑤ (*Figure 1 - 11 on page 1 - 20*) to access the control panel.
4. You can select **Basic** or **Advanced** options on the first run of the control panel (you can select **Basic** or **Advanced** views from the **View** menu at any time).

Quick Start Guide

Display Devices & Options

Besides the built-in LCD, you can also use an **external VGA monitor** (CRT)/**external Flat Panel Display** as your display device.

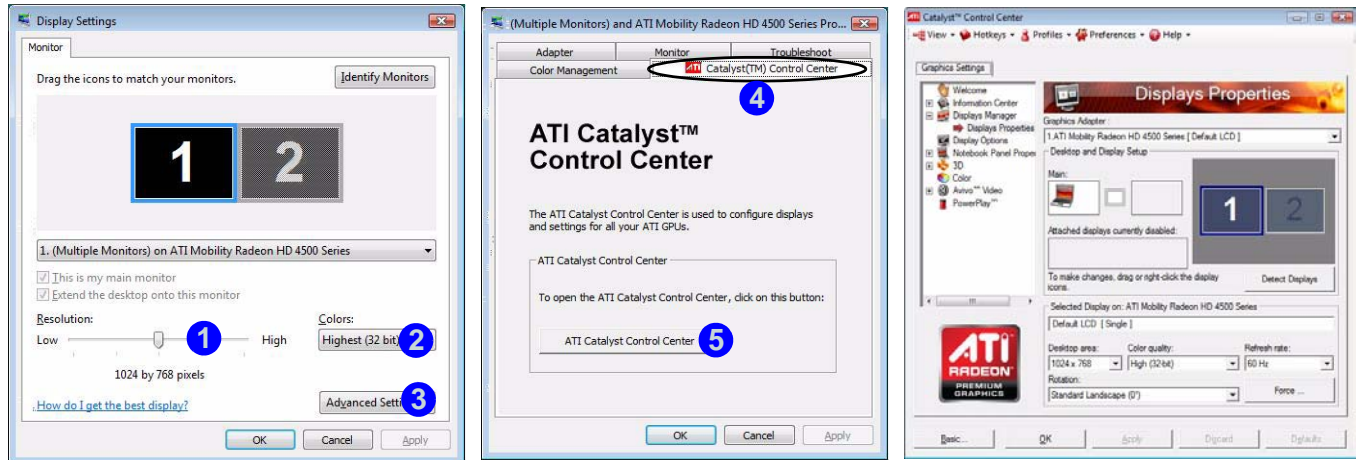

Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.


Figure 1 - 11 - Display Settings & ATI Controls

Power Options

The **Power Options** (**Hardware and Sound** menu) control panel icon in *Windows* (see page *1 - 17*) allows you to configure power management features for your computer. You can conserve power by means of **power plans** and configure the options for the **power button**, **sleep button**, **computer lid (when closed)**, **display** and **sleep mode** from the left menu. Note that the **Power saver** plan may have an affect on computer performance.

Click to select one of the existing plans, or click *Create a power plan* in the left menu and select the options to create a new plan. Click *Change Plan Settings* and click *Change advanced power settings* to access further configuration options.

Pay attention to the instructions on battery care in *“Energy Star Power Saving” on page 3 - 10*.

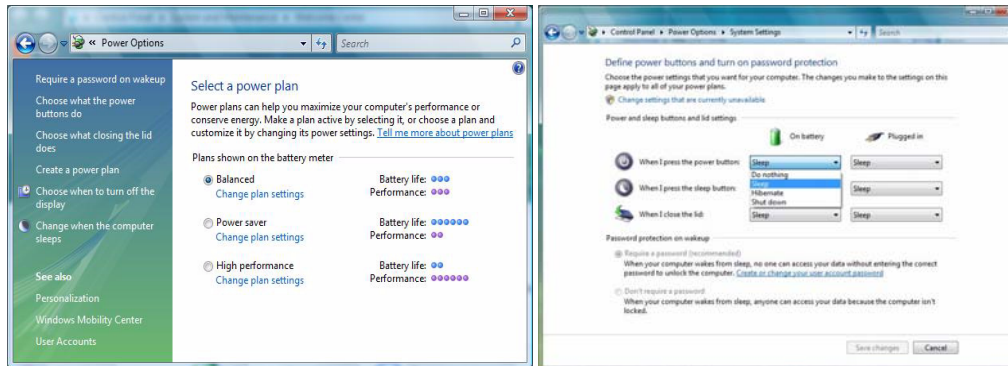

Note: Sleep is the default power saving state in *Windows Vista*

Figure 1 - 12 - Power Options

Chapter 2: Features & Components

Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive
- Optical (CD/DVD) Device
- 7-in-1 Card Reader
- ExpressCard Slot
- TouchPad and Buttons/Mouse
- Audio Features
- Adding a Printer



Power Safety

Before attempting to access any of the internal components of your computer please ensure that the machine is not connected to the AC power, and that the machine is turned off. Also ensure that all peripheral cables, including phone lines, are disconnected from the computer.

Hard Disk Drive

The hard disk drive is used to store your data in the computer. The hard disk can be taken out to accommodate other 2.5" serial (SATA) hard disk drives (see [“Storage” on page C - 3](#)) with a height of 9.5 mm.

The hard disk is accessible from the bottom of your computer as seen below. For further details see [“Upgrading the Hard Disk Drive” on page 6 - 4](#).

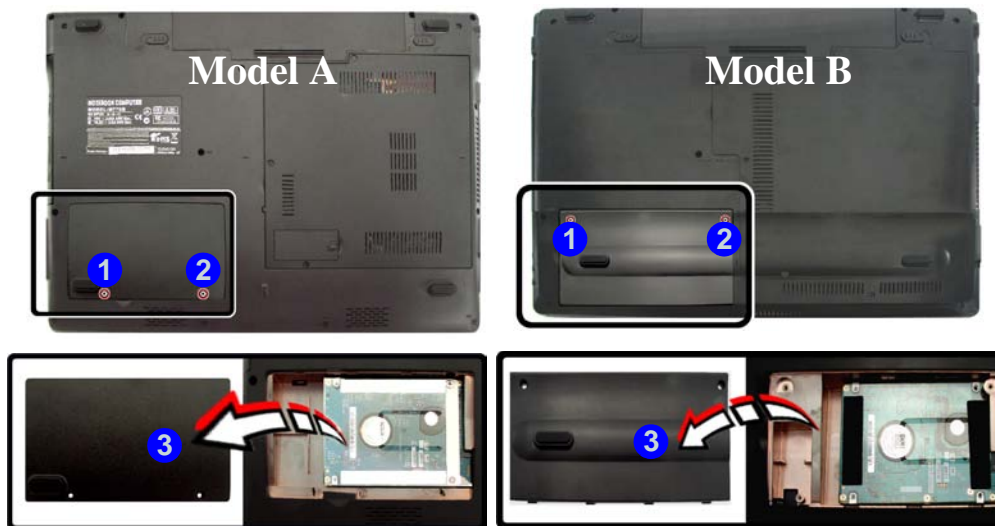


Figure 2 - 1
Hard Disk Location

Optical (CD/DVD) Device

There is a bay for a 5.25" optical (CD/DVD) device (12.7mm height). The actual device will depend on the module you purchased (see *“Storage” on page C - 3*). The optical device is usually labeled **“Drive D:”** and may be used as a boot device if properly set in the **BIOS** (see *“Boot Menu” on page 5 - 12*).

Loading Discs

To insert a CD/DVD, press the open button ❶ and carefully place a CD/DVD onto the disc tray with label-side facing up (use just enough force for the disc to click onto the tray’s spindle). Gently push the CD/DVD tray in until its lock “clicks” and you are ready to start. The busy indicator ❷ will light up while data is being accessed, or while an audio/video CD, or DVD, is playing. If power is unexpectedly interrupted, insert an object such as a straightened paper clip into the emergency eject hole ❸ to open the tray.



Sound Volume Adjustment

How high the sound volume can be set depends on the setting of the volume control within **Windows**. Click the **Volume** icon on the taskbar to check the setting (see *“Audio Features” on page 2 - 12*).

Figure 2 - 2
Optical Device



CD Emergency Eject

If you need to manually eject a CD (e.g. due to an unexpected power interruption) you may push the end of a straightened paper clip into the emergency eject hole. However please do NOT use a sharpened pencil or similar object that may break and become lodged in the hole.

Disk Eject Warning

Don't try to remove a CD/DVD while the system is accessing it. This may cause the system to "crash".

Handling CDs or DVDs

Proper handling of your CDs/DVDs will prevent them from being damaged. Please follow the advice below to make sure that the data stored on your CDs/DVDs can be accessed.

Note the following:

- Hold the CD or DVD by the edges; do not touch the surface of the disc.
- Use a clean, soft, dry cloth to remove dust or fingerprints.
- Do not write on the surface with a pen.
- Do not attach paper or other materials to the surface of the disc.
- Do not store or place the CD or DVD in high-temperature areas.
- Do not use benzene, thinner, or other cleaners to clean the CD or DVD.
- Do not bend the CD or DVD.
- Do not drop or subject the CD or DVD to shock.

DVD Regional Codes

To change the DVD regional codes see *“Changing DVD Regional Codes” on page 1 - 15.*

DVD Regional Coding	
Region	Geographical Location
1	USA, Canada
2	Western Europe, Japan, South Africa, Middle East & Egypt
3	South-East Asia, Taiwan, South Korea, The Philippines, Indonesia, Hong Kong
4	South & Central America, Mexico, Australia, New Zealand
5	N Korea, Russia, Eastern Europe, India & Most of Africa
6	China

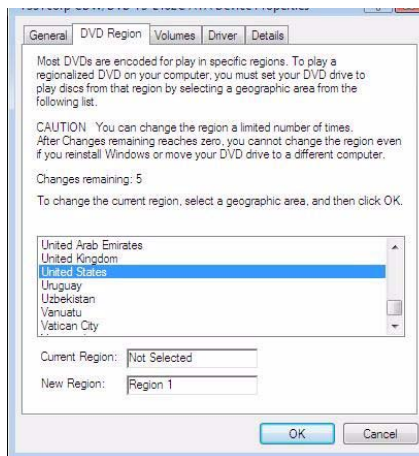


Table 2 - 1
DVD Regional Coding



Card Reader Cover

Make sure you keep the rubber cover provided in the card reader when not in use. This will help prevent foreign objects and/or dust getting in to the card reader.

7-in-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the Card Reader driver (see *“CardReader” on page 4 - 6*).

- MMC (MultiMedia Card)
- SD (Secure Digital)
- MS (Memory Stick)
- MS Pro (Memory Stick Pro)
- MS Duo (requires PC adapter*)
- Mini SD (requires PC adapter*)
- RS MMC (requires PC adapter*)

***Note:** The PC adapters are usually supplied with these cards.

Figure 2 - 3
Left View

1. Card Reader



ExpressCard Slot

The computer is equipped with an **ExpressCard/34/54** slot that reads Express Card/34 and ExpressCard/54 formats. ExpressCards are the successors to PCMCIA (PC Cards). Make sure you install the Card Reader driver (see *“CardReader” on page 4 - 6*).

ExpressCard/54 is used for applications which require a larger interface slot, e.g. CompactFlash card reader. The number denotes the card width; 54mm for the Express Card/54 and 34mm for the ExpressCard/34.



Inserting and Removing ExpressCards

- Align the ExpressCard with the slot and push it in until it locks into place (as pictured in the generic figure below).
- To remove an ExpressCard, simply press the card to eject it.



ExpressCard Slot Cover

Make sure you keep the rubber cover provided in the ExpressCard slot when not in use. This will help prevent foreign objects and/or dust getting in to the ExpressCard Slot.

Figure 2 - 4
Left View

1. Express Card Slot

Figure 2 - 5
**Inserting &
Removing Express
Cards**



Mouse Driver

If you are using an external mouse your operating system may be able to auto-configure your mouse during its installation or only enable its basic functions. Be sure to check the device's user documentation for details.

TouchPad and Buttons/Mouse

The TouchPad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The TouchPad buttons function in much the same way as a two-button mouse.


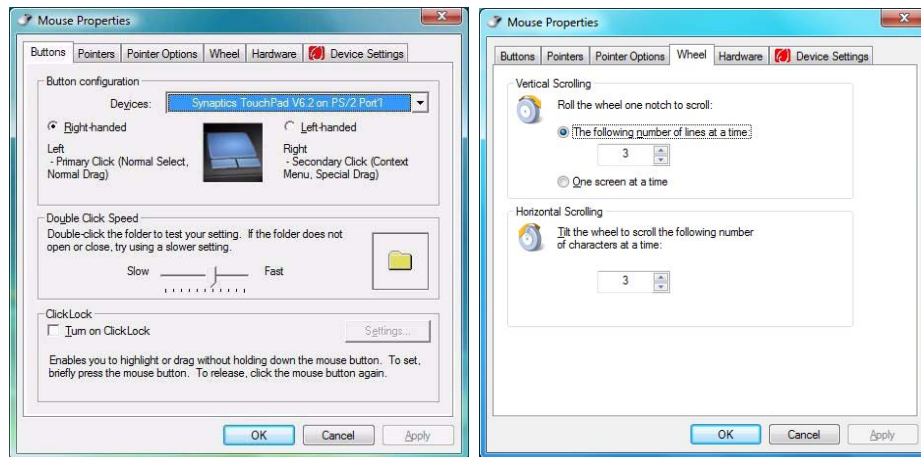
Once you have installed the TouchPad driver (see *“TouchPad” on page 4 - 6*) you can configure the functions by double-clicking the TouchPad driver icon  on the **taskbar**. You may then configure the TouchPad tapping, buttons, scrolling, pointer motion and sensitivity options to your preferences. You will find further information at www.synaptics.com.

Figure 2 - 6
Mouse Properties





Gestures and Device Settings

The Synaptics Gestures Suite application allows you to use a specific gesture (action) on the surface of the TouchPad to perform specific actions to manipulate documents, objects and applications.

You can configure the settings from the Device Settings tab in **Mouse Properties**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Mouse (Hardware and Sound)**.
3. Click **Device Settings** (tab) and click **Settings**.
4. Use the menu tree on the left to access the user configurable settings.

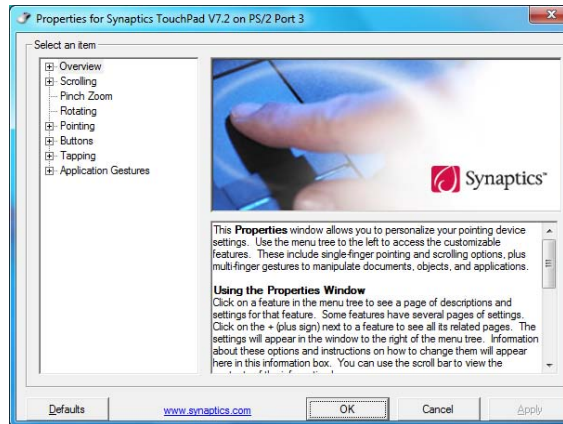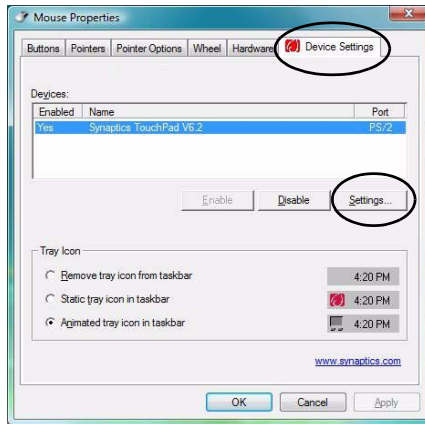

Show Video

You can get a clearer view of the gestures involved by clicking the **Show Video** option for each gesture item.

Select the gesture (**Pinch Zoom**, **Rotating**, **Three Fingers Down** and **Three Finger Flick**) in the **Device Settings > Settings** left tree menu and click the **Show Video** button to see the demonstration video.

For more details on any of the gestures see the **help** in the lower part of the right menu window.

Figure 2 - 7
Mouse Properties - Device Settings

Scrolling

The Two-Finger scrolling feature works in most scrollable windows and allows you to scroll horizontally and vertically. Place two fingers, slightly separated, on the TouchPad surface and slide both fingers in the direction required (in a straight continuous motion).

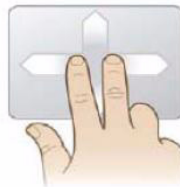


Figure 2 - 8
Scrolling Gesture

Zooming

The Pinch Zoom gesture can be used to perform the same function as a scroll wheel in **Windows** applications that support CTRL + scroll wheel zoom functionality. Place two fingers on the TouchPad (for best results use the tips of the fingers) and slide them apart to zoom in, or closer together to zoom out.



Figure 2 - 9
Zooming Gesture

Rotating

Use the Pivot Rotate gesture to rotate objects (e.g. photos) in 90 degree increments. Place a finger down on the left “target” zone and keep it stationary. Place another finger near the middle of the TouchPad and slide it in a circular motion around the stationary finger (clockwise or counterclockwise) to rotate the object.



Figure 2 - 10
Rotating Gesture

Three Finger-Flick/Three Fingers Down (Press)

The Three Finger-Flick gesture may be used to enhance navigation with a variety of applications such as browsing the Internet or scrolling through a photo viewer. The Three Fingers Down gesture may be used to launch user-selectable applications.

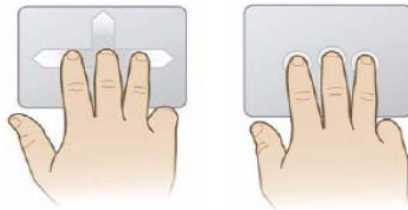


Figure 2 - 11
**Flick/Press
Gesture**

Sound Volume Adjustment

The sound volume level is set using the volume control within **Windows** (and the volume function keys on the computer). Click the volume icon in the taskbar to check the setting.





Figure 2 - 12
Realtek Audio Manager

Audio Features

You can configure the audio options on your computer from the **Sound** control panel in **Windows**, or from the **Realtek HD Audio Manager** icon in the taskbar/control panel (right-click the taskbar icon bring up an audio menu). The volume may also be adjusted by means of the **Fn + F5/F6** key combination.



Right-click the icon to access the menu above.

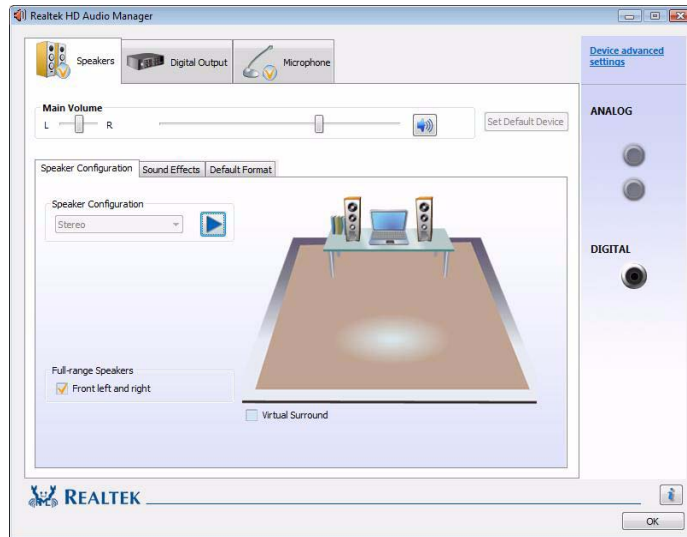

Adding a Printer

The most commonly used peripheral is a printer. The following conventions will help you to add a printer; however it is always best to refer to the printer manual for specific instructions and configuration options.

USB Printer

Most current printers have a USB interface connection. You may use any one of the ports to connect the printer.

Install Instructions:

1. Set up the printer according to its instructions (unpacking, paper tray, toner/ink cartridge etc.).
2. Turn ON the computer.
3. Turn ON the printer.
4. Connect the printer's USB cable to one of the USB ports on the computer.
5. **Windows** will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Parallel Printer

This is still a very common type of printer. The install instructions are in the sidebar, however you will need to purchase a parallel to USB converter.



Parallel Printer

After setting up the printer attach the parallel cable to the printer.

Connect the printer's parallel cable to the Parallel to USB converter, and then plug the converter into the USB port.

Turn ON the printer, then turn ON the computer.

Windows will identify the printer and either load one of its own drivers or ask you to supply one. Follow the on-screen instructions.

Chapter 3: Power Management

Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the monitor and hard disk drive) or the whole system. This chapter covers:

- The Power Sources
- Turning on the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Energy Star Power Saving
- Battery Information

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.




OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.

(**Note:** All pictures used on the following pages are from the **Windows Vista** OS.)



Silent Mode

Use the  key to toggle **Silent Mode** to reduce fan noise and save power consumption. Note this may reduce computer performance.

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components.

1. Attach the AC/DC adapter to the DC-in jack on the left of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn "On".

Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *"How do I completely discharge the battery?" on page 3 - 15*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *"Energy Star Power Saving" on page 3 - 10*.

Turning on the Computer

Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Sleep/Hibernate hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down). Use **Power Options (Hardware and Sound menu)** control panel in *Windows Vista* to configure this feature.



Forced Off

If the system “hangs”, and the **Ctrl + Alt + Del** key combination doesn’t work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.


Power Button Sleep

Sleep is the default power mode when the power button is pressed for less than 4 seconds. You may configure the options for the power button from the **Power Options (Hardware and Sound menu)** control panel in *Windows Vista* (see your OS’s documentation, or “*Configuring the Power Buttons*” on page 3 - 8 for details).



Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Lock Button Menu** in *Windows Vista*. This will help prevent hard disk or system problems.

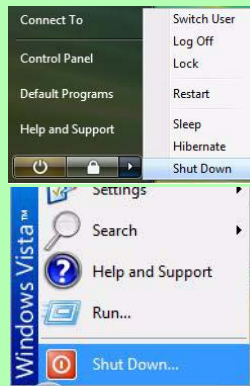

Resuming Operation

See [Table 3 - 1, on page 3 - 9](#) for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.


Figure 3 - 1
**Power Plan
Advanced Settings**

Power Plans

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.


The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click **Change plan settings** and then click **Change advanced power settings** to access further configuration options in **Advanced Settings**.

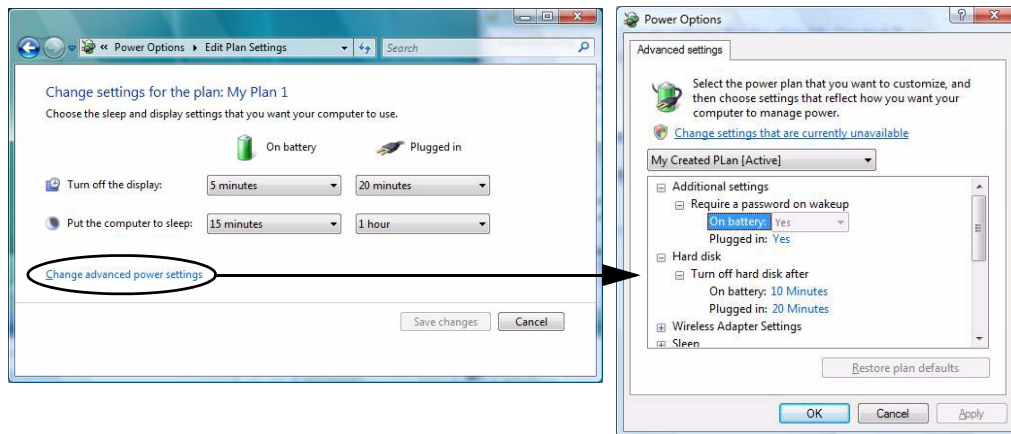

Each **Windows power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

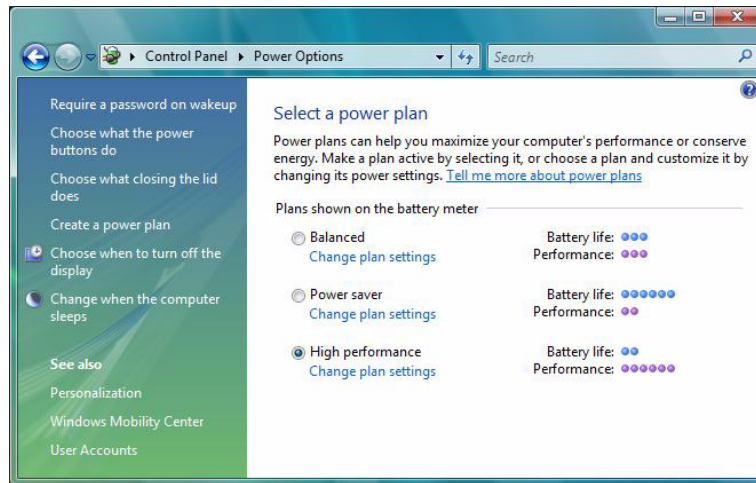



ATI PowerPlay™

PowerPlay™ in the **ATI Catalyst Control Center** (in the Graphics Settings Tree View pane) allows you to set your graphics processor settings for higher performance or longer battery life.

Figure 3 - 2
Power Plans



Power Button

The **Power Button**  in the Start Menu (in Classic View use the Shut Down button ) can be used to send the computer into a power-saving state.

Sleep Mode & Mobile PC Battery

A mobile PC in **Sleep** uses very little battery power.

After an extended period of time the computer will save any open documents and applications to hard disk.

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. **Sleep** is the default power-saving state in *Windows Vista*.

Earlier versions of *Windows* used Stand By and Hibernate as system power-saving states. *Windows Vista* combines the features of Stand By and Hibernate into the default **Sleep** power-saving state.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery.

Shut Down

You should **shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **shut down** takes longer than from **Sleep** or **Hibernate**.



Figure 3 - 3
Lock Button Menu

Password Protection


It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking **Require a password on wakeup** in the left menu, and selecting the options (click **Change settings that are currently unavailable**).

Figure 3 - 4
Power Options
Define Power
Buttons


Configuring the Power Buttons


The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state.

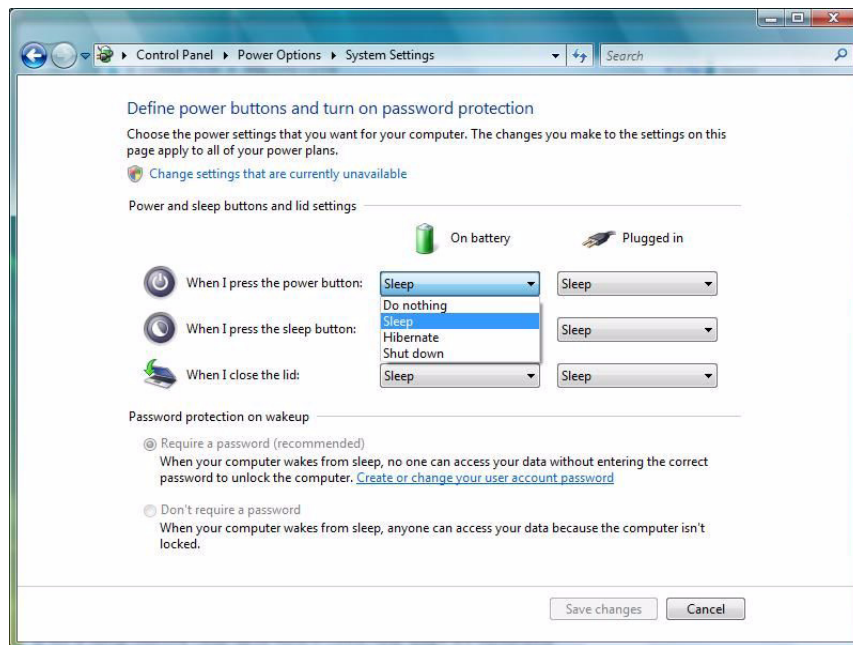

Resuming Operation


You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F4** key combo).

Power Status	Icon  Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad



Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).




Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.

Table 3 - 1
Resuming
Operation

Energy Star Power Saving

This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity. If you want to enable Energy Star power saving then follow these instructions:

1. Right-click the taskbar icon .
2. Select **Power Conservation Modes**.
3. Select **Energy Star** to use the Energy Star power management and override other power saving settings.





Figure 3 - 5
Energy Star Menu

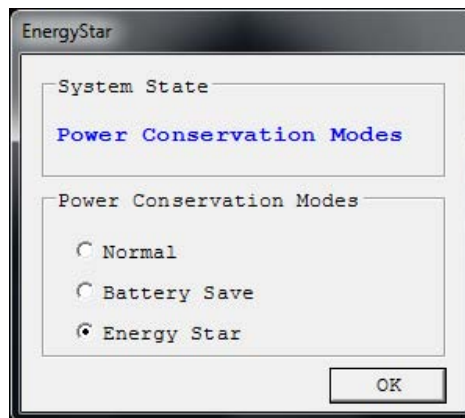


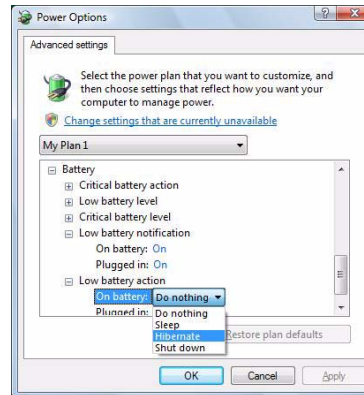
Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from **power plan Advanced Settings** (see *Figure 3 - 1 on page 3 - 4*).

Click the battery icon  in the taskbar to see the current battery level and charge status.



Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

Figure 3 - 6
**Battery Icon
(Taskbar) & Battery
Advanced Settings**




Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

Figure 3 - 7
Windows Mobility Center

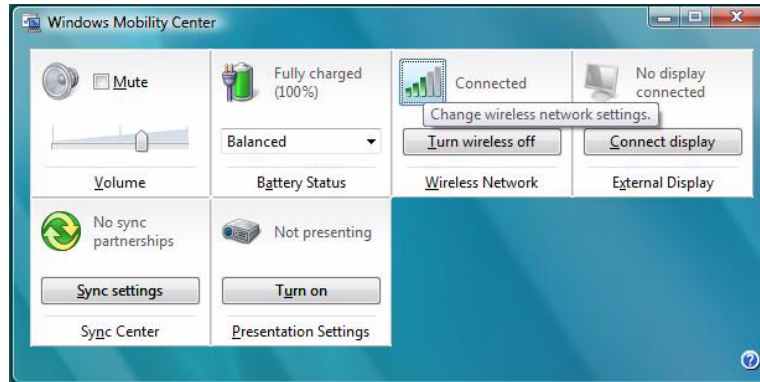

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days.**

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see *“Removing the Battery” on page 6 - 3*.

New Battery

Always completely discharge, then fully charge, a new battery (see *“Battery FAQ” on page 3 - 15* for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. (Refer to *“LED Indicators” on page 1 - 9* for information on the battery charge status, and to *“Energy Star Power Saving” on page 3 - 10* for more information on how to maintain and properly recharge the battery pack.)



Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances
- DO NOT expose the battery to fire or high temperatures, it may explode
- DO NOT connect the metal terminals (+, -) to each other



Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your service center. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create a power plan** for discharging the battery and set all the options to **Never**.
3. Click **Change plan settings** (after saving it) and click **Change advanced power settings**.


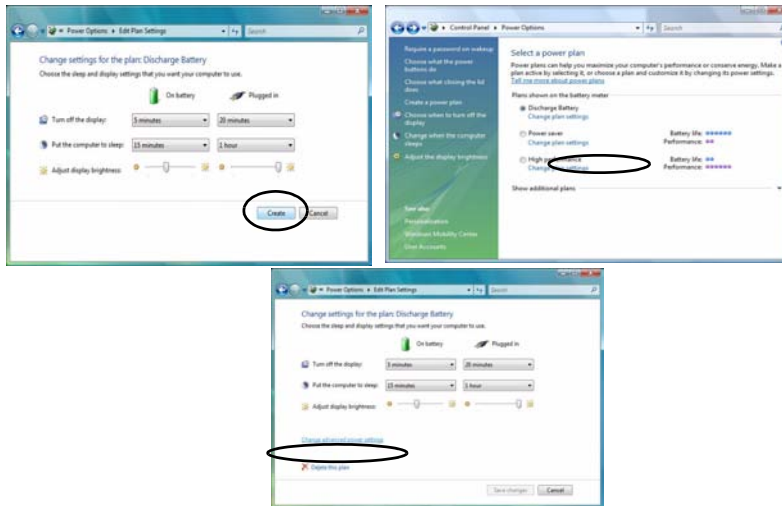


Figure 3 - 8
Power Plan Create

4. Scroll down to **Battery** and click **+** to expand the battery options.
5. Choose the options below (click **Yes** if a warning appears):

Figure 3 - 9
**Power Options
Advanced Settings -
Battery**

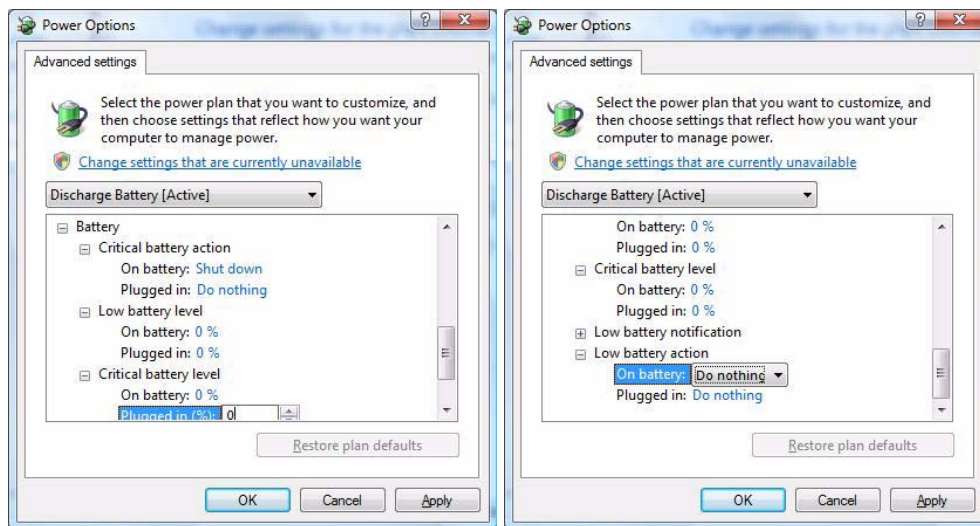

- Low battery levels = 0%
- Critical battery Levels = 0%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut down
- Critical battery action (Plugged in) = Do Nothing

How do I fully charge the battery?

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?

Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities.

What to Install

The *Device Drivers & Utilities + User's Manual* disc contains the drivers and utilities necessary for the proper operation of the computer.

Table 4 - 1, on page 4 - 3 lists what you need to install and **it is very important that the drivers are installed in the order indicated** (see *“Windows 7 Information” on page D - 1* for Windows 7 information).

Module Driver Installation

The procedures for installing drivers for the **Wireless LAN, PC Camera, 3.75G/HSPA** and **Fingerprint** modules are provided in *“Modules & Options” on page 7 - 1*.

Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Install Drivers/Option Drivers** (button).

If you wish to install the drivers manually see overleaf for the driver path information.

4



Figure 4 - 1 - Drivers Installer Screen 1

1. Check the driver installation order from [Table 4 - 1, on page 4 - 3](#) (the drivers must be installed in this order) which is the same as that listed in the **Drivers Installer** menu below.
2. Click to select the driver you wish to install, after installing each driver it will become grayed out. If you need to reinstall any driver, click the **Unlock** button (you should uninstall the driver first).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.



Figure 4 - 2 - Drivers Installer Screen 2

Driver - <i>Windows Vista</i> with Service Pack 2	Page
<i>Chipset</i>	<i>Page 4 - 5</i>
<i>Video</i>	<i>Page 4 - 5</i>
<i>Audio</i>	<i>Page 4 - 6</i>
<i>Modem</i>	<i>Page 4 - 6</i>
<i>LAN</i>	<i>Page 4 - 6</i>
<i>TouchPad</i>	<i>Page 4 - 6</i>
<i>CardReader</i>	<i>Page 4 - 6</i>
<i>Hot Key</i>	<i>Page 4 - 6</i>
<i>Wireless LAN Module</i>	<i>Page 7 - 7</i>
<i>MEI Driver</i>	<i>Page 4 - 7</i>
<i>3.75G/HSPA Module</i>	<i>Page 7 - 25</i>
<i>Fingerprint Reader Module</i>	<i>Page 7 - 43</i>
<i>PC Camera Module</i>	<i>Page 7 - 49</i>

Table 4 - 1 - Driver Installation

Manual Driver Installation

Click *Browse CD* (button) in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft). See “*Windows Update*” on page 4 - 7 for instructions.



Windows Vista Service Pack 2

Make sure you install **Windows Vista Service Pack 2** (or a Windows Vista version which includes Service Pack 2) **before installing any drivers**. Go to the Microsoft website for download details, or contact your service center.

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver. To do this go to the **Control Panel** in the *Windows OS* and double-click the **Programs and Features** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Device Manager (Hardware and Sound > Device Manager)**.
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click “+” to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

User Account Control (Win Vista)

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue** or **Allow**, and follow the installation procedure as directed.

Windows Security Message

If you receive a *Windows* security message as part of the driver installation process. Just click “*Install this driver software anyway*” or “*Install*” to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of *Windows* you are currently using. All the drivers provided will have already received certification for *Windows*.

New Hardware Found

If you see the message “**New Hardware Found**” during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.



Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual disc* and click **Install Drivers** (button).

Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

Video

1. Click **2.Install Video Driver > Yes**.
2. Click **Next > Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish > Yes** to restart the computer.

Note: After installing the video driver go to the **Display Settings** control panel to adjust the video settings to the highest resolution (see “*Video Features*” on *page 1 - 19*).

Audio

1. Click **3.Install Audio Driver > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.

Modem

1. Click **4.Install Modem Driver > Yes**.
2. Click **OK**.
3. The modem is ready for dial-up configuration.



Modem Country Selection

Go to the **Phone and Modem Options** control panel (**Hardware and Sound**) and make sure the modem country selection is appropriate for you.

LAN

1. Click **5.Install LAN Driver > Yes**.
2. Click **Install**.
3. Click **Finish**.
4. The network settings can now be configured.

TouchPad

1. Click **6.Install Touchpad Driver > Yes**.
2. Click **Next**.
3. Click the button to accept the license, and then click **Next**.
4. Click **Finish > Restart Now** to restart the computer.

CardReader

1. Click **7.Install CardReader Driver > Yes**.
2. Click **Install**.
3. Click **Finish**.

Hot Key

1. Click **8.Install Hotkey Driver > Yes**.
2. Click **Next > Install**.
3. Click **Finish > Finish** to restart the computer.

It is recommended you now install the **MEI Drive** (see over).

MEI Driver

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install MEI Driver > Yes**.
4. Click **Next > Yes > Next > Next**.
5. Click **Finish**.

Windows Experience Index

After the drivers are installed follow this procedure to ensure an accurate rating from the *Windows Experience Index*:

1. Click **Start**, and click **Control Panel**.
2. Double-click **Performance Information and Tools (System and Maintenance)**.
3. Click **"Update my score"**.
4. The computer will take a few minutes to assess the system performance.
5. Close the control panel.



Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update** make sure you are **connected to the internet**:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Click **Check for updates (Security)**, or double-click **Security Center** and click **Windows Update**.
3. Double-click **Check for updates (button)**.
4. The computer will now check for updates (you need to be connected to the internet).
5. Click **Install now** (button) to install the updates.

Optional Drivers

See the pages indicated for the driver installation procedures for any modules included in your purchase option.



Figure 4 - 3 - Drivers Installer - Option Drivers Menu

Bluetooth Module

Note: The operating system is the default setting for **Bluetooth** control in **Windows Vista**, and does not require a driver. See *“Bluetooth Module” on page 7 - 2* for configuration instructions.

Wireless LAN Module

See the introduction in *“Wireless LAN Module” on page 7 - 7*, and check the installation procedure.

3.75G/HSPA Module

See the introduction in *“3.75G/HSPA Module” on page 7 - 25*, and check the installation procedure.

Fingerprint Reader Module

See the introduction in *“Fingerprint Reader Module” on page 7 - 43*, and check the installation procedure.

PC Camera Module

See the introduction in *“PC Camera Module” on page 7 - 48*, and check the installation procedure.

Chapter 5: BIOS Utilities

Overview

This chapter gives a brief introduction to the computer's built-in software:

Diagnostics: The **POST** (Power-On Self Test)

Configuration: The *Setup* utility

If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in *Setup*. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your service representative.



BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Setup* and restore the **Setup Defaults** with <F9>.



POST Screen

1. **BIOS** information
2. CPU type
3. Memory status
4. Enter **Setup** prompt appears only during **POST**

Note: The **POST** screen as pictured right is for guideline purposes only. The **POST** screen on your computer may appear slightly different. If you disable the **Boot-time Diagnostic Screen**, the POST screen will not appear.

Figure 5 - 1
POST Screen

The Power-On Self Test (POST)

Each time you turn on the computer, the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run **Setup**.

If there are no problems, the **Setup** prompt will disappear and the system will load the operating system. Once that starts, you can't get into **Setup** without rebooting.

```
Phoenix SecureCore(tm) MB
Copyright 1985-2007 Phoenix Technologies Ltd.
All Rights Reserved
BIOS Revision ***** 1
KBC/EC Firmware Revision *****

CPU = 1 Processors Detected, Cores per Processor = 4 2
Genuine Intel (R) CPU Q820 @ 1.73GHz
1016M System RAM Passed
256KB L2 Cache per Processor Core 3
8192K L3 Cache Detected
System BIOS Shadowed
Video BIOS shadowed
Fixed Disk 0: FUJITSU MH22160BH G2
ATAPI CD-ROM: MATSHIBA-CMB UJ130AS
Mouse initialized
```

Press <F2> to enter SETUP 4

Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized service center as soon as possible.

Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) followed by the prompt:

- Press <F1> to resume
- <F2> to enter Setup

Press **F1** to see if the boot process can continue. It may work, without the correct configuration.

Press **F2** to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.

The Setup Program

The **Phoenix Setup** program tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

Entering Setup

To enter *Setup*, turn on the computer and press **F2** during the **POST**. The prompt (*Press F2 to Enter Setup*) seen on page 5 - 2 is usually present for a few seconds after you turn on the system. If you get a “Keyboard Error”, (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The *Setup* main menu will appear.

Setup Screens

The following pages contain additional advice on **portions** of the *Setup*.

Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to *Setup*.

Instructions on how to navigate each screen are in the box along the bottom of the screen. If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ► next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.



Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

Main Menu

Figure 5 - 2
Main Menu

Phoenix SecureCore(tm) Setup Utility					
Main	Advanced	Security	Boot	Exit	
System Time: [00:54:17] System Date: [08/17/2009] ▶ SATA Port 1 [FUJITSU MH22150BH G] ▶ SATA Port 2 [MATSHITABD-CMB UJ13] ▶ SATA Port 5 [None] System Memory: 628 KB BIOS Revision: ***** KBC/EC Firmware Revision: ***** VGA Card: ***** VBIOS Revision: ***** VBIOS Build Date: *****					Item Specific Help <Tab>, <Shift-Tab>, or <Enter> selects field.
F1	Help	↑↓	Select Item	-/+	Change Values
Esc	Exit	←→	Select Menu	Enter	Select ▶ Sub-Menu
F9	Setup Defaults				
F10	Save and Exit				

System Time & Date (Main Menu)

The hour setting uses the 24-hour system (i.e., 00 = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

SATA Port 1/2/5 (Main Menu)

Pressing **Enter** opens the sub-menu to show the configuration of an HDD/optical device on the computer's SATA Port 1/2/5. Use the **Auto** (Type:) setting to have the items configured automatically for you.

System Memory (Main Menu)

This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

BIOS Revision/KBC/EC Firmware Revision (Main Menu)

This item contains information on the current BIOS and firmware versions.

VGA Card/VBIOS Revision/VBIOS Build Date (Main Menu)

This item contains information on the current videos card installed, and on the Video BIOS version.

Advanced Menu

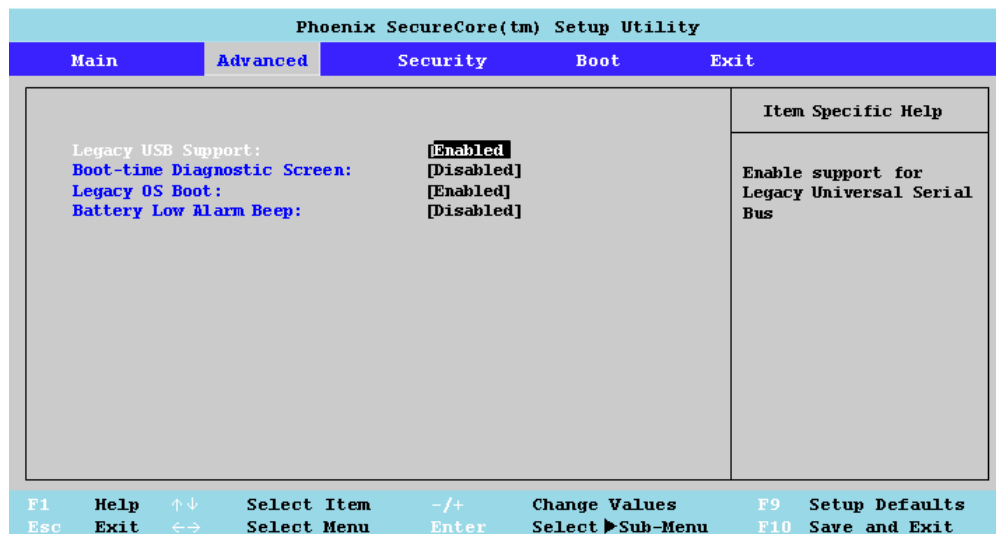


Figure 5 - 3
Advanced Menu

Legacy USB Support (Advanced Menu)

Use this menu item to enable/disable the support for Legacy Universal Serial Bus in non-USB aware operating systems.

Boot-time Diagnostic Screen (Advanced Menu)

Use this menu item to enable/disable the Boot-time Diagnostic Screen or Power-On Self Test (see ***“The Power-On Self Test (POST)” on page 5 - 2***).

Legacy OS Boot: (Advanced Menu)

Enable this item to support only system boot from the Legacy OS (e.g *Windows Vista*). If disabled the system will attempt to boot from the EFI (Extensible Firmware Interface) before the Legacy OS.

Battery Low Alarm Beep (Advanced Menu)

Use this menu item to enable/disable the audible warning when the battery has reached low power status.



Security Menu

The changes you make here affect the access to the **Setup** utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

Figure 5 - 4
Security Menu

Security Menu

Phoenix SecureCore(™) Setup Utility			
Main	Advanced	Security	Boot Exit
Supervisor Password Is: Clear User Password Is: Clear Set Supervisor Password [Enter] Set User Password [Enter] Fixed disk boot sector: [Normal] Password on boot: [Disabled] TPM Support [Disabled]		Item Specific Help Supervisor Password controls access to the setup utility.	

F1	Help	↑↓	Select Item	-/+	Change Values	F9	Setup Defaults
Esc	Exit	←→	Select Menu	Enter	Select ►Sub-Menu	F10	Save and Exit

Set Supervisor Password (Security Menu)

You can set a password for access to the **PhoenixBIOS Setup Utility**. This will not affect access to the computer OS, (only the **PhoenixBIOS Setup Utility**).

Set User Password (Security Menu)

You can set a password for user mode access to the **PhoenixBIOS Setup Utility**. This will not affect access to the computer OS, (only the *Setup* utility) unless you choose to set a **Password on Boot** (see below). Many menu items in the **Phoenix-BIOS Setup Utility** cannot be modified in user mode. You can only set the user password after you have set the supervisor password.

Fixed disk boot sector: (Security Menu)

If you choose **“Write-Protect”** this will protect against viruses being written to the hard disk boot sector (this is not a substitute for installing an anti-virus program - see **“Viruses” on page 8 - 4**).

Password on boot: (Security Menu)

Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If **“Enabled”** is selected, only users who enter a correct password can boot the system (see the warning in the sidebar). The default setting is **“Disabled”**.

Note: To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.




Password Warning

If you set a boot password (Password on boot is “Enabled”), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Boot Menu

Figure 5 - 5
Boot Menu

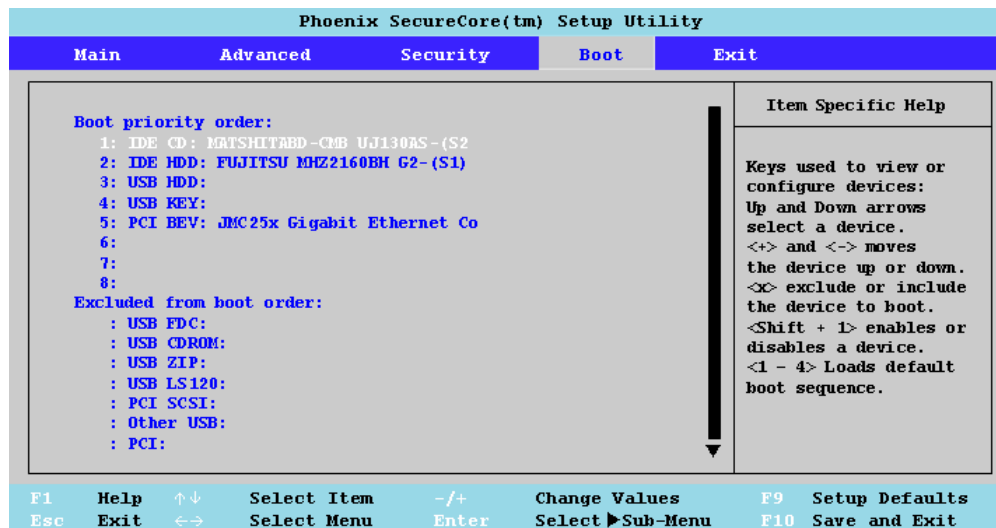

When you turn the computer on it will look for an operating system (e.g. *Windows Vista*) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot priority order**. Item specific help on the right is available to help you move devices up and down the order.

Exit Menu

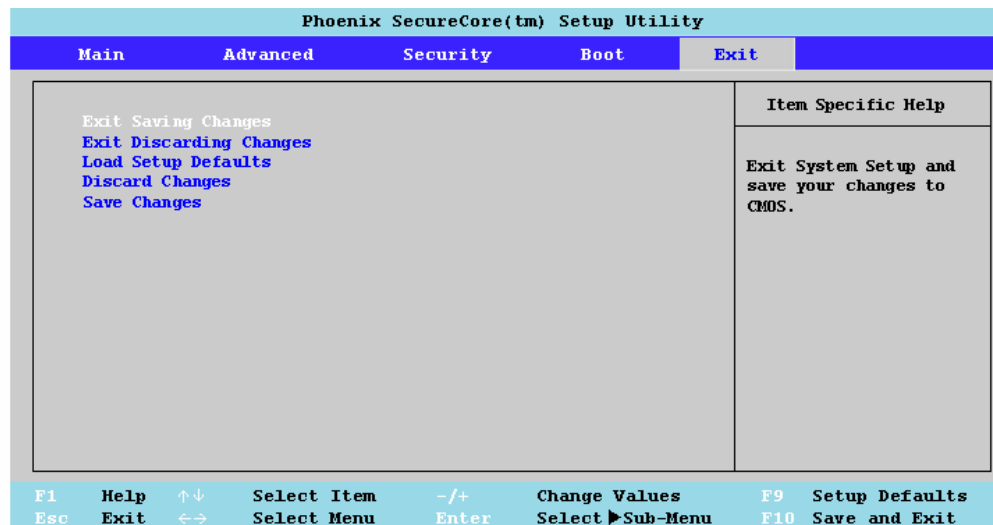


Figure 5 - 6
Exit Menu

Choosing to *Discard Changes*, or *Exit Discarding Changes*, will wipe out any changes you have made to the *Setup*. You can also choose to restore the original *Setup* defaults that will return the *Setup* to its original state, and erase any previous changes you have made in a previous session.

Chapter 6: Upgrading The Computer

Overview

This chapter contains information on upgrading the computer. Follow the steps outlined to make the desired upgrades. If you have any trouble or problems you can contact your service representative for further help. Before you begin you will need:

- A small crosshead or Phillips screwdriver
- A small regular slotted (flathead) screwdriver
- An antistatic wrist strap

Before working with the internal components you will need to wear an antistatic wrist strap to ground yourself because static electricity may damage the components.

The chapter includes:

- Removing the Battery
- Upgrading the Hard Disk Drive
- Upgrading the Optical (CD/DVD) Device
- Upgrading the System Memory (RAM)

Please make sure that you review each procedure before you perform it.



Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

When Not to Upgrade

These procedures involve opening the system's case, adding and sometimes replacing parts.

You should **not** perform any of these upgrades if:

- Your system is still under warranty or a service contract
- You don't have all the necessary equipment
- You're not in the correct environment
- You doubt your abilities

Under any of these conditions, contact your service representative to purchase or replace the component(s).



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before turning the computer on.


Upgrading the Processor

If you want to upgrade your computer by replacing the existing processor with a faster/new one you will need to contact your customer service representative. We recommend that you do not do this yourself, since if it is done incorrectly you may damage the processor or mainboard.

Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery.

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow, and hold it in place.
4. Slide the battery out in the direction of the arrow **3**.

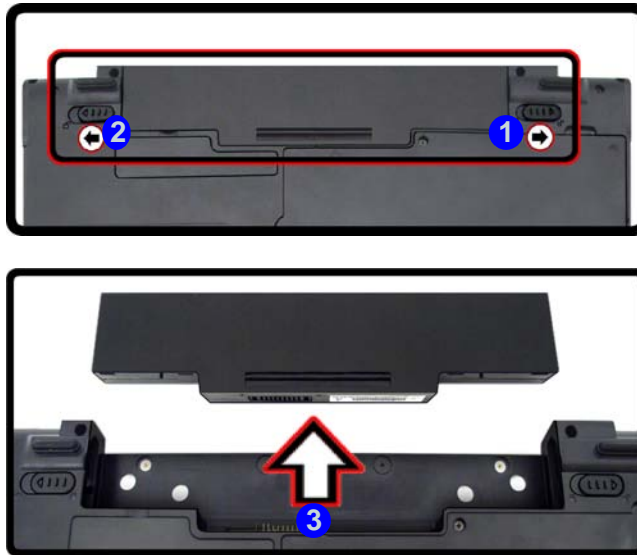

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 6 - 1
Battery Removal



HDD System Warning

New HDD's are blank. Before you begin make sure:
You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

Upgrading the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h) (see *“Storage” on page C - 3*). Follow your operating system's installation instructions, and install all necessary drivers and utilities (see *“Driver Installation” on page 4 - 2*), when setting up a new hard disk.

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the hard disk bay cover and loosen screws **1** & **2**.
3. Remove the hard disk bay cover **3**.

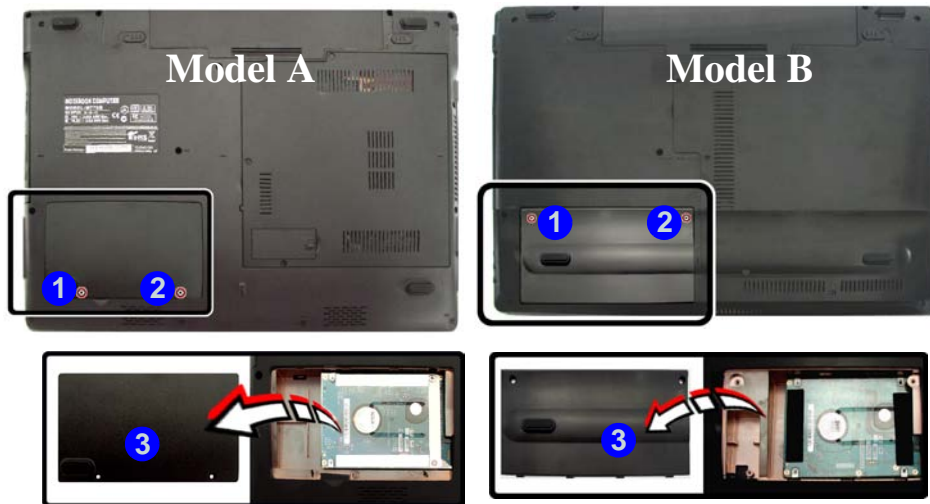


Figure 6 - 2
**Hard Disk Bay
Cover Removal**

4. Grip the tab and slide the hard disk in the direction of arrow 4.
5. Lift the hard disk out of the bay 5.

Model A


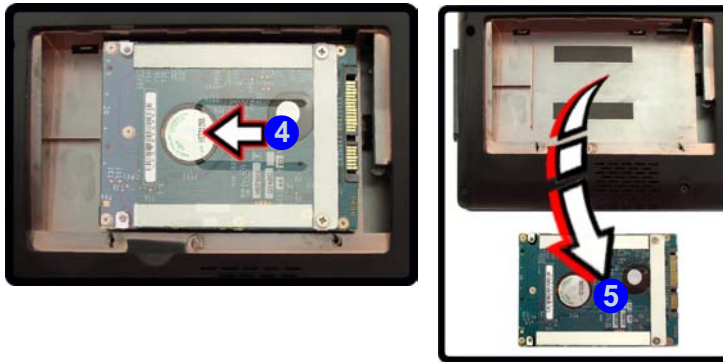


Figure 6 - 3
**HDD Assembly
Removal**



Model B

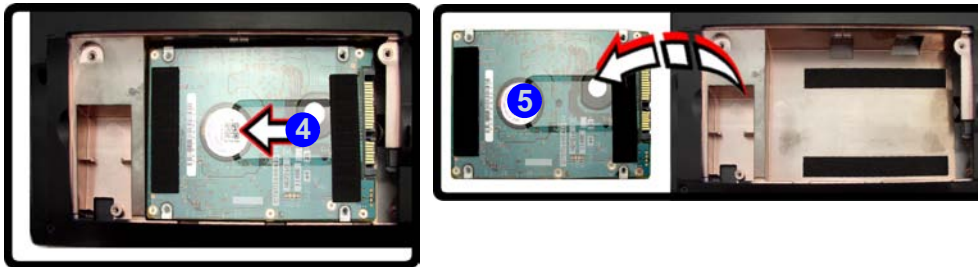

Upgrading The Computer

6. Remove the screw(s) ⑥ (for **Model B** only) and the adhesive cover ⑦.
7. Reverse the process to install a new hard disk drive (do not forget to replace all the screws and covers).

Figure 6 - 4
**HDD Cover
Removal**

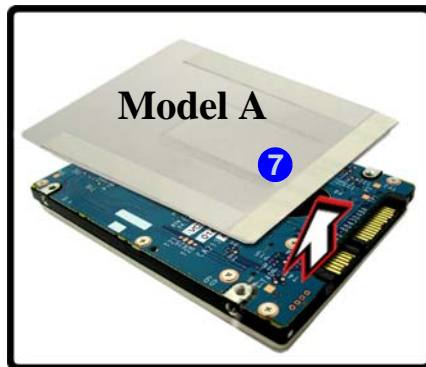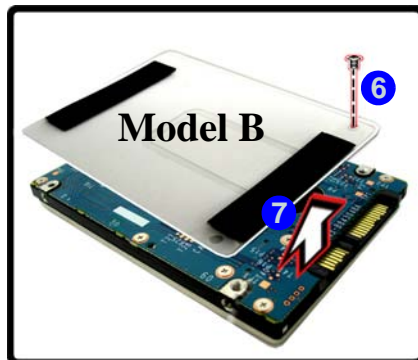

Hard Disk Screws & Cover

The hard disks and covers pictured here may appear slightly different from your model design (these designs are subject to change and upgrade without notice). Pay careful attention to the screws (if included) and cover orientation.

Upgrading the Optical (CD/DVD) Device

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the hard disk bay cover and loosen screws **1** & **2**.
3. Remove the hard disk bay cover **3**.


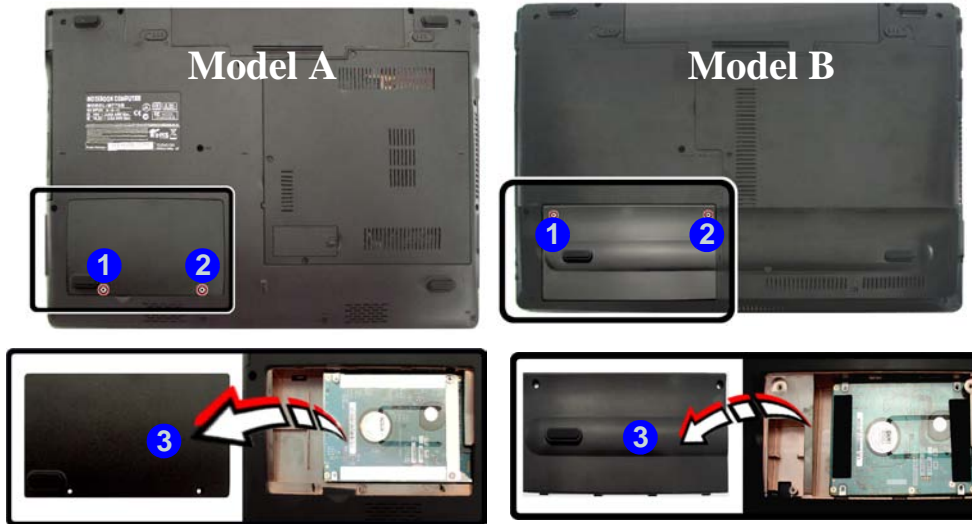


Figure 6 - 5
Removing the HDD
Cover

Upgrading The Computer

4. Remove the screw at point **6**, and use a screwdriver to carefully push out the optical device at point **7**.
5. Reverse the process to install the new device.

Figure 6 - 6
**Removing the
Optical Device**

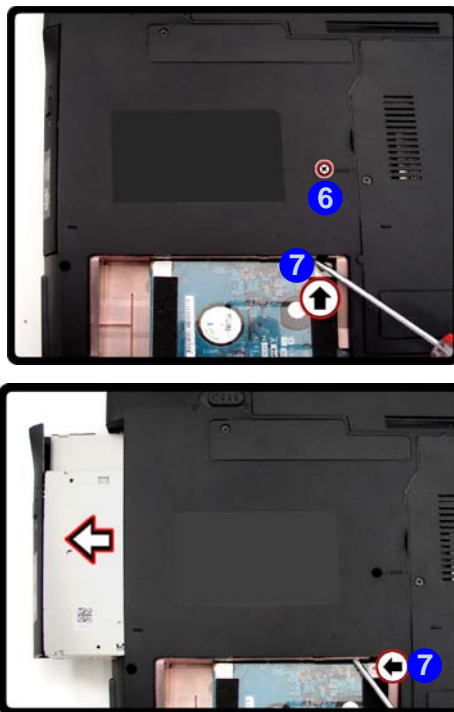

Upgrading the System Memory (RAM)

The computer has **two** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDRIII (DDR3)** type memory modules (see *“Memory” on page C - 2* for details of supported module types).

1. Turn **off** the computer, and turn it over and remove the battery.
2. Locate the RAM & CPU bay cover and remove screws **1** - **3**.



Figure 6 - 7
CPU/RAM Bay
Cover Screws

Upgrading The Computer



Fan Cable & Cover


Make sure you reconnect the fan cable **4** before screwing down the bay cover. Note the information on replacing the RAM & CPU bay cover in **“Cover Pins” on page 6 - 12.**

Contact Warning

Be careful not to touch the metal pins on the RAM module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

Figure 6 - 8
**CPU/RAM Bay
Cover Removed**

3. Carefully (a fan and cable are attached to the under side of the cover) lift up the bay cover.
4. Carefully disconnect the fan cable **4**, and remove the cover **5**.

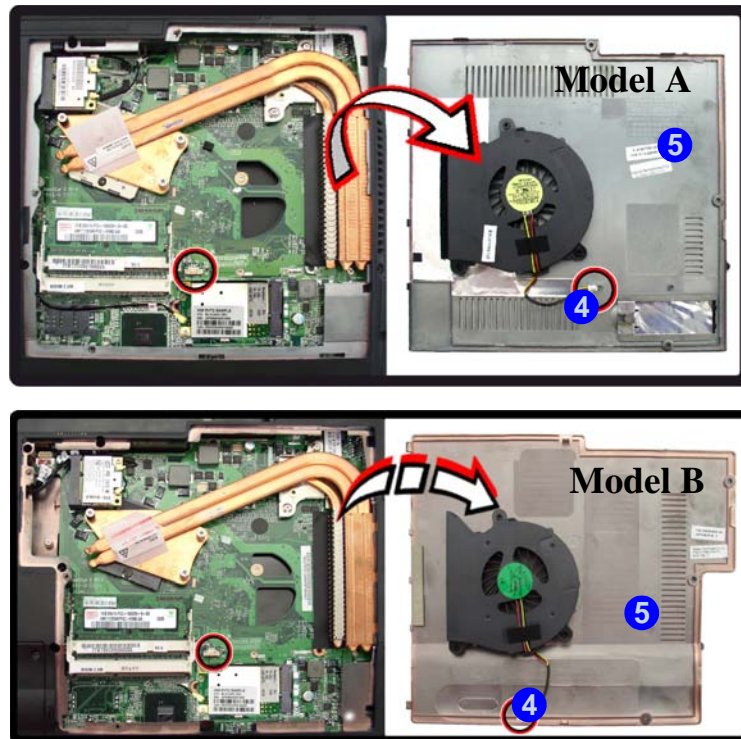

5. Gently pull the two release latches on the sides of the memory socket in the direction indicated by the arrows (6 & 7) in **Figure 6 - 9**.
6. The RAM module will 8 pop-up, and you can remove it.
7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.

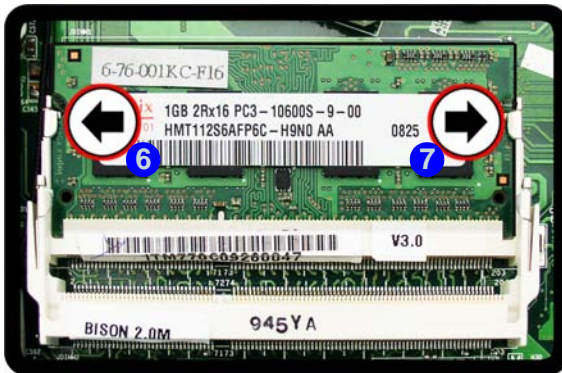


Figure 6 - 9
**RAM Module
Removal**

9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.



Single Memory Module Installation

If your computer has a single memory module, then insert the module into the **Channel 0 (JDIMM1)** socket. In this case this is the **lower memory socket** (the socket closest to the mainboard).

Upgrading The Computer




Cover Pins

Note that there are cover pins need to be aligned with slots in the case to insure a proper cover fit, before screwing down the bay cover (see [Figure 6 - 10](#)).

6

Figure 6 - 10
**Cover Pin
Alignment**

10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover (see sidebar and below for **Model A** Computers) and screws (**make sure you reconnect the fan cable before screwing down the bay cover**).

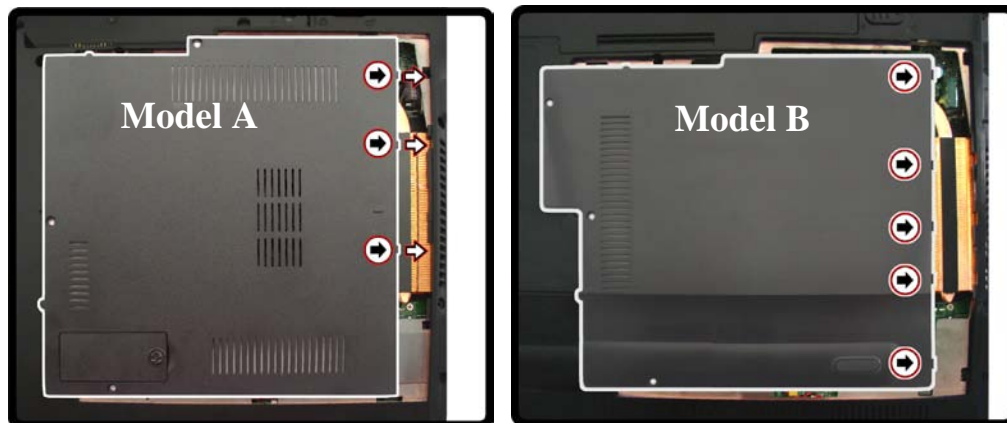

12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Chapter 7: Modules & Options

Overview

This chapter contains information on the following modules, which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

- Bluetooth Module
- Wireless LAN Module
- 3.75G/HSPA Module
- Fingerprint Reader Module
- PC Camera Module



Important Notice - 3.75G/HSPA & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3.75G/HSPA module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3.75G/HSPA module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are **OFF** if you are using the computer aboard aircraft.

Important Notice

If your purchase option includes both **Wireless LAN** and **3.75G/HSPA** modules, then the appropriate antennas will be installed. Note that In order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F12** key combination to toggle power to the Bluetooth module, and check the LED indicator to see if the module is powered on or not (see [Table 1 - 6, on page 1 - 13](#)/[Table 1 - 4, on page 1 - 9](#)).

Bluetooth Module

The operating system's **Bluetooth Devices** control panel is used to configure the Bluetooth settings in *Windows Vista*, and therefore does not require a driver. Use the **Fn + F12** key combination (see [“Function/Hot Key Indicators” on page 1 - 13](#)) to toggle power to the Bluetooth module. When the Bluetooth module is powered on, the LED will be **orange** and the on-screen indicator will briefly be displayed.



Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)**. Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

Bluetooth Module & Resuming From Sleep Mode




The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.


Bluetooth Configuration in Windows Vista

Setup your Bluetooth Device so the Computer Can Find it

1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.
2. A Bluetooth icon  will appear in the taskbar (see sidebar).
3. You can then do any of the following to access the **Bluetooth Devices** control panel.
 - **Double-click** the icon  to access the **Bluetooth Devices** control panel.
 - Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**), and then click **Bluetooth Devices** (**Hardware and Sound**).
 - **Click/Right-click** the icon  and choose an option from the menu.

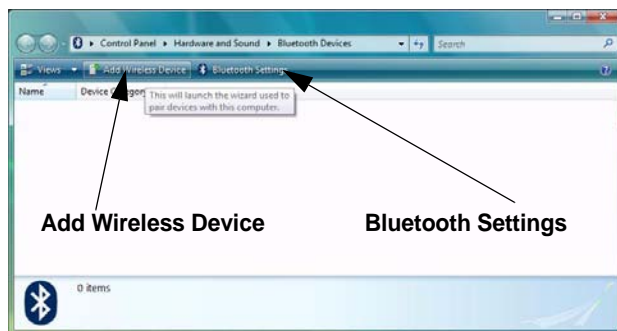

Bluetooth Taskbar Icon

If you cannot see the Bluetooth icon in the taskbar, access the **Bluetooth Devices** control panel. Click **Bluetooth Settings > Options**, and make sure that **Show the Bluetooth icon in the notification area** check box (**Connections**) has a tick inside it.

Note that you will need to check the LED indicator to see if the module is powered on or not.

Figure 7 - 1
Bluetooth Devices & Click Icon Menu



Pairing Options

If a device has been previously connected then the pairing option menu will appear when you attempt subsequent connections. You can choose to have the computer create a pairing code for you, use the device's existing pairing code or you can pair certain devices without using a code.

To Add a Bluetooth Device

1. Access the **Bluetooth Devices** control panel and click **Bluetooth Settings**.
2. Click **Options** (tab), and make sure that **Allow Bluetooth devices to connect to this computer** check box (**Connections**) has a tick inside it, and click **OK**.
3. Click **Add Wireless Device** in the **Bluetooth Devices** control panel.
4. Double-click the device you want to pair with the computer.


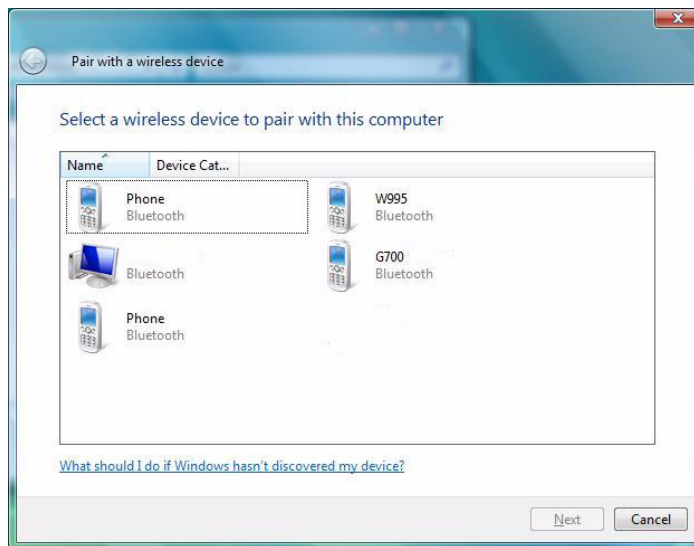


Figure 7 - 2
Pair with a wireless device

5. On first connection the computer will provide you with a pairing code to be entered onto the device.

6. Enter the code into your Bluetooth enabled device and follow any on-screen instructions to complete the pairing.

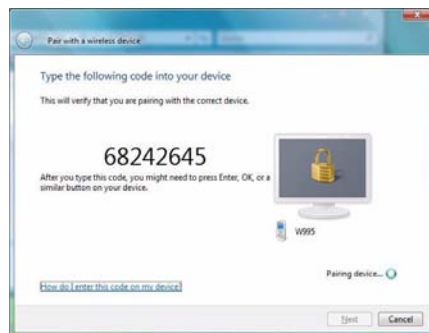

Pairing Codes

The example outlined here shows a connection to a mobile device. Other devices e.g. computers, may have a slightly different connection procedure, and may require you to confirm a pairing code is correct on both devices. Follow the on-screen instructions to complete the pairing.

Figure 7 - 3
Pairing Code Example

7. **Windows** will check to see if any drivers are required to complete the pairing.
8. Follow any on-screen instructions on the computer if device drivers are required to be installed.
9. Click **Close**.

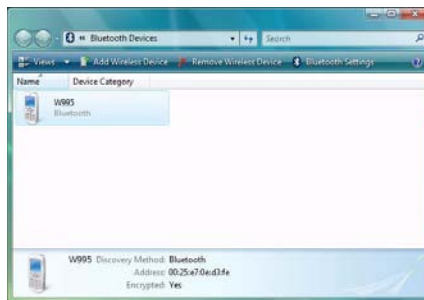


Figure 7 - 4
Pairing Complete & Bluetooth Device Enabled



Bluetooth Help

To get help on Bluetooth configuration and settings, select **Help and Support** from the **Start** menu. Type Bluetooth in the **Search Help** box, and select an item from the returned search results to get more information.

7


Figure 7 - 5
Bluetooth Settings - Options

To Change Settings for the Bluetooth Device

1. Access the **Bluetooth Devices** control panel.
2. Click on the device you want to change and click **Properties** to:
 - Change the **name** of the device (click **General**, type a new name and click **OK**).
 - Enable/Disable a **service** (click **Services**, clear/tick the check box next to the service and click **OK**).


To Make your Computer Discoverable to Bluetooth Devices

1. Access the **Bluetooth Devices** control panel.
2. Click **Bluetooth Settings > Options**, and make sure that **Allow Bluetooth devices to find this computer** check box (**Discovery**) has a tick inside it.
3. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

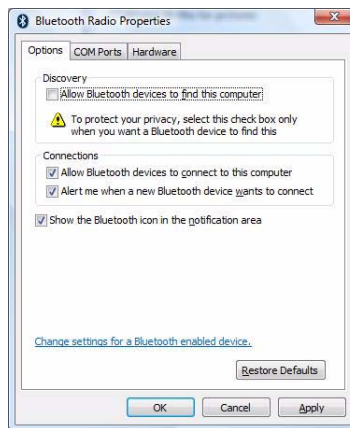

Wireless LAN Module

If you have included an **Intel® Wi-Fi Link 5300 Series**, **Intel® Advanced N Wi-Fi Link 6200**, **Intel® Ultimate N Wi-Fi Link 6300**, **3rd Party 802.11b/g or 3rd Party 802.11b/g/n WLAN** module in your purchase option, make sure that the Wireless LAN module is on before installing the driver.

Use the **Fn + F11** key combination (see *“Function/Hot Key Indicators” on page 1 - 13*) to toggle power to the Wireless LAN module. When the WLAN module is powered on, the  LED will be **green** and the on-screen indicator will briefly be displayed. Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

The standard driver installation procedure for the **Intel® Wi-Fi Link Series** module is outlined overleaf. If you want to include **Intel® My WiFi Technology** as part of the installation procedure, **DO NOT** install the driver as per the instructions overleaf, instead see *“Intel® My WiFi Installation & Configuration” on page 7 - 12*.

If you have installed the standard driver (as per the instructions overleaf) and wish to enable **Intel® My WiFi Technology** at a later point you will need to reinstall the driver (choose **Unlock** from the Drivers Installer menu). Follow the driver installation procedure and choose **Modify** from the menu when the option appears, and then follow the remaining installation instructions in *“Intel® My WiFi Installation & Configuration” on page 7 - 12*.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F11** key combination to toggle power to the WLAN module, and check the indicator to see if the module is powered on or not (see *Table 1 - 6, on page 1 - 13* *Table 1 - 4, on page 1 - 9*).



Intel(R) PROSet/ Wireless

Access the Intel **PROSet Wireless** tools (Statistics and Diagnostic tools) from the Start menu (Start > Programs/All Programs > **Intel PROSet**). These tools provide diagnostic and statistical information only (use the WLAN control in **Windows Vista** to connect to a WLAN access point).

Intel® Wi-Fi Link Series Driver Installation

If you see the message “**Found New Hardware**” click **Cancel** to close the window.

1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click **Next > Next**.
5. Click the button to accept the license and click **Next**.
6. Click **Next > Next > Finish**.



3rd Party 802.11b/g/n or 802.11b/g/n Driver Installation


1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Choose the language you prefer and click **Next**.
5. Click **Next > Install**.
6. Click **Finish**.

Note: The operating system is the default setting for Wireless LAN control in *Windows Vista* (see overleaf).

Connecting to a Wireless Network

Make sure the Wireless LAN module is turned on.

1. Click the taskbar wireless icon , and then click **Connect to a network** (or right-click the icon , and then click **Connect to a network**).

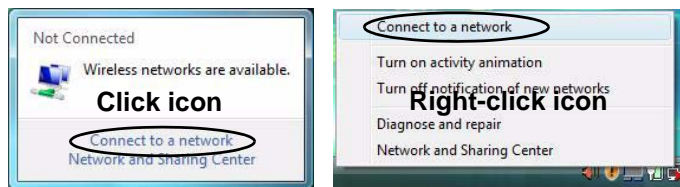

2. In the **Show** list, click to choose **Wireless** from the drop-down menu.
3. A list of currently available networks will appear.

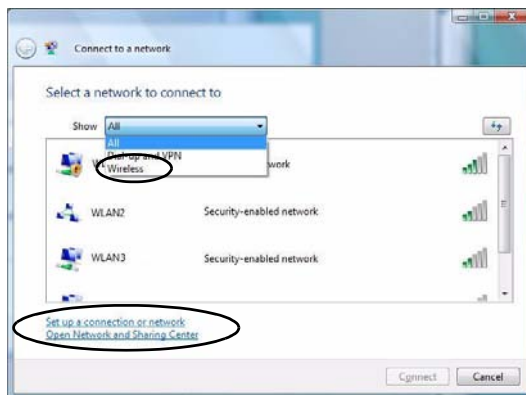


Figure 7 - 6
Taskbar Menus


Network and Sharing Center

You can also use the **Network and Sharing Center** control panel in Windows (**Network and Internet**) to connect to any available wireless networks.

Figure 7 - 7
Connect to a Network

4. Click a network, and then click **Connect**.
5. If you do not see a network you want to connect to, click **Set up a connection or network** (a list of options will appear allowing manual searching, and creating a new network).

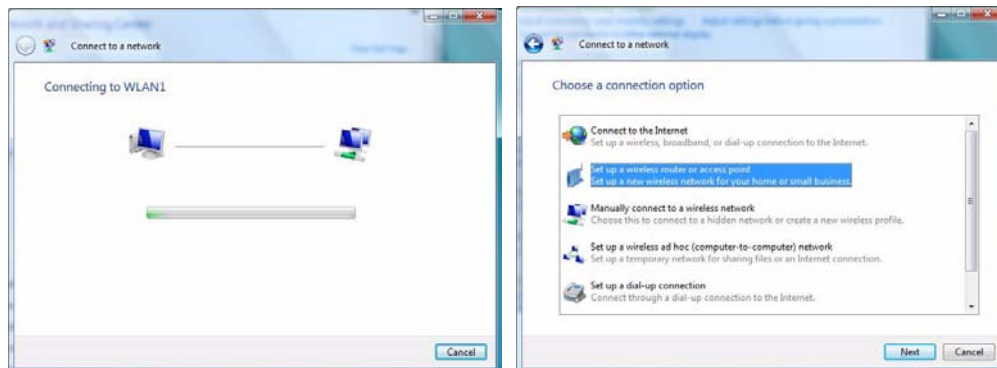

Figure 7 - 8
Connecting




6. Move the cursor over the taskbar icon  to see the connection status (see below).

Figure 7 - 9
Connection Status



7. To disconnect from the wireless network you can click the taskbar wireless icon , and then select **Connect or disconnect** to access the network menu, and click Disconnect (or **right-click** the icon , and then click **Disconnect from**).

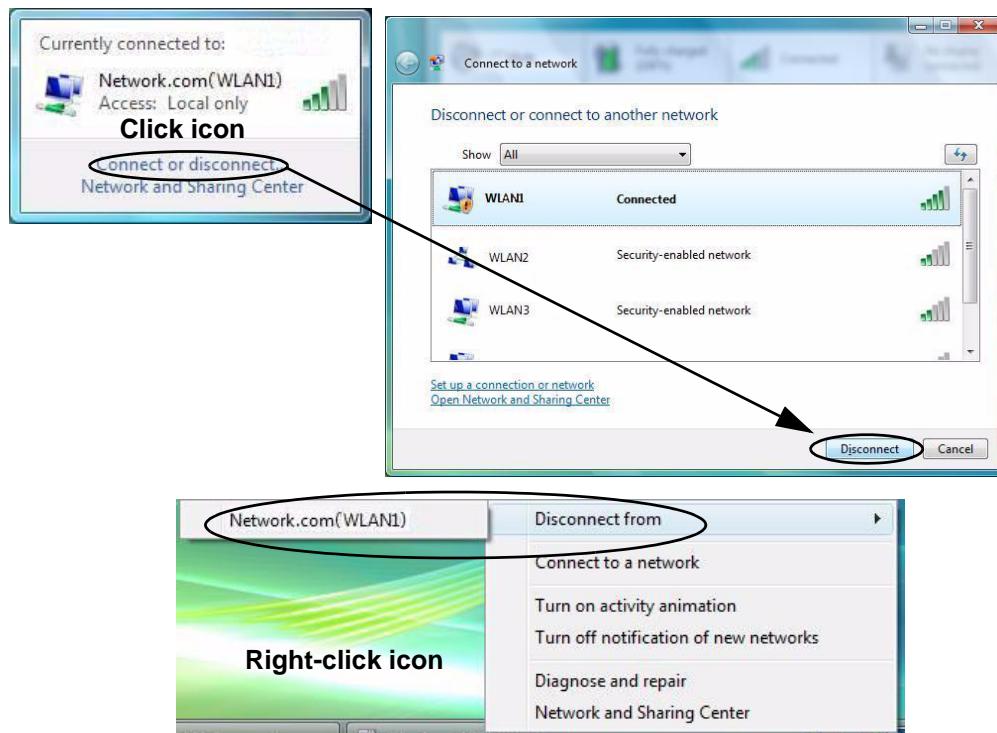

Security Enabled Networks

You should try to make sure that any network you are connecting to is a secure network.


Connecting to unsecure networks may allow unauthorized access to your computer, documents, web-sites and files etc.

7

Figure 7 - 10
Disconnecting



Intel® My WiFi Help

To get help on **Intel® My WiFi** configuration and settings, access the **Intel® My WiFi Utility** from the **Start** menu (Start > Programs/All Programs > Intel PROSet Wireless > Intel My WiFi Technology), or by clicking the taskbar icon . Click the **Help** icon  and select a help topic from the **Contents** menu.


Intel® My WiFi Installation & Configuration

Intel® My WiFi Technology uses your WLAN module to allow you to connect up to eight other WiFi enabled devices (e.g. digital cameras, other computers, cell phones, handheld devices etc.) to your computer (similar to Bluetooth), while still connecting to the Internet through your WiFi wireless connection. Intel® My WiFi Technology offers greater range and speed than other personal area networks, and does not require an access point.

Intel® Wi-Fi Link Series My WiFi Driver Installation

If you see the message “**Found New Hardware**” click **Cancel** to close the window.

1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User’s Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click **Next > Next**.
5. Click the button to accept the license and click **Next > Next**.
6. Click **Custom** (button) and click **Next**.
7. Click **Intel(R) My WiFi Technology** (button) and select “**This feature will be installed on local hard drive.**”

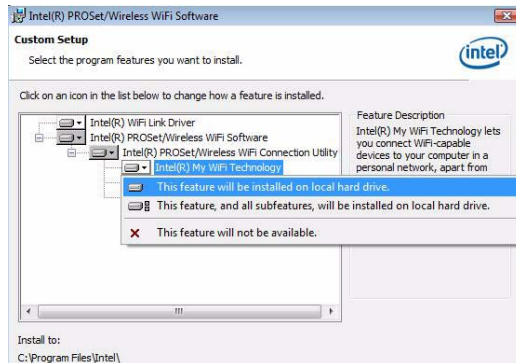

8. Click **Next > Finish**.





Intel(R) PROSet/ Wireless


Access the **Intel PROSet Wireless** tools (Statistics and Diagnostic tools) from the Start menu (Start > Programs/All Programs > **Intel PROSet**). These tools provide diagnostic and statistical information only (use the WLAN control in **Windows Vista** to connect to a WLAN access point).

Figure 7 - 11
Intel(R) PRO Set
Intel(R) My WiFi
Technology
Installation

Intel® My WiFi Configuration

You can configure the My WiFi settings as follows.

1. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start > Programs/All Programs > Intel PROSet Wireless > Intel My WiFi Technology**), or by clicking the taskbar icon .
2. Click **Enable**  (on the first run of the program there will be no connected devices listed).

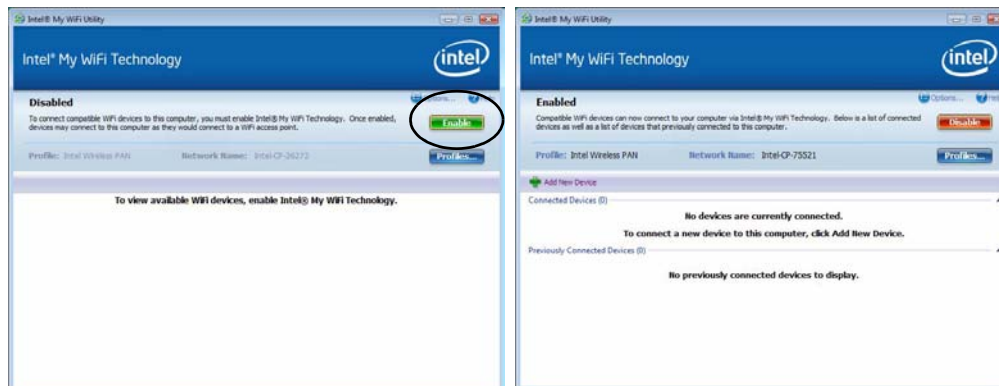

7 *Figure 7 - 12*
Intel® My WiFi
Utility

3. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
4. Click **Network and Sharing Center** (Network and Internet).
5. Click **Manage Network Connections**.

Click **Manage Network Connections**



Figure 7 - 13
Network and Sharing Center

6. Right-click **Intel WiFi STA (Station)** in **Network Connections** and select **Properties**.

Right-click **Intel WiFi STA (Station)** and select **Properties**.

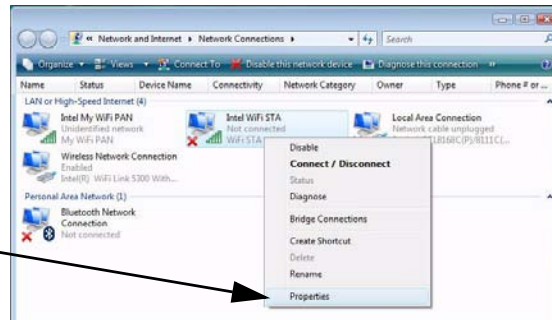


Figure 7 - 14
Intel WiFi STA Properties (Network Connections)

Modules & Options

7. Click **Sharing (tab)** and select “**Allow other network users to connect through this computer’s Internet connection**”.
8. Select **Intel My WiFi PAN** under **Home Networking Connection**.
9. Click **OK**.

Click “**Allow other network users to connect through this computer’s Internet connection**”.

Select **Intel My WiFi PAN**.


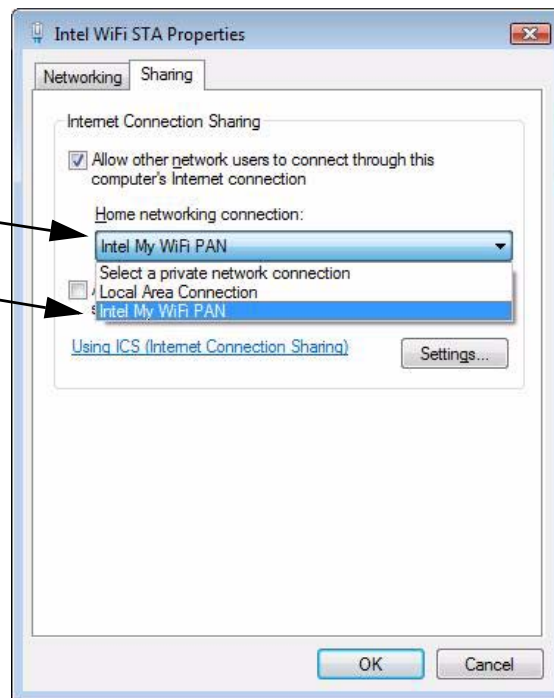


Figure 7 - 15
Intel WiFi STA
Properties -
Sharing

10. A message will appear to inform you that the LAN adapter will be set to use the IP address **192.168.0.1**.
11. Click **Yes** to enable Internet Connection Sharing.



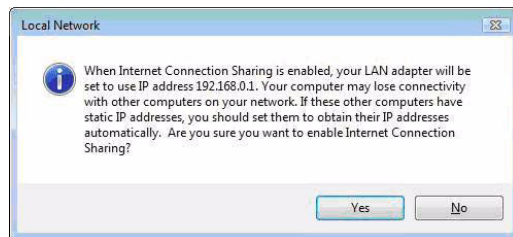

12. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start > Programs/All Programs > Intel PROSet Wireless > Intel My WiFi Technology**), or by clicking the taskbar icon .
13. Click **Profiles** .



Figure 7 - 16
**IP Address
Warning**



IP Addresses

The Intel® My WiFi default gateway IP address is **192.168.0.1**. DO NOT use this address for any Wireless Access Point (or any other static IP address on your network).

7

Figure 7 - 17
**Intel® My WiFi
Utility**

14. Click **Profiles**, click **Intel Wireless PAN** and click **Edit**.

Figure 7 - 18
Profiles



15. You can change the **Profile Name** and **Network Name** to your personal preferences in **General** (tab).


Figure 7 - 19
Intel® My WiFi
Profile Settings -
General



Profile and Network Names

The **Profile Name** is the name as displayed on your computer in the **Network Connections** control panel (see [Figure 7 - 14 on page 7 - 15](#)).

The **Network Name (SSID)** is the name the devices see when they try to connect to your computer.

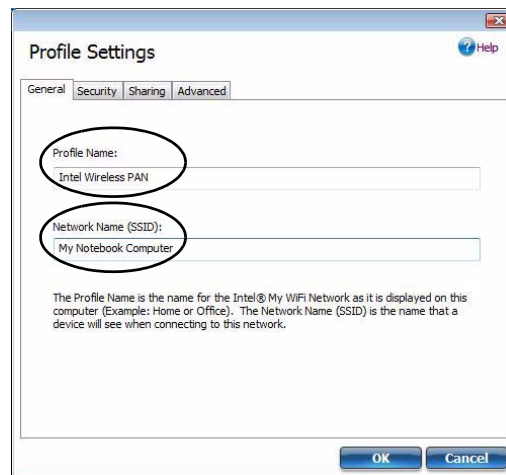

16. Click **Security** (tab).
17. Change the **Security Type** to **WEP** and the **Encryption Type** to **64bit**.
18. Enter a password (5 characters long) in the **Passphrase** box.



Figure 7 - 20
Intel® My WiFi
Profile Settings -
Security

Modules & Options

19. Click **Sharing** (tab).
20. Make sure **Filter Network Traffic** and **DHCP and DNS Server** are **Disabled**.

Set Filter Network
Traffic & DHCP
and DNS Servers
to **Disabled**.

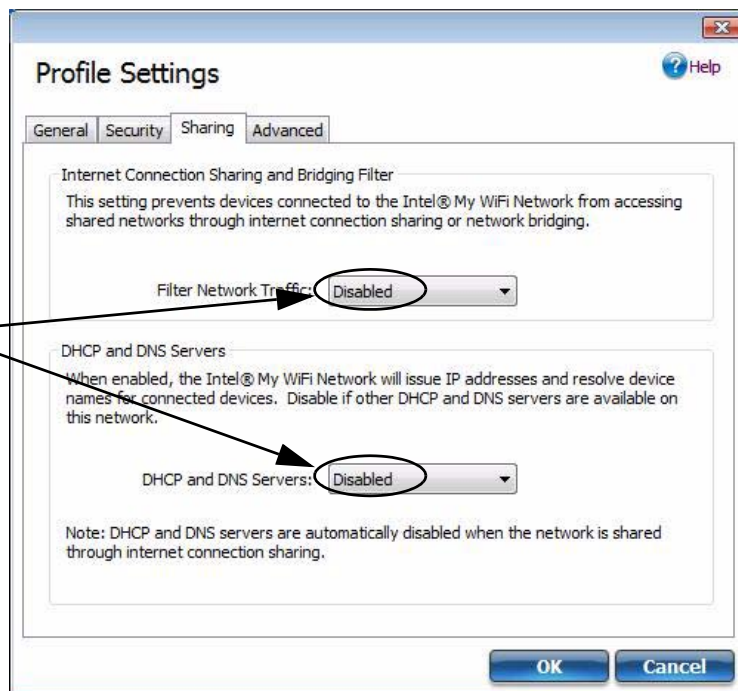


Figure 7 - 21
Intel® My WiFi
Profile Settings -
Sharing

21. Click **Advanced** (tab).
22. Make sure the **Default Channel** is set to **Channel 1, 6 or 11**.
23. Click **OK** to save all the settings and click **Close** to exit Profiles.


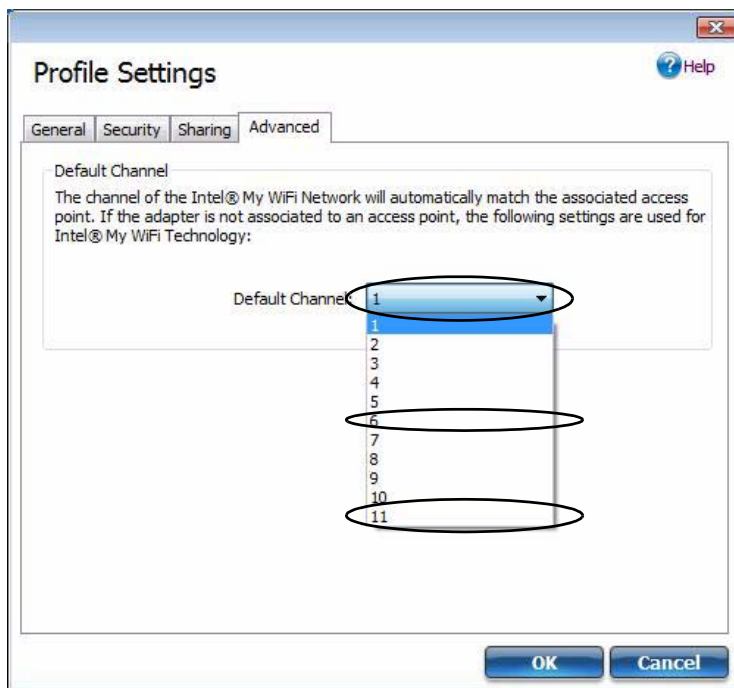



Figure 7 - 22
Intel® My WiFi
Profile Settings -
Advanced

Modules & Options

24. Double-click **Intel My WiFi PAN** (Personal Area Network) in **Network Connections**.
25. Click **Details** to display the **Network Connection Details**.

Figure 7 - 23
Intel My WiFi PAN
Network
Connection Details
(Network
Connections)

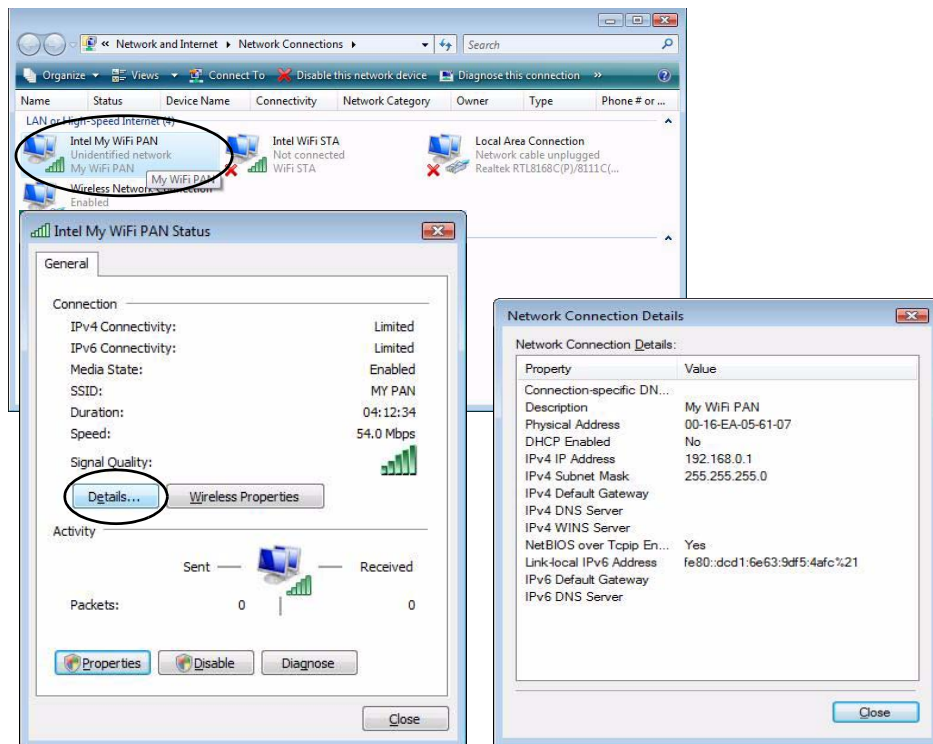

26. Access the **Intel® My WiFi Utility** from the **Start** menu (**Start > Programs/All Programs > Intel PROSet Wireless > Intel My WiFi Technology**), or by clicking the taskbar icon .
27. To add a new device follow the instructions in the devices' user guide for connecting to a WiFi network.
28. Click **Add New Device** in **Intel® My WiFi Utility** to confirm the security settings detail.

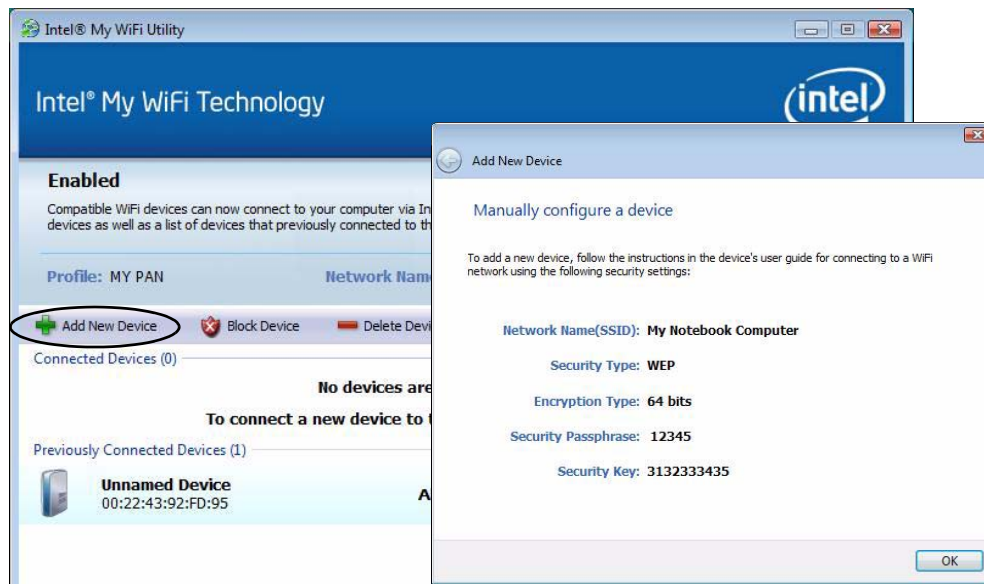



Figure 7 - 24
Intel® My WiFi
Utility
(Add New Device)


Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

To access the Windows Mobility Center:

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Windows Mobility Center (Mobile PC)**.
3. Click the button to **Turn wireless off/on**, or click the icon  to access the network menu.

7 *Figure 7 - 25*
Windows Mobility Center

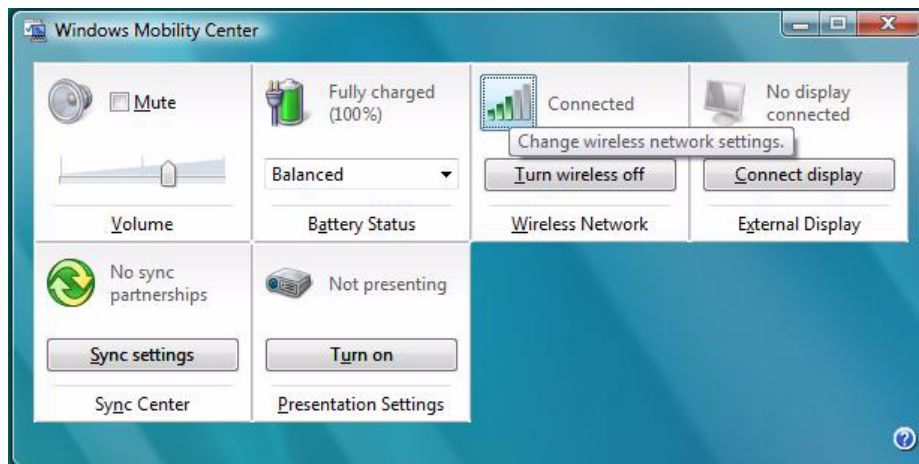

3.75G/HSPA Module

If you have included an **optional 3.75G/HSPA** (High Speed Packet Access) module (see **“Communication” on page C - 3** for specification details) in your purchase option, you will have the appropriate application (**HSPA Modem Interface** or **Mobile Partner**) provided for your particular module. Follow the instructions **on page 7 - 27** to install the USIM card (supplied by your service provider), and then install the application (see over for further details).



Important Notice - 3.75G/HSPA & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3.75G/HSPA module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3.75G/HSPA module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.



3.75G/HSPA Module Options

There are **two optional** 3.75G/HSPA modules available for this series of computer models. Each module is supplied with the appropriate application software.


The module type supplied may depend upon the computer model purchased. Check with your service center for details.

Install the driver from the Drivers Installer menu and check the instructions for the appropriate application on the following pages.



3.75G/HSPA Modules & System Wake Up

Note that the 3.75G modules **DO NOT** support system wake up on 3.75G/HSPA modem activity.

Before installing the application, make sure that the 3.75G/HSPA module is ON (installing the driver with the module off will not allow the software to detect the module hardware correctly). Use the **Fn +  key combination** (see *“Function/Hot Key Indicators” on page 1 - 13*) to toggle power to the 3.75G/HSPA module. When the 3.75G/HSPA module is powered on, the on-screen indicator will briefly be displayed. Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*. **Note that exiting the application does NOT turn off the 3.75G/HSPA module.**


- **HSPA Modem Interface** - See *“HSPA Modem Interface Installation” on page 7 - 29* for driver installation information and *“HSPA Modem Interface” on page 7 - 30* for instructions on using the **HSPA Modem Interface**.
- **Mobile Partner** - See *“Mobile Partner Application Installation” on page 7 - 38* for driver installation information and *“Mobile Partner Application” on page 7 - 39* for instructions on using the **Mobile Partner** application.

For Model A

1. Turn **off** the computer, and turn it over and **remove the battery**.
2. Locate the SIM card cover and loosen screw **1**.
3. Remove the SIM card cover **2**.

For Model B

1. Turn **off** the computer, and turn it over and **remove the battery**.
2. Locate the RAM & CPU bay cover and remove screws **3** - **5**.
3. Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
4. Carefully disconnect the fan cable **6**, and remove the cover **7**.

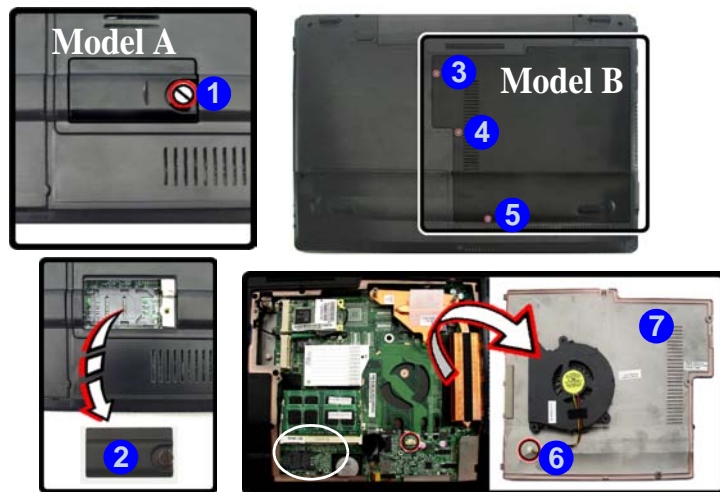

Power Safety Warning

Before you undertake any installation procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.



Fan Cable

Make sure you re-connect the fan cable **6** before screwing down the bay cover.

Figure 7 - 26
**SIM Card Cover/
RAM & CPU
Bay Cover Removal**

Modules & Options

5. Insert the USIM card as you would into your mobile phone.
6. Slide the SIMLOCK towards the hinge (in the opposite direction to the arrow illustrated in [Figure 7 - 28](#)) in order to release the lock and lift it up.
7. Insert the USIM card as illustrated in ([Figure 7 - 27](#)) and close the SIMLOCK.

Figure 7 - 27
**Insert the USIM
Card**




8. Lock the SIMLOCK by pushing it in the direction of the arrow in [Figure 7 - 28](#) until it clicks into the lock position.

Figure 7 - 28
SIMLOCK Lock



Cover Pins

Note that **Model B** has cover pins that need to be aligned with slots in the case to insure a proper cover fit, before screwing down the bay cover.

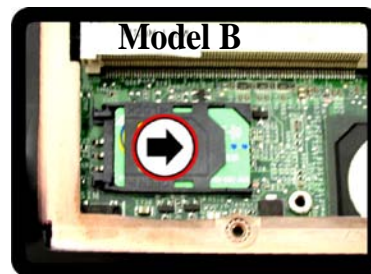


9. Replace the covers and screws (**reconnect the fan cable before screwing down the bay cover for Model B computers - see sidebar for note on cover pins**).

HSPA Modem Interface

With the **3.75G/HSPA** module and USIM card (supplied by your service provider) installed you may then install the **HSPA Modem Interface**. The **HSPA Modem Interface** allows you to directly access your HSPA internet service from the computer.


HSPA Modem Interface Installation

1. Enable power to the module by pressing the **Fn** +  key combination (give the module about 10 seconds to power on and the on-screen icon will indicate the module's power status).
2. If a **Found New Hardware** window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
3. Insert the **Device Drivers & Utilities + User's Manual** disc into the CD/DVD drive.
4. Click **Option Drivers** (button).
5. Click **3.Install 3G Driver > Yes**.
6. Click **Next > Install**.
7. Click **Finish** to restart the computer.
8. Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA modem**), or by double-clicking the **HSPA modem** icon on the desktop.




Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn** +  key combination to toggle power to the 3.75G/HSPA module, and check the indicator to see if the module is powered on or not (see [Table 1 - 6, on page 1 - 13](#) [Table 1 - 4, on page 1 - 9](#)).







HSPA Modem Help

To get help on 3.75G/HSPA module configuration and settings, click the help icon  and select **Help**.

HSPA Modem Interface

The connection information is stored on the USIM card supplied by the service provider.

1. Power on the **3.75G/HSPA module** using the **Fn + ** key combination.
2. Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA Modem > HSPA Modem**), or by double-clicking the desktop icon .
3. If a USIM card is not installed then a message will appear to notify you of this (click **OK** to close the message and install the USIM card).
4. If you are required to enter a pin # then a message will appear to prompt you to enter a pin #. (**Note:** to change pin # go to **Settings ** and click **OK** in **PIN code**.)
5. Click the **Network connection ** button and the **HSPA Modem** interface window will display **Connection Manager**.




Connection Manager

The connection information is commonly stored on the USIM card supplied by the service provider. However if your service provider requires details such as **IP Address**, **Username** and **Password** etc. to be entered before connection you can enter them in the **Connection Manager** tab, or save the details in **Profiles**.



Figure 7 - 29
HSPA Modem
Interface Window

- Click **Connect**  to connect to your service provider.

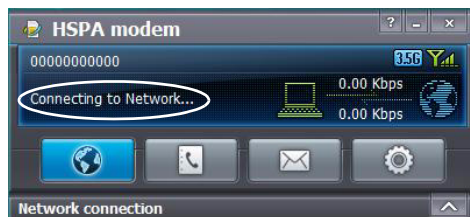


Figure 7 - 30
Connecting to Network

- The message “**Network is connected**” will be displayed when the network connection is successful.



Figure 7 - 31
Network is Connected



- You can then access the internet, download e-mail etc. as per any internet connection.

Modules & Options

Figure 7 - 32
**Uploading/
Downloading Rates
and Speed**

- While you are connected the upper right corner of the **HSPA Modem** interface will display the upload and download rates, and the taskbar icon will display the connection speed.



- To disconnect click the **Disconnect**  icon (**Connection Manager**).
- The program will disconnect from the service provider.
- The module will still be on, and you will need to press the **Fn +**  key combination to turn it off.


Adding a Profile

- Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA Modem > HSPA Modem**), or by clicking the desktop icon.
- Click the **Network connection** , and click **Profiles** (tab).

Figure 7 - 33
Profiles



3. Click **Add** (button) and input any **Network Settings** required by your service provider.
4. Click **OK** to save the profile.

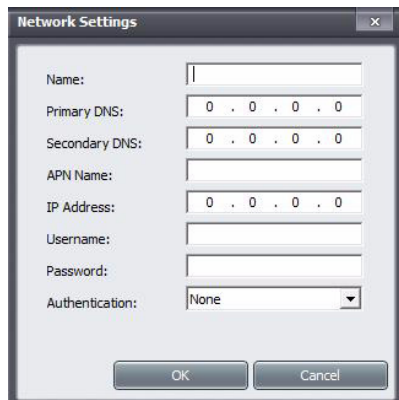

The 'Network Settings' dialog box contains the following fields and controls:

- Name:** A text input field.
- Primary DNS:** A text input field with the value '0 . 0 . 0 . 0'.
- Secondary DNS:** A text input field with the value '0 . 0 . 0 . 0'.
- APN Name:** A text input field.
- IP Address:** A text input field with the value '0 . 0 . 0 . 0'.
- Username:** A text input field.
- Password:** A text input field.
- Authentication:** A dropdown menu with 'None' selected.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.

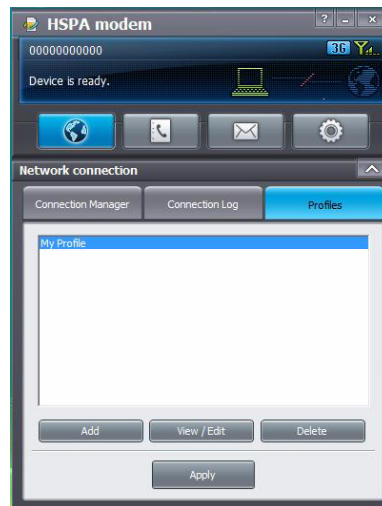


Figure 7 - 34
Network Settings & Profiles

5. You can **Edit** or **Delete** profiles from the **Profiles** tab.
6. To use a profile click to select it, and then click **Apply** (button) and the settings will be transferred to **Connection Manager**.

Contacts



1. Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA Modem > HSPA Modem**), or by clicking the desktop icon.
2. Click **Contacts**  (button).


Figure 7 - 35
**Network Settings &
Profiles**



3. Click **Refresh** (button) to download the contacts from the USIM card to the computer.
4. The **Contacts** will then be displayed.
5. Double-click any contact to edit the information (or right-click and select **Edit**).
6. You can also **Export/Import** contacts by clicking the appropriate button.

Messages

1. Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA Modem > HSPA Modem**), or by clicking the desktop icon.
2. Click **Messages**  (button).

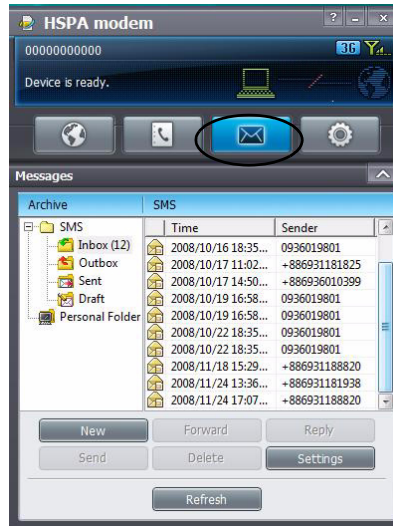

3. Click **Refresh** (button) to download the messages from the USIM card to the computer.
4. Click **New** (button) to create a new message.
5. You can either type the telephone number in the recipient field, or press **To** (button) to select the contact from the list.



SMS Service

In addition to standard internet services you may also send and receive SMS text messages using the **HSPA Modem Interface**, if your service supports SMS.

Figure 7 - 36
Network Settings & Profiles

Modules & Options

6. Click to select a contact from the list and then click **Add** (button) and the phone number will automatically be added to the recipient field.
7. Type the message information into the message body and click **Send** (button) to send it, or **Save to draft** (button) to save the message.
8. Select any message to **forward** or **delete** it, or to **reply** to it.

Settings


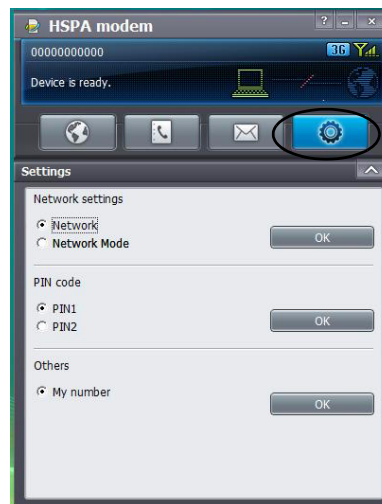
1. Access the **HSPA Modem Interface** from the **Start** menu (**Start > Programs/All Programs > HSPA Modem > HSPA Modem**), or by clicking the desktop icon.
2. Click **Settings**  (button).

Figure 7 - 37
Settings



3. Click **OK** alongside any of the options to configure the settings.
4. The **Network** can be configured for an **Automatic** (usually from the USIM card) or **Manual** connection.
5. The **Network Mode** can be configured for any appropriate mode required.

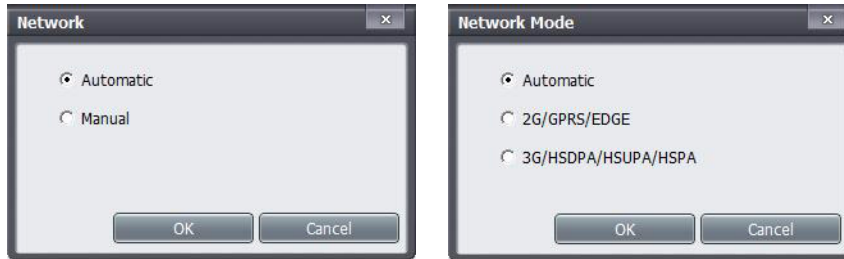




Figure 7 - 38
**Settings - Network/
Network Mode**

6. You can also change your settings for the Pin #, and input your phone number.
7. Exiting the program DOES NOT turn off the 3.75G/HSPA module, and you will need to press the **Fn +**  key combination to turn off the module (pay careful attention to this aboard aircraft - see [“Wireless Device Operation Aboard Aircraft” on page 7 - 7](#)).
8. If the module is on and the computer enters a power-saving state, then the power status of the module on resuming from the power-saving state will be as below:
 - If the 3.75G/HSPA module is on and the computer is **Shut Down or Restarted**; the module will be **off** when the computer starts up.
 - If the 3.75G/HSPA module is on and the computer enters **Sleep or Hibernate**; the module will be **off** when the computer resumes from sleep.



Wireless Device Operation Aboard Aircraft


The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn** +  key combination to toggle power to the 3.75G/HSPA module, and check the indicator to see if the module is powered on or not (see [Table 1 - 6, on page 1 - 13](#) [Table 1 - 4, on page 1 - 9](#)).

Mobile Partner

With the **3.75G/HSPA** module and USIM card (supplied by your service provider) installed you may then install the **Mobile Partner** application. The **Mobile Partner** application allows you to directly access your HSPA internet service from the computer.





Mobile Partner Application Installation


1. Enable power to the module by pressing the **Fn** +  key combination (give the module about 10 seconds to power on and the on-screen icon will indicate the module's power status).
2. If a *Found New Hardware* window appears, click **Cancel** in all windows that appear, and then proceed to install the driver as below.
3. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
4. Click **Option Drivers** (button).
5. Click **3.Install 3G Driver > Yes**.
6. Choose the language you prefer and click **OK**.
7. Click **I Agree** (button) to accept the license agreement.
8. Click **Next > Install**.
9. Click **Finish** to restart the computer.
10. Access the **Mobile Partner** application from the **Start** menu (**Start > Programs/All Programs > Mobile Partner**), or by double-clicking the **Mobile Partner** icon on the desktop.

Mobile Partner Application

You will need to contact your service provider to obtain the exact details of how exactly to configure the settings on this page.


Profile Management

1. Power on the **3.75G/HSPA** module using the **Fn +**  key combination.
2. Access the **Mobile Partner** application from the **Start** menu (**Start > Programs/ All Programs > Mobile Partner**), or by double-clicking the **Mobile Partner** icon on the desktop .
3. If you have not created a profile, click **Tools** and select **Options**, and then click **Profile Management**.
4. Click **New**  and input the appropriate information for **Profile Name**, **APN** and **Authentication** etc. as supplied by your service provider.
5. Click **Save**  to save the profile.

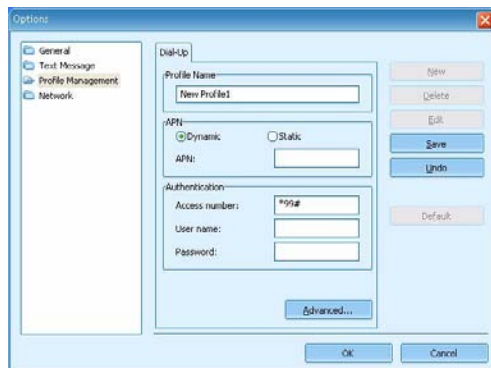

Mobile Partner Help

To get help on **Mobile Partner** configuration and settings, click the **Help** menu and select **Online Help** or press **F1**.



7

Figure 7 - 39
Profile Management

Connecting to the Service Provider





1. Power on the **3.75G/HSPA** module using the **Fn +**  key combination.
2. Access the **Mobile Partner** application from the **Start** menu (**Start > Programs/ All Programs > Mobile Partner**), or by double-clicking the **Mobile Partner** icon on the desktop .
3. The software will run and you can select the **Profile Name** from the menu.
4. Click **Connect**  to begin the connection process.

Figure 7 - 40
Connect



5. The Mobile Partner application will then display the connection information.


Figure 7 - 41
**Network
Connection Prompt**

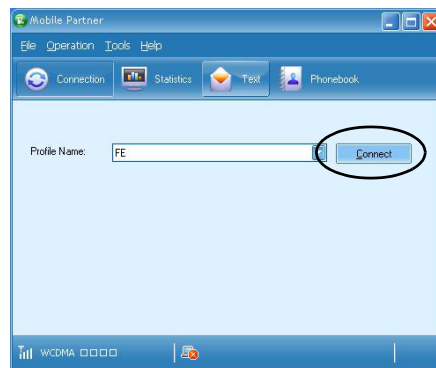

6. When the connection is successful you can move the cursor over the network icon in the taskbar to display the connection information.



Figure 7 - 42
**Connected
Taskbar
Notification**

7. You can then access the internet, download e-mail etc. as per any internet connection.
8. While you are connected the indicators in the Mobile Partner window will display uploading and downloading icons and a network icon in the taskbar .



9. To disconnect click the **Disconnect** icon, or right click the taskbar icon and select **Disconnect**.


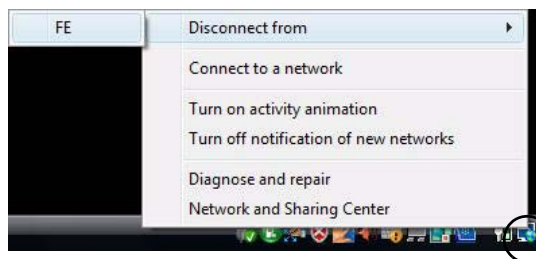


Figure 7 - 43
Disconnect

10. The program will disconnect from the service provider.

Modules & Options

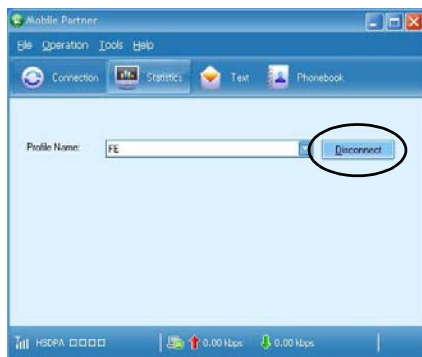

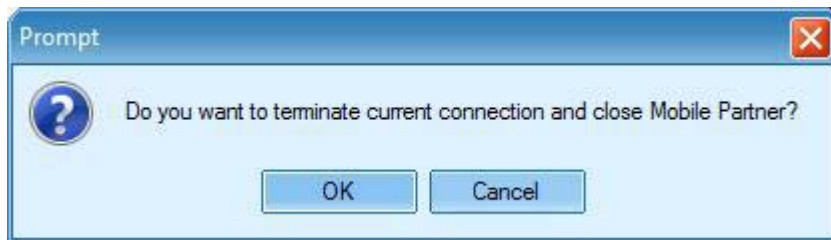

11. The module will still be on, and you will need to press the **Fn +**  key combination to turn it off.
12. If you click the **Mobile Partner** close icon  a message will be displayed asking you to click **OK** to confirm the program exit and to **terminate the connection**.

Figure 7 - 44
Exit Prompt



13. Exiting the program terminates the connection, but DOES NOT turn off the 3.75G/HSPA module, and you will need to press the **Fn +**  key combination to turn off the module (pay careful attention to this aboard aircraft - see ***“Wireless Device Operation Aboard Aircraft” on page 7 - 38***).
14. If the module is on and the computer enters a power-saving state, then the power status of the module on resuming from the power-saving state will be as below:
 - If the 3.75G/HSPA module is on and the computer is **Shut Down or Restarted**; the module will be **off** when the computer starts up.
 - If the 3.75G/HSPA module is on and the computer enters **Sleep or Hibernate**; the module will be **off** when the computer resumes from sleep.

Fingerprint Reader Module

The fingerprint reader module provides a high level of security for your computer. Make sure you have administrator's rights to your computer, and have a *Windows* password enabled for full security protection.


Before beginning the enrollment process it is recommended that you go through the fingerprint tutorial. To run the tutorial click **Start > Programs/All Programs > Protector Suite QL > Fingerprint Tutorial** after installing the driver.

Fingerprint Reader Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **4.Install FingerPrint Driver > Yes**.
4. Click **Software Installation**.
5. Click **Next > Next > Next**.
6. Click **Finish > Yes** to restart the computer.



Help & Manual

Right-click the taskbar icon  to bring up the menu to select **Help**.

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Option Drivers** (button). Click **Unlock** (button) and then click **4.Install FingerPrint Driver >Yes**.

Click **Documentation** to open the folder containing the manual in .pdf format.

To install the Adobe Acrobat Reader software to read the file, insert the *Device Drivers & Utilities + User's Manual* disc and click **User's Manual** (button), and click **Install Acrobat Reader** (button).



Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger in case of injury etc.**

User Enrollment

1. Click **Start > Programs/All Programs > Protector Suite > Control Center**, or double click the taskbar icon  (click **Initialize**).
2. On the first run of the program you will be asked to click the **Accept** button to accept the license.
3. If you have not set a **Windows** password you will be prompted to do so (**note**: If you have not set a password **Protector Suite** cannot secure access to your computer).
4. Click **Submit** when you have entered password.
5. You will then be prompted to enroll your fingerprints (you can click **Tutorial** to get help with fingerprint enrollment at any time).

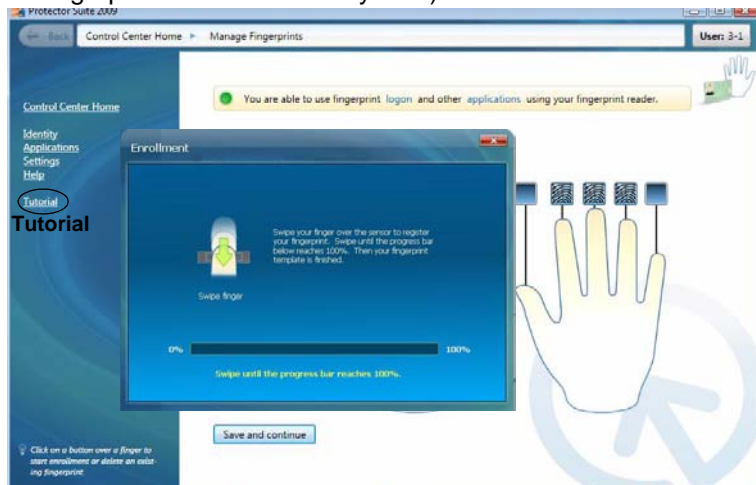


Figure 7 - 45
Fingerprint Enrollment

6. Click the button above any of the fingers to begin the enrollment process for that finger.
7. Swipe the finger until the progress bar reaches **100%** to enroll that finger.
8. Repeat the process for all the fingers you wish to enroll (see sidebar), and then click **Save and Continue**.
9. Enter a backup password and click **Apply**.
10. Close the fingerprint status window.



Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger** in case of injury etc.

7

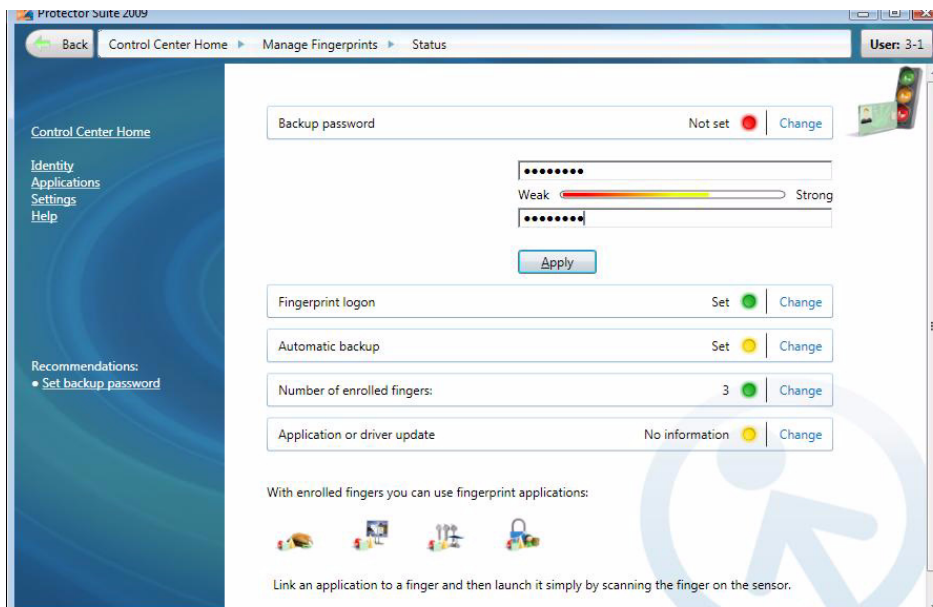


Figure 7 - 46
Fingerprint Status

Modules & Options


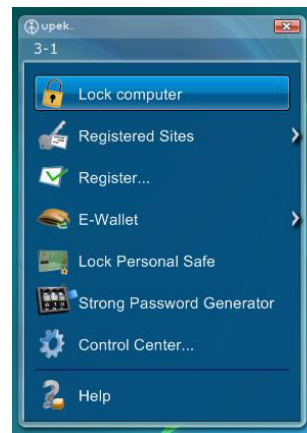
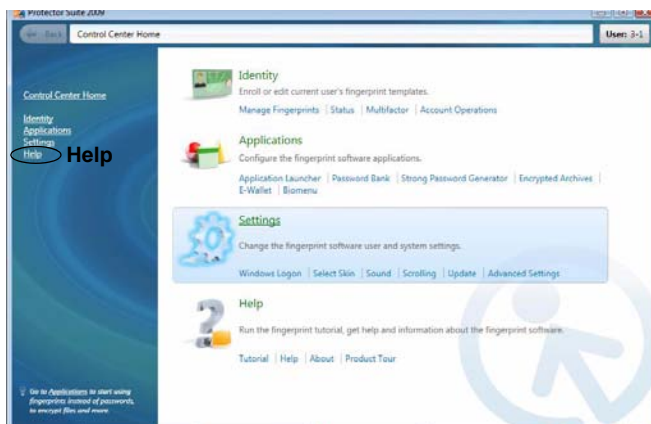
11. Right-click the taskbar icon  and select **Start Control Center** (and then swipe a finger) to allow you to **Edit Fingerprints**, register **Applications**, edit **Settings** and access the **Help** menu etc. You can also run the **Control Center** etc. from the **Protector Suite** item in the **Programs/All Programs** menu
12. Click "**Help**" in **Control Center Home** to get more information on any topic.
13. You can also run the **Tutorial**, or **Product Tour** video to get more information.

Figure 7 - 47
**Control Center &
Biomenu**



14. See "**Help & Manual**" on page 7 - 43 for further details.
15. If you swipe your finger over the reader at any time you can access the **Biomenu** to **lock the computer**, **register websites**, access the **Personal Safe**, **E-Wallet** or **Strong Password Generator**, open the **Control Center** and access the **Help** menu.

Fingerprint Control Center Features

Application Launcher

The **Application Launcher** allows you to register applications to be launched when assigned to a particular finger. Simply copy the application icon on to one of the registered fingers and then click OK to close the application window. Once registered the application will launch when you swipe the appropriate finger across the sensor.

Password Bank

The **Password Bank** stores registrations of user names, passwords and other settings for web sites etc.

Strong Password Generator

Strong Password Generator helps you to create complicated passwords resistant to dictionary attacks from the Internet.

E-Wallet

The **E-Wallet** provides biometric security for important personal information such as credit card details, account numbers etc.

File Safe

File Safe is an encrypted area assigned on your hard drive that allows you to store files and folders to be protected by fingerprint protection.



Help

For more information on these and other features simply access "**Help**" in the **Fingerprint Control Center** and select the item from the menu on the left.



Latest PC Camera Driver Information

Check the *Device Drivers & Utilities + User's Manual disc*, and any accompanying insert pages, for the latest updated information on the PC Camera driver, which may override the information provided here.

PC Camera Module

Make sure that the PC Camera module is on before installing the driver and **use the Fn + F10 key combination** (see *“Function/Hot Key Indicators” on page 1 - 13*) to **toggle power to the PC Camera** module. When the PC Camera module is powered on, the on-screen indicator will briefly be displayed. Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

There are a number of different camera modules available with this computer model series. You will have the appropriate application installed for your camera. **Make sure you access the application via the WebCam desktop shortcut.**

PC Camera Driver Installation

1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **5.Install Camera Driver > Yes**.
4. Choose the language you prefer and click **Next > Next**.
5. Click **Finish** to restart the computer.
6. Run the **BisonCap** application program from the **BisonCam** shortcut on the desktop, or from the **BisonCam** item in the **Start > Programs/All Programs** menu (if the hardware is turned off use the **Fn + F10** key combination to turn it on again).




PC Camera Screen Refresh

If you find that the screen refresh rate is subject to lag or stuttering, then **reduce the window size**, or adjust the **Output Size** and/or **Color Space Compression**.

To reduce **Output Size** and/or **Color Space Compression** run the **BisonCap** application, click **Options** and select **Video Capture Pin**. Adjust the settings from the appropriate pull-down menu.

PC Camera Audio Setup

If you wish to capture video & **audio** with your camera, it is necessary to setup the audio recording options in *Windows*.

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Sound**  (**Hardware and Sound**).
3. Click **Recording** (tab).
4. Right-click **Microphone** (Realtek High Definition Audio) and make sure the item is not disabled.
5. Double-click **Microphone** (or select **Properties** from the right-click menu).
6. Click **Levels** (tab), and adjust the **Microphone** and **Microphone Boost** sliders to the level required.
7. Click **OK** and close the control panels.
8. Run the **BisonCap** application program from the **Start > Programs/All Programs > BisonCam** menu.
9. Go to the **Devices** menu heading and select **Microphone (Realtek....)** (it should have a tick alongside it).
10. Go to the **Capture** menu heading and select **Capture Audio** (it should have a tick alongside it).


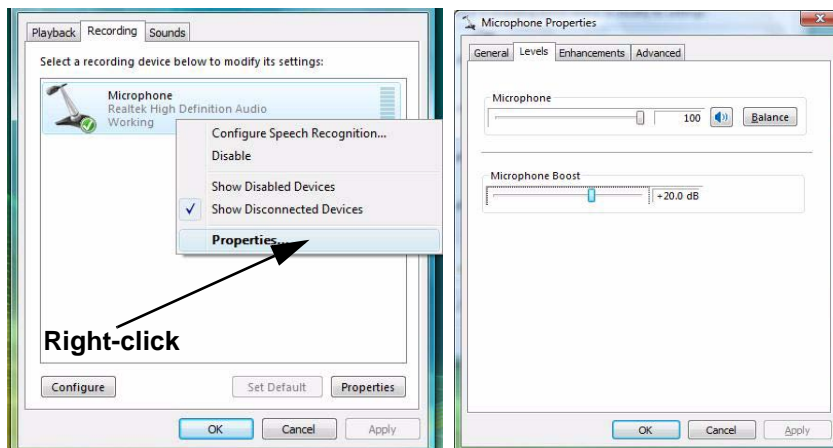


Figure 7 - 48
Audio Setup for PC Camera



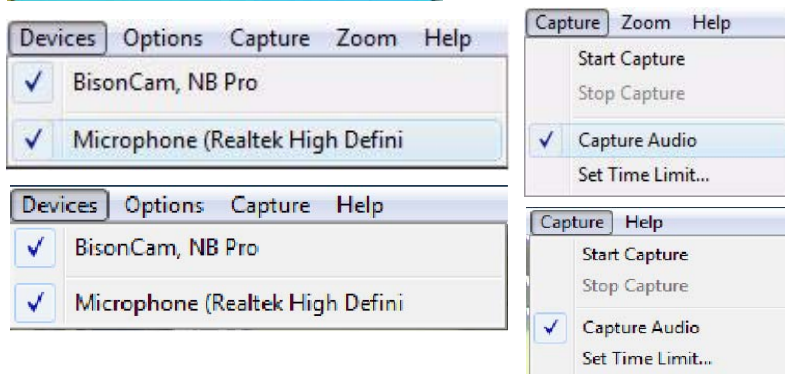

Pre-Allocating File Space

You may pre-allocate the file size (**File > Allocate File Space**) for the capture file in the **BisonCap** program.

Pre-allocating space on the hard disk can improve the capture quality (particularly of large capture files), by reducing the amount of work the hard disk has to do in finding space for the video data as it is being captured.

See also *“Reducing Video File Size” on page 7 - 53*.

BisonCap

BisonCap is a video viewer for general purpose video viewing and testing, and for capturing video files to .avi format.

1. Run the **BisonCap** program from the **Start > Programs/All Programs > Bison-Cam** menu (it is recommended that you **set the capture file** before the capture process - **see Set Capture File below**).
2. Go to the **Capture** menu heading (if you wish to capture audio check *“PC Camera Audio Setup” on page 7 - 50*) and select **Start Capture**.
3. Click **OK** (the file location will be displayed in the pop-up box) to start capturing the video, and press **Esc** to stop the capture (you can view the file using the **Windows Media Player**).

Set Capture File

Prior to capturing video files you may select the **Set Capture File...** option in the **File** menu, and set the file name and location before capture (this will help avoid accidentally overwriting files). Set the name and location then click **Open**, then set the **“Capture file size:”** and click **OK**. You can then start the capture process as above.

Note the important information in *“Reducing Video File Size” on page 7 - 53* in order to save file space, and help prevent system problems.

Reducing Video File Size

Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select **Properties**) and the remaining free space on your hard disk (go to **My Computer**, right-click the hard disk, and select **Properties**). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

Note that the *Windows Vista* system requires a minimum of **15GB** of free space on the **C: drive** system partition. In order to prevent system problems it is recommended that you save the captured video file to a location other than the **C: drive** (see *“Set Capture File” on page 7 - 52*), limit the file size of the captured video (see *“Pre-Allocating File Space” on page 7 - 52*) or reduce video resolution (see below).

To Reduce Video Resolution Output Size:

1. Run the **BisonCap** program.
2. Go to **Options** and scroll down to select **Video Capture Pin....**
3. Click the **Output Size** drop box and select a lower resolution size in order to reduce the captured file size.

Eliminating Screen Flicker

If you find that the video screen in the **BisonCap** program is flickering, you can try to adjust the setting in the **Video Capture Filter** options.

1. Run the **BisonCap** program.
2. Go to **Options** and scroll down to select **Video Capture Filter**....
3. Click either **50Hz** or **60Hz** under **Frequency/Powerline Frequency**.

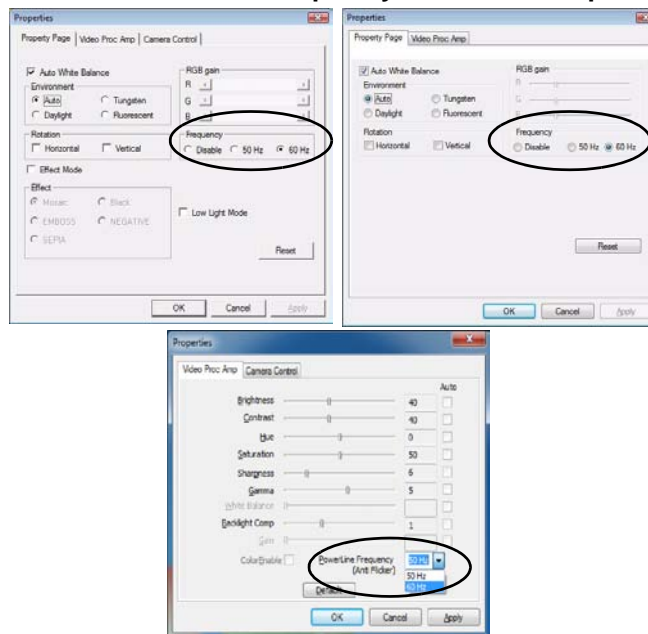


Figure 7 - 49
Video Capture Filter

Zoom

The **BisonCap** program allows you to zoom the camera in and out (**note the zoom function is not available in all camera model applications**).


1. Run the **BisonCap** program.
2. Go to **Zoom** and select **Zoom Out/Zoom In**.



Figure 7 - 50
Zoom/Setting

Taking Still Pictures

The **BisonCap** program allows you to take still pictures.

1. Run the **BisonCap** program.
2. Go to **Options** and select **Take Picture**.
3. The picture (in JPEG format) will be placed in the **Snapshot** folder  on the desktop.



Snapshot Folder

The Snapshot folder's default location is on the desktop. Do not move this folder or an error may appear when you try to take a still picture.

If you accidentally delete or move the folder, you can create a new Snapshot folder on the desktop in order to capture the files.

Chapter 8: Troubleshooting

Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power & Communication Indicators** (see “*LED Indicators*” on page 1 - 9) to see the computer’s power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your *Power Options* (see “*Power-Saving States*” on page 3 - 6), the **Fn + F4** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn + F8 and F9** keys to adjust the brightness.
- **Display Choice** - Press **Fn + F7** to make sure the system is not set to “external only” display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive (this is a common cause of the message “*Invalid system disk - Replace the disk, and then press any key*” / “*Remove disks or other media. Press any key to restart*”).

Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.
- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.
- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Supervisor** password for the BIOS (see *“Security Menu” on page 5 - 10*).
- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc.(even if just brief notes).



Warranty

The CPU is not a user serviceable part. Opening this compartment, or accessing the CPU in any way, may violate your warranty.

Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.
- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note:** You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.
- Keep a “**Bootable CD-ROM/DVD-ROM/USB storage device**” (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).


Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.
- Don't open your computer or undertake any repair or upgrade work if you are not comfortable with what you are doing.
- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".
- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.
- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).

Troubleshooting



- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.
- Don't over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.

Problems and Possible Solutions




Problem	Possible Cause - Solution
You turned on the power but it doesn't work.	<i>Battery missing / incorrectly installed.</i> Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.
The battery LED power indicator  , is blinking orange.	<i>Low Battery.</i> Plug in the power source. If the computer doesn't start up immediately, turn it off then on again.
You are losing battery power too quickly.	<i>The system is using too much power.</i> If your OS has a <i>Power Options</i> scheme (see "Power Plans" on page 3 - 4) check its settings. You may also be using an ExpressCard/USB device/external device that is drawing a lot of power.
Actual battery operating time is shorter than expected.	<p><i>The battery has not been fully discharged before being recharged.</i> Make sure the battery is fully discharged and recharge it completely before reusing (see "Energy Star Power Saving" on page 3 - 10).</p> <p><i>Power Options have been disabled.</i> Go to the Control Panel in <i>Windows</i> and re-enable the options.</p> <p><i>A peripheral device/USB device/ExpressCard is consuming a lot of power.</i> Turn off/remove the unused device to save power.</p>

Troubleshooting

Problem	Possible Cause - Solution
The computer feels too hot .	<p>Make sure the computer is properly ventilated and the Vent/Fan intakes are not blocked. If this doesn't cool it down, put the system into Hibernate mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see “Overheating” on page 1 - 16). Make sure you're using the correct adapter.</p> <p>Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vent/Fan intakes to be blocked.</p>
Nothing appears on screen.	<p><i>The system is in a power saving mode.</i> Toggle the sleep/resume key combination, Fn + F4 (see “Configuring the Power Buttons” on page 3 - 8).</p> <p><i>The screen controls need to be adjusted.</i> Toggle the screen control key combinations Fn + F8/F9. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls.</p> <p><i>The computer is set for a different display.</i> Toggle the screen display key combination, Fn + F7. If an external monitor is connected, turn it on.</p> <p><i>The screen saver is activated.</i> Press any key or touch the TouchPad.</p>
No image appears on the external monitor I have plugged in and powered on.	<p><i>You haven't installed the video driver and configured it appropriately from the Control Panel.</i> See Appendix B for instructions on installing and configuring the video driver.</p>

Problem	Possible Cause - Solution
You forget the boot password .	<i>If you forget the password, you may have to discharge the battery of the CMOS. Contact your service representative for help.</i>
<div>  <p>Password Warning</p> <p>If you choose to set a boot password, NEVER forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.</p> </div>	
The sound cannot be heard or the volume is very low .	<i>The volume might be set too low. Check the volume control in the Volume Control Panel in the Windows taskbar, or use the key combination Fn + F5 and F6 (see “Function/Hot Key Indicators” on page 1 - 13) to adjust.</i>
The CD/DVD cannot be read .	<i>The CD/DVD is dirty. Clean it with a CD/DVD cleaner kit.</i>
The CD/DVD tray will not open when there is a disc in the tray.	<i>The CD/DVD is not correctly placed in the tray. Gently try to remove the disc using the eject hole (see “Loading Discs” on page 2 - 3).</i>
The DVD regional codes can no longer be changed.	<i>The code has been changed the maximum 5 times. See “DVD Regional Codes” on page 2 - 5.</i>
Unwelcome numbers appear when typing.	<i>If the LED  is lit, then Num Lock is turned ON. (see “LED Indicators” on page 1 - 9).</i>

Troubleshooting

Problem	Possible Cause - Solution
<div>  <h3>Other Keyboards</h3> <p>If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot keys unique to the system's regular keyboard may not work.</p> </div>	
The system freezes or the screen goes dark.	<i>The system's power saving features have timed-out.</i> Use the AC/DC adapter, press the sleep (Fn + F4) key combination, or press the power button if no LEDs are lit.
The system never goes into a power saving mode .	Power Options features are not enabled. Go to the Windows Power Options menu and enable the features you prefer (see <i>"Power-Saving States" on page 3 - 6</i>). Make sure you have enabled Hibernate mode from the control panel.
The Wireless LAN/Bluetooth/3.5G modules cannot be detected.	<i>The modules are off.</i> Check the LED indicator  and/or function key indicator to see if the WLAN/Bluetooth/3.75G/HSPA module is on or off (see <i>"LED Indicators" on page 1 - 9</i>). If the LED indicator is off, then press the Fn + F11 (WLAN) , Fn + F12 (Bluetooth) or Fn +  (3.75G) key combination(s) in order to enable the modules (see <i>"Function/Hot Key Indicators" on page 1 - 13</i>).

Problem	Possible Cause - Solution
The PC Camera module cannot be detected.	<i>The module is off. Press the Fn + F10 key combination in order to enable the module (see “Function/Hot Key Indicators” on page 1 - 13). Run the BisonCap program to view the camera picture.</i>
The Wireless LAN/Bluetooth/ PC Camera/3.75G/HSPA modules cannot be configured.	The driver(s) for the module(s) have not been installed. Make sure you have installed the driver for the appropriate module (see the instructions for the appropriate module in “ Modules & Options ” on page 7 - 1).
A file cannot be copied to/from a connected Bluetooth device.	<i>The transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported). If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed</i>
The Bluetooth module is off after resuming from Sleep.	<i>The Bluetooth module’s default state will be off after resuming from the Sleep power-saving state. Use the key combination (Fn + F12) to power on the Bluetooth module after the computer resumes from Sleep.</i>

Screen Resolution Error

If you are experiencing either screen resolution reduction, or screen flickering **after resuming from Sleep in Windows Vista only** then follow the instructions below to fix this problem. This error arises in compliance with **Windows Vista** policy, which triggers **TMM** (Transient Multi-Monitor Manager) when the notebook lid (**S3**) is closed. **TMM** disconnects the LCD display from the OS and then adds the LCD display back when the lid is opened. This may trigger **TMM** to restore an old display setting which may result in screen flickering or a screen resolution change. To fix this problem you will need to disable **TMM** in the OS:

1. Go to the **Control Panel** in the **Windows OS** and double-click the **Administrative Tools** icon (**System and Maintenance**).
2. Double-click **Task Scheduler** (**Schedule Tasks**).

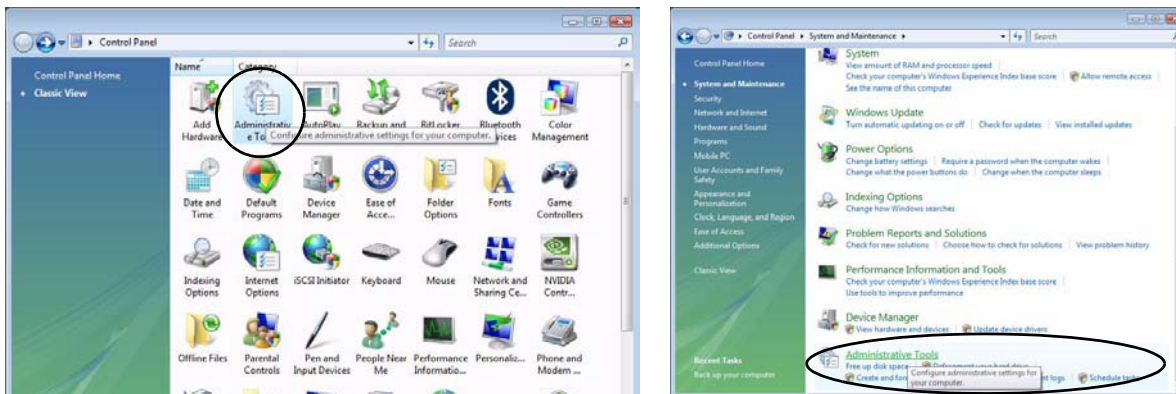


Figure 8 - 1 - Control Panel System and Maintenance

3. Double-click **Task Scheduler Library > Microsoft > Windows**.
4. Click **MobilePC** to open the control panel.
5. Right-click **TMM** and select **Disable**.

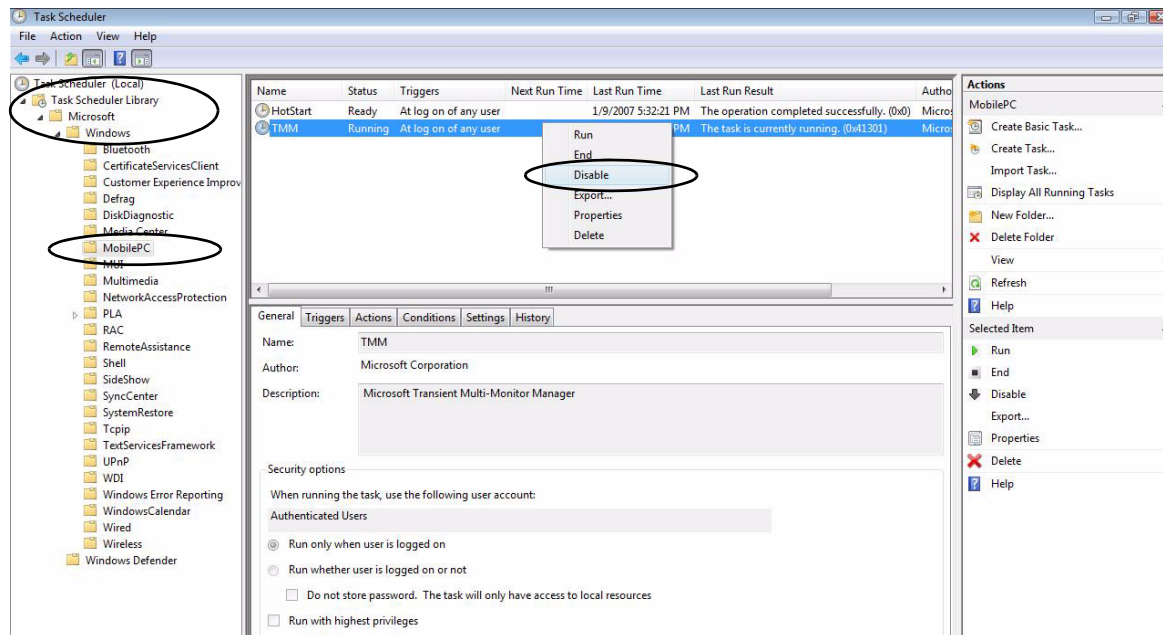





Figure 8 - 2 - TMM Disable

6. Close all the control panels.







Appendix A: Interface (Ports & Jacks)

Overview

The following chapter will give a quick description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

Item	Description
Card Reader Port 	The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device.
DC-In Jack 	Plug the supplied AC/DC adapter into this jack to power your computer.
External Monitor (VGA) Port 	This port allows you to connect an external monitor, or Flat Panel Display, to get dual video or simultaneous display on the LCD and external monitor/FPD.
e-SATA Port e-SATA ,	Plug external Serial ATA hard drives into this e-SATA (external Serial Advanced Technology Attachment) port.
HDMI-Out Port HDMI	The HDMI-Out (H igh- D efinition M ultimedia I nterface) is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device by means of a HDMI cable. Note that HDMI carries both audio (see <i>“HDMI Audio Configuration” on page B - 6</i>) and video signals.

Interface (Ports & Jacks)

Item	Description
Headphone-Out Jack 	Headphones or speakers may be connected through this jack. Note: Set your system's volume to a reduced level before connecting to this jack.
Microphone-In Jack 	Plug an external microphone in to this jack to record on your computer.
RJ-45 LAN Jack 	This port supports LAN (Network) functions. Note: Broadband (e.g. ADSL) modems usually connect to the LAN port.
Security Lock Slot 	To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.
S/PDIF-Out Jack 	This S/PDIF (Sony/Philips Digital Interface Format) Out Jack allows you to connect your DVD-capable PC to a Dolby AC-3 compatible receiver for "5.1" or 'dts' surround sound.
USB 2.0/1.1 Ports 	These USB 2.0 compatible ports (USB 2.0 is fully USB 1.1 compliant) are for low-speed peripherals such as keyboards, mice or scanners, and for high-speed peripherals such as external HDDs, digital video cameras or high-speed scanners etc. Devices can be plugged into the computer, and unplugged from the computer, without the need to turn the system off (if the power rating of your USB device is 500mA or above, make sure you use the power supply which comes with the device).

Appendix B: ATI Video Driver Controls (Win Vista)

The basic settings for configuring the LCD are outlined in *“Video Features” on page 1 - 17*.

For Information on video in *Windows 7* see *“Video Features” on page D - 7*.

ATI Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*. Insert the *Device Drivers & Utilities + User’s Manual* disc and click **Install Drivers** (button).

1. Click **2.Install Video Driver > Yes**.
2. Click **Next > Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish > Yes** to restart the computer.

Note: After installing the video driver go to the **Display Settings** control panel to adjust the video settings to the highest resolution (see *“Video Features” on page 1 - 19*).




Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.



ATI Taskbar Icon

The **ATI Catalyst Control Center** can be accessed as above or by double-clicking the icon  in the taskbar (or by right-clicking the icon and selecting **Catalyst Control Center**).

If you don't see the ATI icon in the taskbar, click **Preferences** (tab) in the **ATI Catalyst® Control Center**, and select **Enable System Tray Menu**.


Right-click the ATI icon  to bring up the taskbar menu.


Figure B - 1

ATI Catalyst Control Center Basic Settings

ATI Catalyst® Control Center

Adjust the video settings from the **ATI Catalyst® Control Center**.

1. Open the **Display Settings** (see page **1 - 17**) control panel.
2. Click **Advanced Settings** (button).
3. Click **Catalyst(R) Control Center** (tab) and then click **ATI Catalyst Control Center** (button) to start the control center.
4. Select either **Basic** or **Advanced** and then click **Next**.
5. If you have selected **Basic** a wizard will help you set up the display options, or if you have selected **Advanced** you will be taken to the **ATI Catalyst Control Center** (you can change the options from the **Basic** menu or the **View** menu in the ATI Catalyst Control Center).

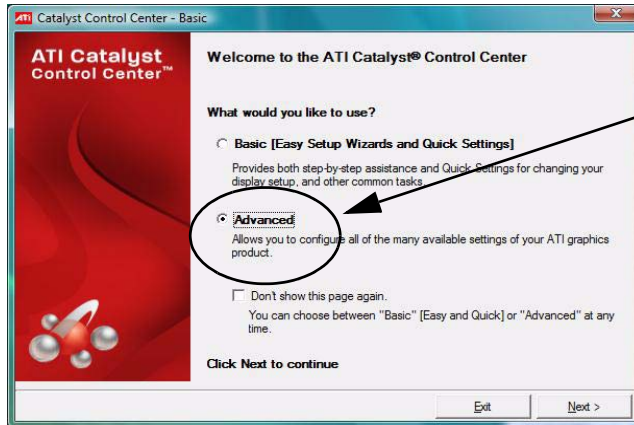

Note that the control panels pictured in the following pages are from the **Advanced** settings.

ATI Video Driver Controls (Win Vista)


The **ATI Catalyst® Control Center** provides additional video configuration controls and tools which allow quick access to features such as display options, 3D Settings, color and Help menus etc. Adjust settings from the options in the **Graphics Settings Tree View** pane.



Help Menu

Click **Help** (tab) and select an option from the drop down menu. Press **F1** to bring up **Help** for any currently selected page.

Figure B - 2
ATI Catalyst Control Center Advanced Settings

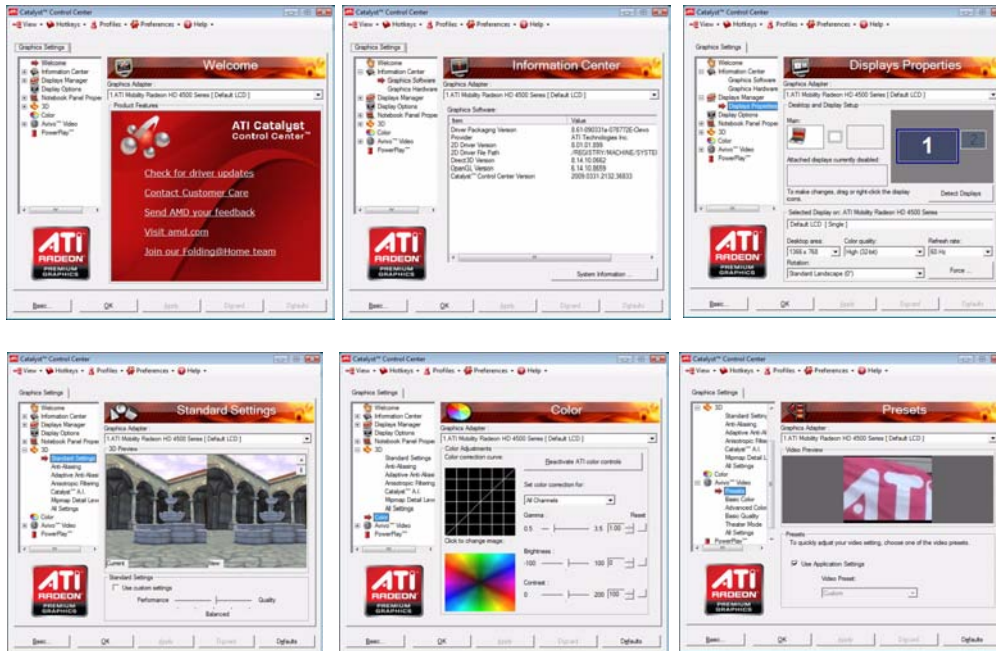



Display Devices

Besides the built-in LCD, you can also use an external monitor/flat panel display as your display device. The following are the display options:

- The built-in LCD.
- An external monitor connected to the external monitor port.
- A flat panel display connected to the external monitor port.

Attaching Other Displays

Configuring an External Display in Windows Vista

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. If a **New Display Detected** window does not appear in **Windows Vista**, go to the **Windows Mobility Center** control panel (**Mobile PC > Adjust commonly used mobility settings**) and click **Connect display**.
3. Click on any of the buttons to configure the displays to your preferences, or click **Display Settings** (in the **New Display Detected** window) to access the control panel.


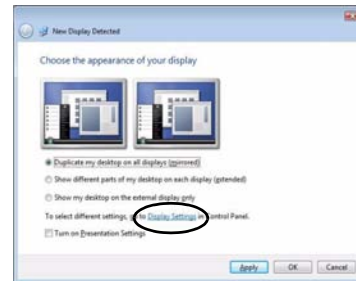


Figure B - 3
New Display
Detected

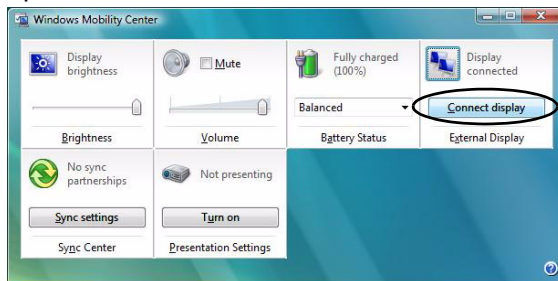

Switching Displays Using Fn + F7

If your external display is connected to the HDMI port, and you are using the Fn + F7 Hot Key combination to switch displays; note that the audio will not automatically switch back to/from the HDMI connection and will need to be manually switched. See **“HDMI Audio Configuration” on page B - 6** for details.

Configuring an External Display using the ATI Catalyst Control Center

Alternatively you can use the **ATI Catalyst Control Center** to configure any attached displays.

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. Go to **ATI Catalyst Control Center** (see [“ATI Catalyst® Control Center” on page B - 2](#)).
3. Select **Displays Manager** from the **Graphics Settings** Tree View pane.
4. Attached displays will appear in the **Desktop and Display Setup** box.
5. Right-click the attached display icon to bring up the Display Mode options (see [“HDMI Audio Configuration” on page B - 6](#)).
6. Select an option from the menu, and click **Yes** to accept the settings.
7. Click **OK** to save the changes.



Right-click the attached display icon and select an option (**Clone** or **Extend**) from the menu.



Detect Displays

Click **Detect Displays** (button) to automatically update the attached display information.

Configure the **Display Detection Option** from **Display Options** in the **Graphics Settings** Tree View pane. You can configure the **Catalyst® Control Center** to manually or automatically detect attached displays.

Figure B - 4
Displays Manager

HDMI Audio Configuration

HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals and you will can configure the audio output as per the instructions below when an HDMI enabled device is connected to the HDMI-Out port.

Windows Audio Setup for HDMI


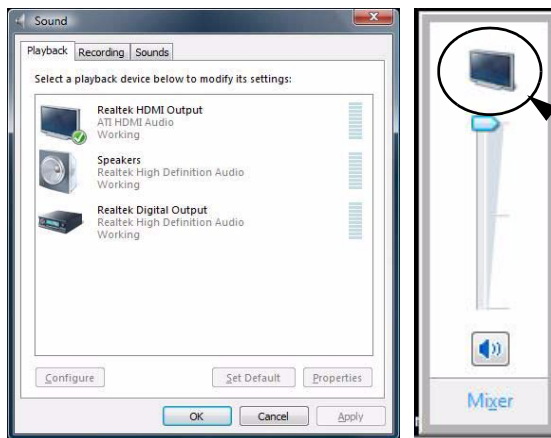

1. Connect a device with HDMI support to the HDMI-Out port.
2. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
3. Click **Sound**  (**Hardware and Sound**).
4. Click **Playback** (tab), and click to select **Digital Output Device (HDMI)**.
5. Double-click **Digital Output Device (HDMI)** (or right-click the icon and select **Properties**).

Figure B - 5
HDMI Device



Click the taskbar volume indicator  when **HDMI Device** is selected, and you will note that the icon at the top of the volume level indicator has changed.

6. Adjust the HDMI settings from the control panel tabs.
7. Click **OK** to close the **Sound** control panel.

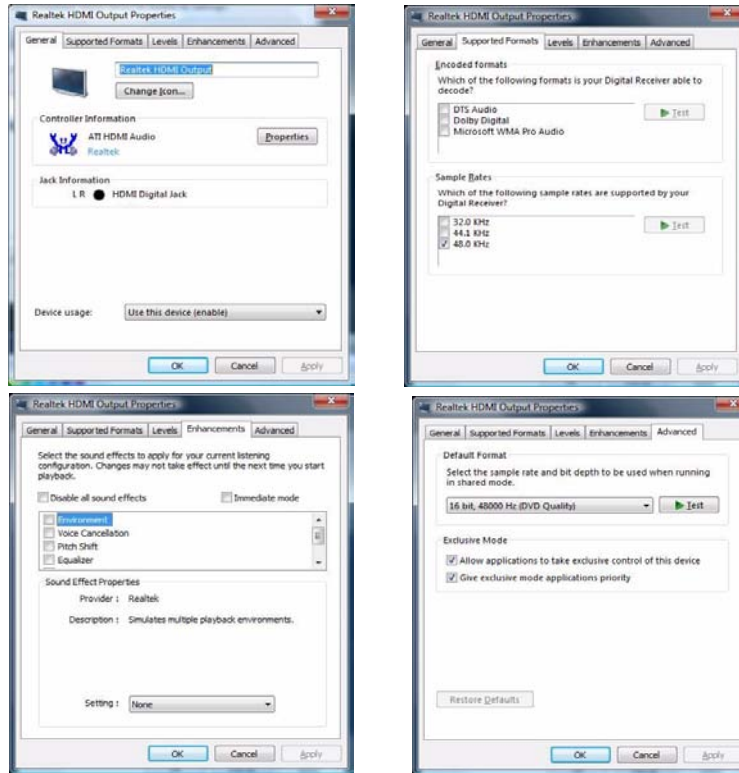


Figure B - 6
HDMI Device Properties

ATI Video Driver Controls (Win Vista)



Other Applications

If you are using a third party application to play DVDs etc. from any attached DVD device, you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***“Configuring an External Display using the ATI Catalyst Control Center” on page B - 5.***
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Display Modes

Single

Only one of your displays is used.

Clone Mode

Clone Mode simply shows an exact copy of the Main display desktop on the other display(s). This mode will drive multiple displays with exactly the same content, resolution, refresh rates and color quality etc.

Extended Mode

Extended Mode treats both connected displays as **separate** devices, and they act as a virtual desktop resulting in a large workspace. When Extended Mode is enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one of the displays, and a different program visible in the other display.



Switching Displays Using Fn + F7

If your external display is connected to the HDMI port, and you are using the Fn + F7 Hot Key combination to switch displays; note that the audio will not automatically switch back to/from the HDMI connection and will need to be manually switched. See **"HDMI Audio Configuration" on page B - 6** for details.



Function Keys

You can use the **Fn + F7** key combination to toggle through the display options:

- Notebook Only
- External Display Only
- Notebook + External Display

Give the displays enough time to refresh.

Swap Display Mapping

If you wish to switch the Main and Clone displays, right-click either the **Main** or **Clone** icon (Displays Manager), and then click **Swap Display Mapping**.

ATI Video Driver Controls (Win Vista)


Selecting Display Modes

Right-click the attached display icon and select an option (**Clone** or **Extend**) from the menu.


Figure B - 7
Displays Manager Clone Mode

Clone Mode

Clone Mode simply shows an exact copy of the Main display desktop on the other display(s). This mode will drive multiple displays with the same content. Use this feature to display the screen through a projector for a presentation.

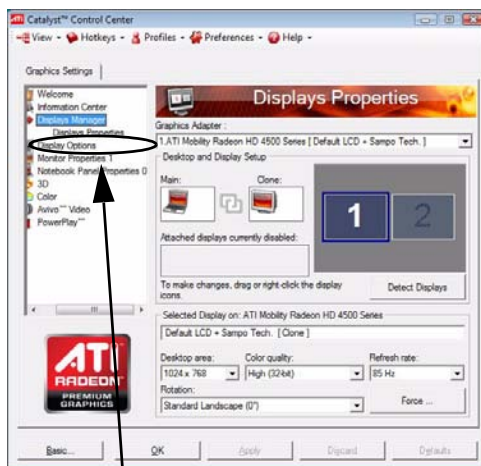


Click Monitor Properties to make adjustments for any attached displays.

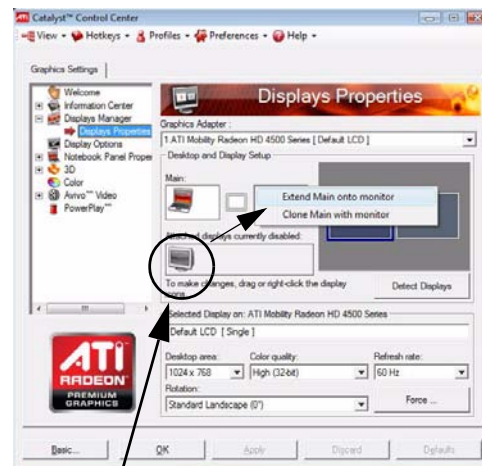

Drag any attached display here to disable it, and simply drag it back to the Clone window to re-enable it.

Extended Mode

In Extended Mode each monitor can be configured separately with the *Windows* desktop stretched between the two monitors (except the taskbar). This configuration is recommended if you are using two monitors of different size, as you may configure the best resolution, refresh rates and color quality for each display.

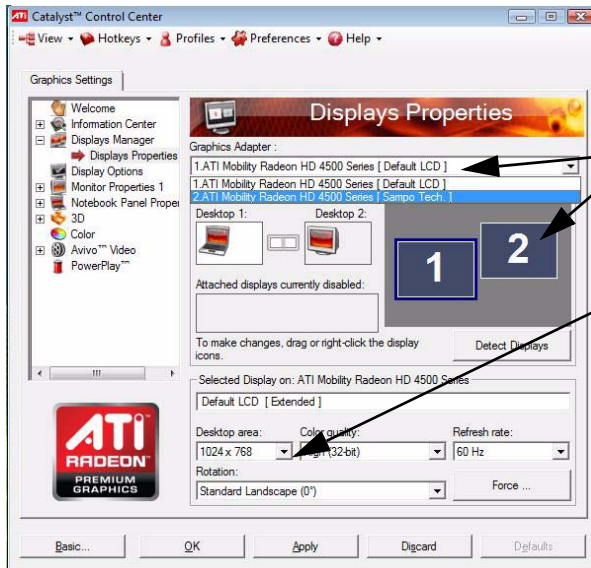


Click either the Graphics Adapter pop-up menu, or click the icon for the appropriate display.

Configure the settings from the **Selected Display...** menu.



Selecting Display Modes

Right-click the attached display icon  and select an option (**Clone** or **Extend**) from the menu.

Extended Mode

When enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one of the displays, and a different program visible in the other display.

Figure B - 8

**Displays Manager
Extended Mode**

ATI Video Driver Controls (Win Vista)



Display Settings Extended Desktop

Use the control panel to drag the monitors to match the physical arrangement you wish to use.

You can drag any icons or windows across to either display desktop, which makes it possible to have one program visible in one of the displays, and a different program visible in the other display.

Using New Display Detected to Enable Extended Mode

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. If a **New Display Detected** window does not appear in **Windows Vista**, go to the **Windows Mobility Center** control panel (**Mobile PC > Adjust commonly used mobility settings**) and click **Connect display**.
3. Click to select **Show different parts of my desktop on each display (extended)**.
4. Click **Right** or **Left** under **Extend your desktop**.
5. Click **Apply > OK**.


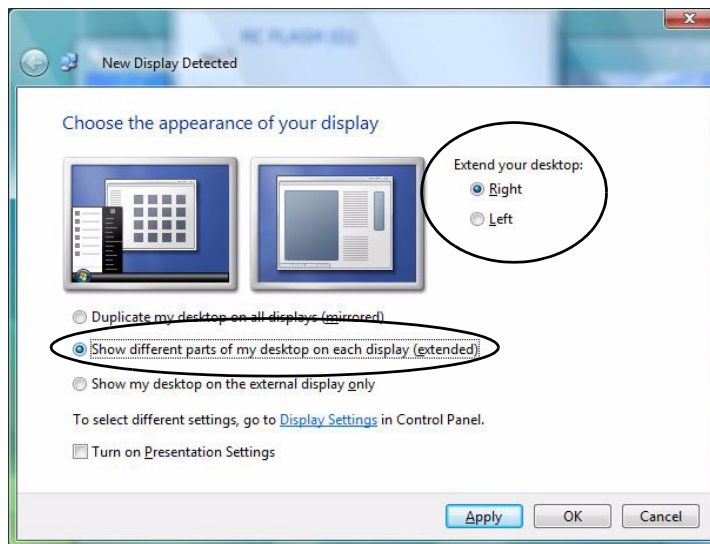


Figure B - 9
New Display
Detected

Using Display Settings to Enable Extended Mode

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. Open **Display Settings** (see *“Video Features” on page 1 - 17*) control panel.
3. Click the monitor icon (e.g. **2**), and make sure you have checked **“Extend the desktop onto this monitor”** and click **Apply**.

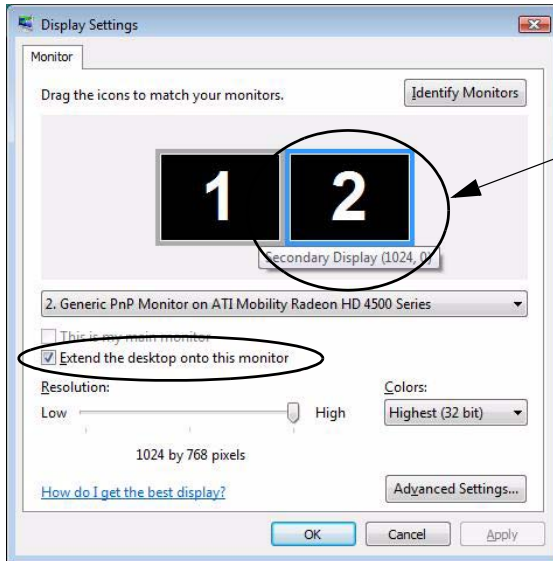

Click the appropriate monitor icon (e.g. **2**) to be able to select the option to extend the desktop on to it.

In this example the Primary Display **1** is on the left, the Secondary Display **2** is on the right.



Display Settings Extended Desktop

Use the control panel to drag the monitors to match the physical arrangement you wish to use.

You can drag any icons or windows across to either display desktop, which makes it possible to have one program visible in one of the displays, and a different program visible in the other display.

Figure B - 10
**Display Settings
(Extend the
Desktop)**

Theater Mode

Theater Mode enables you to display video playback in full screen on a secondary monitor. Theater Mode can be configured from the **Avivo™ Video > Theater Mode** tab in the **Graphics Settings** Tree View pane.

Figure B - 11
Theater Mode



PowerPlay™

PowerPlay™ in the **Graphics Settings** Tree View pane allows you to set your graphics processor settings for higher performance or longer battery life.



Figure B - 12
PowerPlay™

ATI Video Driver Controls (Win Vista)

B

Appendix C: Specifications



Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/speeds and CD/DVD device types) may be changed, updated or delayed due to the manufacturer's release schedule. Check with your service center for details.

Specifications

Processor	Processor (cont'd)	Display
<p>Intel® Core i7-820QM Processor: 1.73GHz 45nm (45 Nanometer) Process Technology, 8M L3 Cache & FSB 1333MHz - TDP 45W rPGA988A Package</p> <p>Intel® Core i7-720QM Processor: 1.6GHz 45nm (45 Nanometer) Process Technology, 6M L3 Cache & FSB 1333MHz - TDP 45W rPGA988A Package</p> <p>Intel® Core i7-620M Processor: 2.66GHz 32nm (32 Nanometer) Process Technology, 4M L3 Cache & FSB 1066MHz - TDP 35W rPGA988A Package</p>	<p>Intel® Core i5-540M / i5-520M Processor: 2.53GHz / 2.40GHz 32nm (32 Nanometer) Process Technology, 3M L3 Cache & FSB 1066MHz - TDP 35W rPGA988A Package</p> <p>Intel® Core i5-430M Processor: 2.27GHz 32nm (32 Nanometer) Process Technology, 3M L3 Cache & FSB 1066MHz - TDP 35W rPGA988A Package</p> <p>Intel® Core i5-350M / i5-330M Processor: 2.27GHz / 2.13GHz 32nm (32 Nanometer) Process Technology, 3M L3 Cache & FSB 1066MHz - TDP 35W rPGA988A Package</p>	<p><u>Model A Computers:</u> 17" WXGA(1440 * 900) / WUXGA (1920 * 1200) TFT LCD</p> <p><u>Model B Computers:</u> 15.6" HD 16:9 Wide Screen (1366 * 768) / HD+(1600 * 900) / FHD (1920 * 1080) TFT LCD</p>
		Memory
		<p>Dual Channel DDRIII (DDR3) Two 204 Pin SO-DIMM Sockets Supporting DDRIII (DDR3) 1066/1333MHz Memory Expandable up to 4GB (1GB / 2GB DDRIII (DDR3) Modules)</p>
		Video Adapter
		<p>ATI Mobility Radeon HD 4570 Discrete Graphics On Board (PCIe 2.0 * 8) 512MB GDDR2 Video RAM on board Supports Microsoft DirectX® 10 Supports HDCP</p>
		Core Logic
	Intel® HM55 Chipset	

BIOS	Card Reader	Communication
<p>One 32Mb SPI Flash ROM Phoenix™ BIOS</p>	<p>Embedded 7-in-1 Card Reader (MS/ MS Pro/ SD/ Mini SD/ MMC/ RS MMC/ MS Duo) Note: MS Duo/ Mini SD/ RS MMC Cards require a PC adapter</p>	<p>Built-In 56K MDC Modem V.90 & V.92 Compliant Built-In Gigabit Ethernet LAN Intel® WiFi Link Module 5300 3*3 802.11 a/g/n HMC with PCIe Interface (Factory Option) Intel® Advanced N WiFi Link 6200 Wireless LAN Module 802.11 a/g/n 612AN Half Mini-Card with PCIe Interface (Factory Option) Intel® Ultimate N WiFi Link 6300 Wireless LAN Module 802.11 a/g/n 633AN Half Mini-Card with PCIe Interface (Factory Option) 3rd Party 802.11b/g HMC Wireless Lan Module with PCIe Interface (Factory Option) 3rd Party 802.11b/g/n HMC Wireless Lan Module with PCIe Interface (Factory Option)</p>
Storage	Interface	
<p>One Changeable 12.7mm(h) Optical Device (CD/DVD) Type Drive (see "Factory Options" on page C - 5) Easy Changeable 2.5" 9.5 mm (h) SATA (Serial) HDD</p>	<p>Three USB 2.0 Ports One eSATA Port (Supported in Windows Vista/Windows 7 Only) One HDMI Out Port One External Monitor Port One Headphone-Out Jack One Microphone-In Jack One S/PDIF-Out Jack One RJ-11 Jack One RJ-45 LAN Jack One DC-In Jack</p>	
Audio	Slots	
<p>Intel® High Definition Audio Compliant Interface 3D Stereo Enhanced Sound System S/PDIF Digital Output Built-In Microphone 2 * Built-In Speakers 1W, 8Ω</p>	<p>One ExpressCard/34/54 Slot <u>Two Mini-Card Slots (USB/PCIe):</u> Slot 1 for WLAN Module with HMC Slot and PCIe Interface (Factory Option) Slot 2 for 3.75G Mini-Card Slot with USB Interface (Factory Option)</p>	
Keyboard & Pointing Device		
<p>Full Size WinKey Keyboard Built-in TouchPad (integrated scrolling key functionality) with Multi Gesture Function Three Instant Keys (WWW, E-Mail, Silent Mode)</p>		

Specifications

Communication (cont'd)	Power	Environmental Spec
Bluetooth 2.1 + EDR (Enhanced Data Rate) Module (Factory Option) 2.0M Pixel USB PC Camera Module (Factory Option) UMTS/HSPDA-based 3.75G Module with USB Mini-Card Interface (Factory Option) Quad-band GSM/GPRS (850 MHz, 900 MHz, 1800 MHz, 1900 MHz) UMTS WCDMA FDD (2100 MHz) Note that UMTS modes CAN NOT be used in North America.	Full Range AC/DC Adapter AC input 100 - 240V, 50 - 60Hz, DC Output 19V, 4.74A (90 Watts) 6 Cell Smart Lithium-Ion Battery Pack, 48.84WH / 4400mAH 9 Cell Smart Lithium-Ion Battery Pack, 73.26WH, 7200mAH (Factory Option)	Temperature Operating: 5°C - 35°C Non-Operating: -20°C - 60°C Relative Humidity Operating: 20% - 80% Non-Operating: 10% - 90%
Power Management	Security	Dimensions & Weight
Supports Wake on LAN Supports Wake on USB Supports Resume From Modem Ring	Security (Kensington® Type) Lock Slot BIOS Password Fingerprint Reader Module (Factory Option)	<u>Model A Computers:</u> 397.2mm (w) * 282.5mm (d) * 39.5mm (h) 2.9 kg With 6 Cell Battery & ODD <u>Model B Computers:</u> 374mm (w) * 256mm (d) * 37.9mm (h) 2.5 kg With 6 Cell Battery & ODD
	Operating System	
	Windows® Vista (with Service Pack 2) Windows® 7	

Factory Options

Super Multi Drive Module
 Blu-Ray Combo and Blu-Ray Writer Module
 Intel® WiFi Link 5300 WLAN Module
 Intel® Advanced N WiFi Link 6200 HMC WLAN Module
 Intel® Ultimate N WiFi Link 6300 HMC WLAN Module
 802.11b/g HMC WLAN Module
 802.11b/g/n HMC WLAN Module
 Bluetooth 2.1 + EDR (Enhanced Data Rate) Module
 2.0M Pixel USB PC Camera Module
 9 Cell Smart Lithium-Ion Battery Pack, 73.26WH
 Fingerprint Reader Module
 UMTS/HSPDA-based 3.75G Module with USB Mini-Card Interface

Specifications

C

Appendix D: Windows 7 Information

This Appendix contains information (including control panel information, driver installation etc.) for users of the **Windows 7 OS** where there are significant differences from **Windows Vista**, or where it is helpful to have essential information or features repeated. For items not specifically covered here see the remainder of the manual for information.

Model Differences

This notebook series includes **two** different model types. The models differ as indicated in the table below however all other features, modules and specifications are identical (see [Appendix D](#)).



Feature	Model A	Model B
Display Type Supported	17" WXGA(1440 * 900) / WUXGA (1920 * 1200) TFT LCD	15.6" HD 16:9 Wide Screen (1366 * 768) / HD+ (1600 * 900) / FHD (1920 * 1080) TFT LCD
Design		

Table D - 1 - Model Differences

DVD Regional Codes




Changing DVD Regional Codes

Go to the **Control Panel** and double-click **Device Manager (System and Security > System)**, then click the **+** next to **DVD/CD-ROM drives**. Double-click on the DVD-ROM device to bring up the **Properties** dialogue box, and select the **DVD Region** (tab) to bring up the control panel to allow you to adjust the regional code.


DVD region detection is device dependent, not OS-dependent. You can select your module's region code **5** times. The fifth selection is permanent. This cannot be altered even if you change your operating system or you use the module in another computer.

Region	Geographical Location
1	USA, Canada
2	Western Europe, Japan, South Africa, Middle East & Egypt
3	South-East Asia, Taiwan, South Korea, The Philippines, Indonesia, Hong Kong
4	South & Central America, Mexico, Australia, New Zealand
5	N Korea, Russia, Eastern Europe, India & Most of Africa
6	China

Table D - 1 - DVD Region Codes

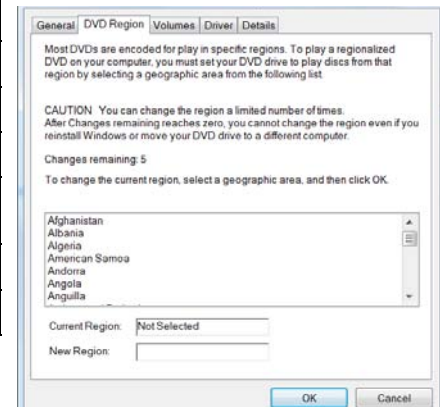

Windows 7 Start Menu & Control Panel

Most of the control panels, utilities and programs within *Windows 7* (and most other *Windows* versions) are accessed from the **Start** menu. When you install programs and utilities they will be installed on your hard disk drive, and a shortcut will usually be placed in the **Start** menu and/or the desktop. Right-click the **Start** menu icon , and then select **Properties** if you want to customize the appearance of the **Start** menu.

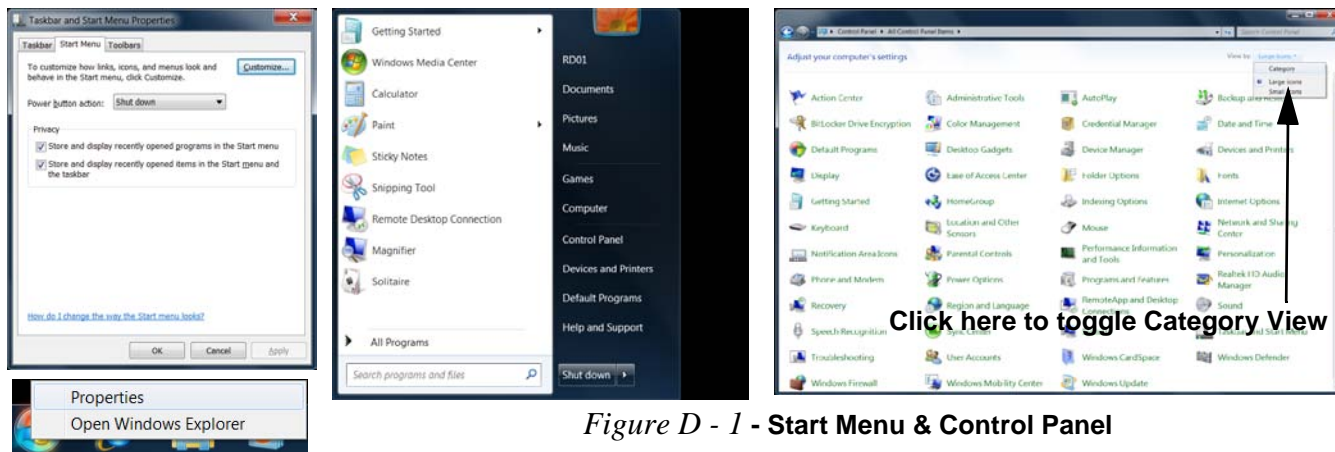


Figure D - 1 - Start Menu & Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The **Control Panel** is accessed from the **Start** menu, and it allows you to configure the settings for most of the key features in *Windows* (e.g. power, video, network, audio etc.). *Windows 7* provides basic controls for many of the features, however many new controls are added (or existing ones are enhanced) when you install the drivers. To see all controls it may be necessary to toggle off *Category View* to view the control panel icons.

Function/Hot Key Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators are available when the hot key utility is installed.
























Fn Keys	Function		Fn Keys	Function	
Fn + ~	Play/Pause (in Audio/Video Programs)		Fn + F5/F6	Volume Decrease/Increase	 
Fn + 	3.75G Module Power Toggle*	 	Fn + F7	Display Toggle. See <i>“Switching Displays Using Fn + F7” on page B - 4</i>	
Fn + F1	Touchpad Toggle	 	Fn + F8/F9	Brightness Decrease/Increase	 
Fn + F2	Turn LCD Backlight Off (Press a key to or use TouchPad to turn on)		Fn + F10	PC Camera Power Toggle	 
Fn + F3	Mute Toggle	 	Fn + F11	WLAN Module Power Toggle	 
Fn + F4	Sleep Toggle		Fn + F12	Bluetooth Module Power Toggle	 
	*Silent Mode Toggle	 	*When enabled, Silent Mode will reduce fan noise and save power consumption. Note this may reduce computer performance.		

Table D - 2 - Function & Hot Key Indicators

Hot Key Buttons & Keyboard

These buttons give instant access to the default Internet browser and e-mail program, and allow you to toggle the Silent Mode on/off with one quick button press. Note that in **Windows 7** the E-Mail button will only function after the Outlook or Outlook Express applications are installed (these applications are not installed by default in **Windows 7**).


Hot Key	Function
	Activate the Default E-Mail Browser
	Activate the Default Internet Program
	Toggle *Silent Mode (for power saving)

Video Features

You can configure display options from the **Display** control panel in *Windows*, and from the *ATI Catalyst Control Center* as long as the appropriate **video driver** is installed.

To access **Display (Control Panel)** and **Screen Resolution** in *Windows*:

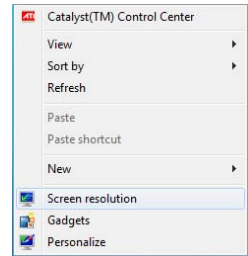

1. Click **Start** and click **Control Panel**.
 2. Click **Display** (icon) - In the **Appearance and Personalization** category.
 3. Click **Adjust Screen Resolution/Adjust resolution**.
- OR
4. Alternatively you can right-click the desktop and select **Screen resolution** (see right).
 5. Use the dropdown to select the screen **Resolution** ① (*Figure D - 2 on page D - 8*).
 6. Click **Advanced settings** ② (*Figure D - 2 on page D - 8*) to bring up the **Advanced** properties tabs.



To access the *ATI Catalyst Control Center*:

1. Click **Start** and click **All Programs** (or just click **Start** and select **ATI CCC** ③ (*Figure D - 2 on page D - 8*)).
2. Click **Catalyst Control Center**.
3. Click **ATI CCC (Advanced/Wizard)** ④ (*Figure D - 2 on page D - 8*).

OR


4. Double-click the taskbar icon  ⑤ (*Figure D - 2 on page D - 8* - note that you may need click the show hidden icons button in the taskbar in order to see the ATI taskbar icon ).

OR

5. Right-click the desktop and select **Catalyst(TM) Control Center**.



Switching Displays in ATI Video for Windows 7

Use the  + **P** key combination, **Fn** + **F7** key combination or **Screen Resolution** control panel to switch displays for ATI video in *Windows 7*.

Windows 7 Information

Screen Resolution

Besides the built-in LCD, you can also use an **external VGA monitor (CRT)/external Flat Panel Display** as your display device.


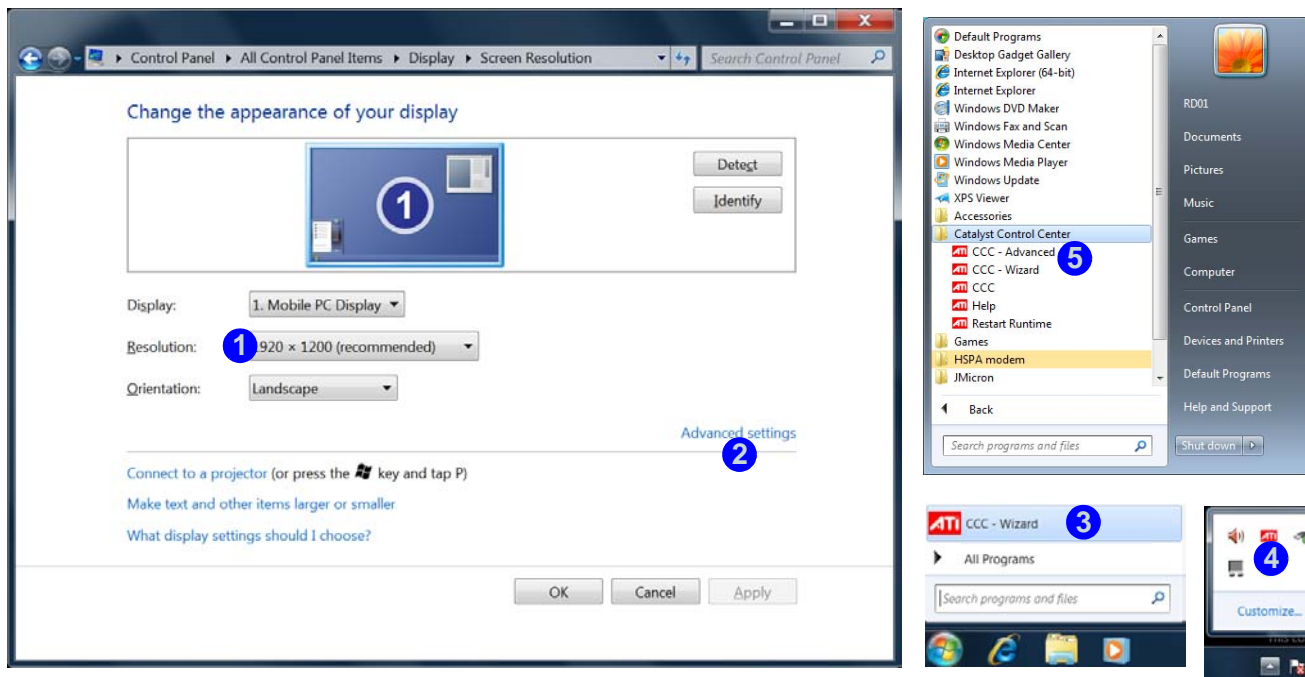


Figure D - 2 - Screen Resolution & ATI Controls

Attaching Other Displays

Configuring an External Display in Windows 7

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. Go to the **Screen resolution** control panel.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

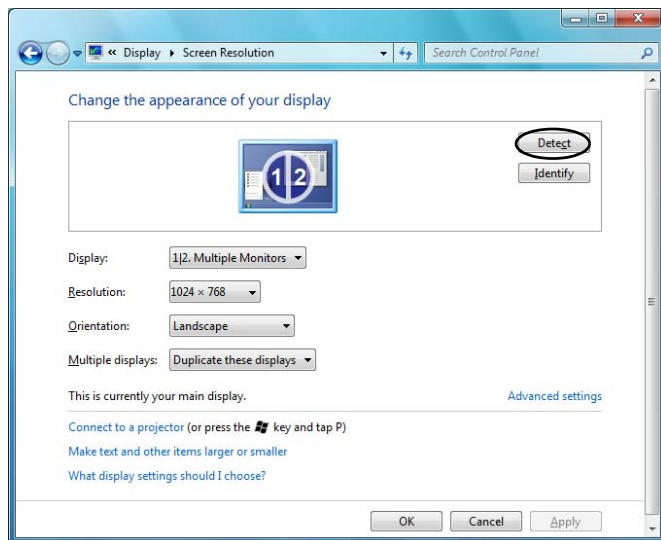

Video Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your service center for the latest details on video cards supported.



Switching Displays in ATI Video for Windows 7


Use the  + **P** key combination, **Fn + F7** key combination or **Screen Resolution** control panel to switch displays for ATI video in *Windows 7*.

Figure D - 3 - Screen Resolution - Multiple Displays

Windows 7 Information

5. You can configure the displays from the **Multiple Displays** menu.

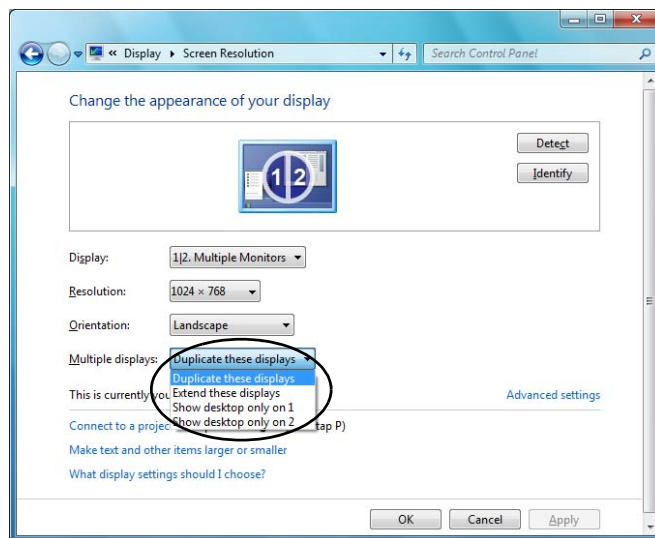



Figure D - 4 - Screen Resolution - Multiple Display Options

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

ATI Catalyst® Control Center

Adjust the video settings from the **ATI Catalyst® Control Center**.


1. Open the **Display Settings** (see page 1 - 17) control panel.
2. Click **Advanced Settings** (button).
3. Click **Catalyst(R) Control Center** (tab) and then click **ATI Catalyst Control Center** (button) to start the control center.
4. Select either **Basic** or **Advanced** and then click **Next**.
5. If you have selected **Basic** a wizard will help you set up the display options, or if you have selected **Advanced** you will be taken to the **ATI Catalyst Control Center** (you can change the options from the **Basic** menu or the **View** menu in the ATI Catalyst Control Center).

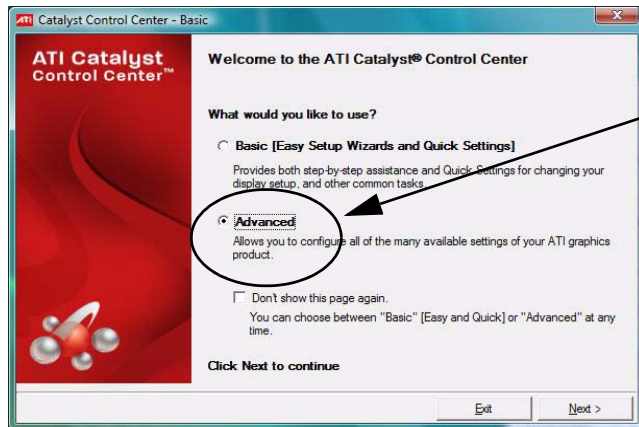

Note that the control panels pictured in the following pages are from the **Advanced** settings.



ATI Taskbar Icon

The **ATI Catalyst Control Center** can be accessed as above or by double-clicking the icon  in the taskbar (or by right-clicking the icon and selecting **Catalyst Control Center**).

If you don't see the ATI icon in the taskbar, click **Preferences** (tab) in the **ATI Catalyst® Control Center**, and select **Enable System Tray Menu**.


Right-click the ATI icon  to bring up the taskbar menu.

Figure D - 5

ATI Catalyst Control Center Basic Settings

D

Windows 7 Information



Help Menus

Click **Help** (tab) and select an option from the drop down menu. Press **F1** to bring up **Help** for any currently selected page.

The **ATI Catalyst® Control Center** provides additional video configuration controls and tools which allow quick access to features such as display options, 3D Settings, color and Help menus etc. Adjust settings from the options in the **Graphics Settings Tree View** pane.

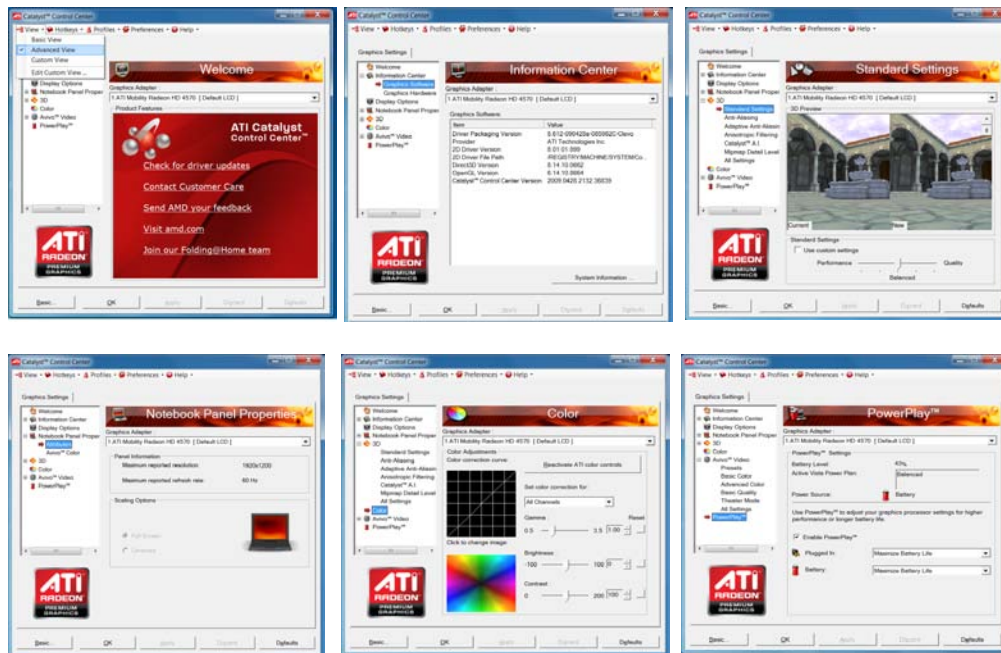


Figure D - 6
ATI Catalyst Control Center Advanced Settings

Using the Fn + F7 Key Combination to Switch Displays

You can also use the **Fn + F7** key combination to quickly change display configuration and modes.

1. Attach your external display to the external monitor port/HDMI-Out port and turn it on.
2. Press the **Fn + F7** key combination.
3. An on-screen menu will pop up.
4. Use the cursor keys (or **Fn + F7**) to select the appropriate configuration from the menu, and press Enter to confirm the selection.


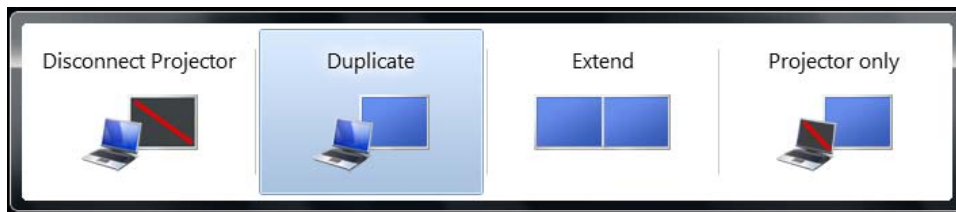


Figure D - 7
**Fn + F7 Display
Configuration
Selection**



Silent Mode

Use the  key to toggle **Silent Mode** to reduce fan noise and save power consumption. Note this may reduce computer performance.

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components.

1. Attach the AC/DC adapter to the DC-in jack on the left of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn "On".

Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *"How do I completely discharge the battery?" on page D - 27*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *"Battery Information" on page D - 23*.

Turning On the Computer


Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options** in the *Windows* control panel to configure this feature.



Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Lock Button Menu** in *Windows 7*. This will help prevent hard disk or system problems.

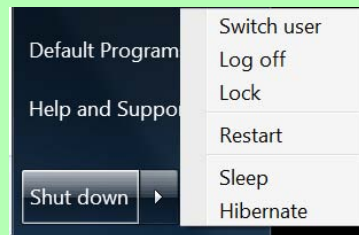

Forced Off

If the system “hangs”, and the **Ctrl + Alt + Del** key combination doesn’t work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

Power Button as Stand by or Hibernate Button

You can use the OS’s “Power Options” control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS’s documentation, or [“Configuring the Power Buttons” on page D - 20](#) for details).

Power Plans



Resuming Operation

See [Table D - 3, on page D - 21](#) for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click **Change plan settings** and then click **Change advanced power settings** to access further configuration options in **Advanced Settings**.

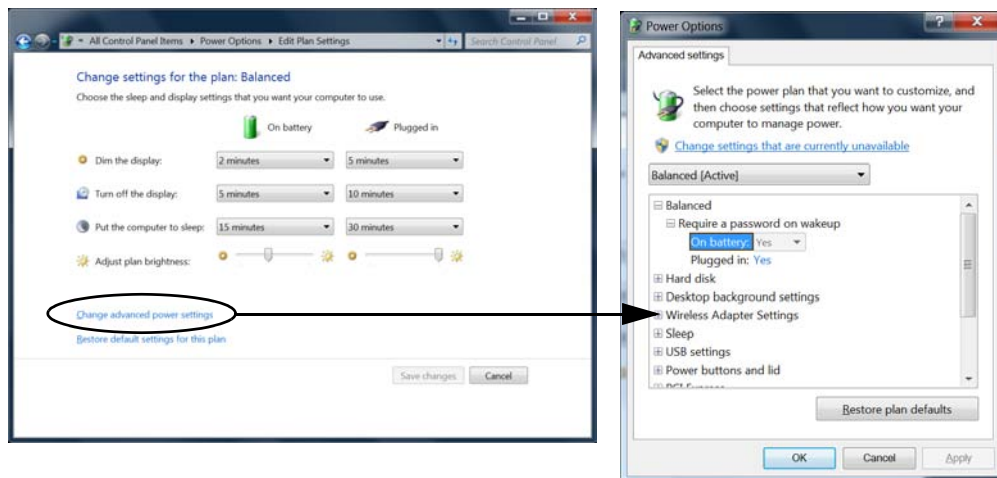



Figure D - 8

Power Plan Advanced Settings

Each **Windows power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

Click to Show/Hide additional power plans

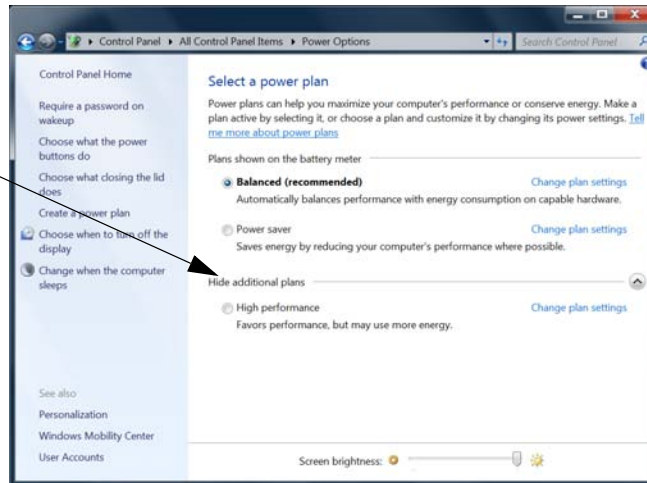

ATI PowerPlay™

PowerPlay™ in the **ATI Catalyst Control Center** (in the Graphics Settings Tree View pane) allows you to set your graphics processor settings for higher performance or longer battery life.

Figure D - 9
Power Plans

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. **Sleep** is the default power-saving state in *Windows 7*.

Earlier versions of *Windows* used Stand By and Hibernate as system power-saving states. *Windows 7* combines the features of Stand By and Hibernate into the default **Sleep** power-saving state.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery.

Shut down

You should **Shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.

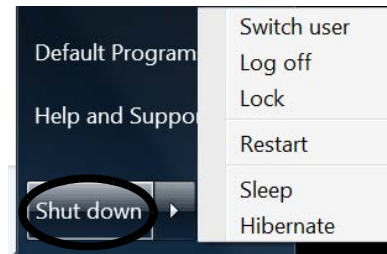


Figure D - 10
Lock Button Menu

Configuring the Power Buttons

The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.



Password Protection

It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking **Require a password on wakeup** in the left menu, and selecting the options (click **Change settings that are currently unavailable**).

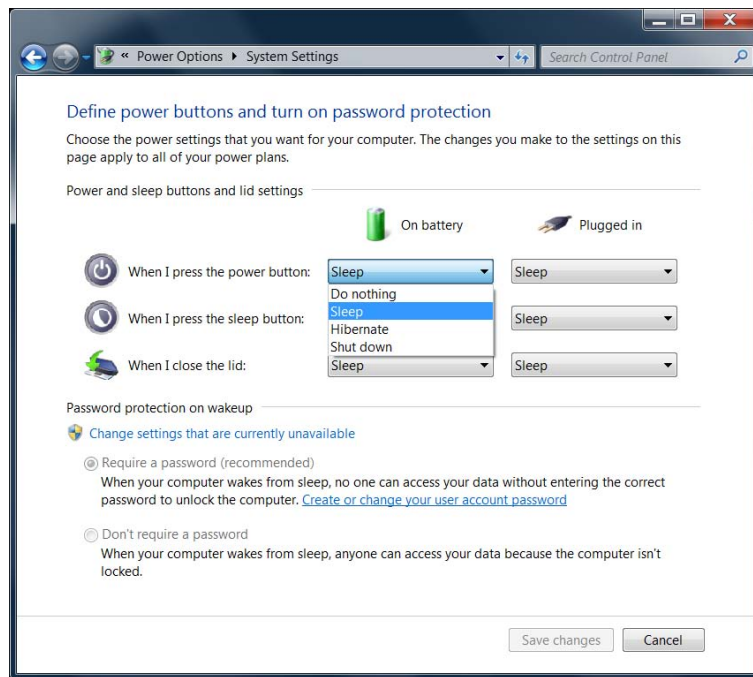




Figure D - 11
Power Options Define
Power Buttons

Resuming Operation


You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn** + **F4** key combo).

Power Status	Icon  Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad



Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).



Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.

Table D - 3
Resuming
Operation

Energy Star Power Saving

This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity. If you want to enable Energy Star power saving then follow these instructions:

1. Right-click the taskbar icon.
2. Select **Power Conservation Modes**.
3. Select **Energy Star** to use the Energy Star power management and override other power saving settings.

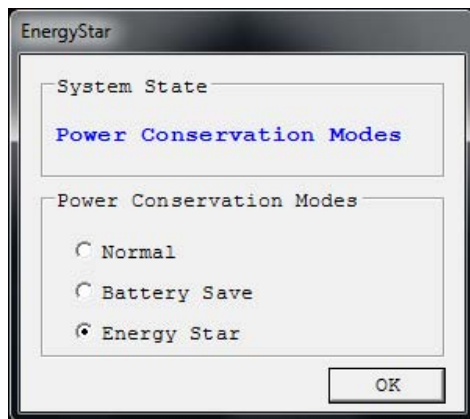




Figure D - 12
Energy Star Menu

Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure D - 8 on page D - 16*).

Click the battery icon  in the taskbar to see the current battery level and charge status.

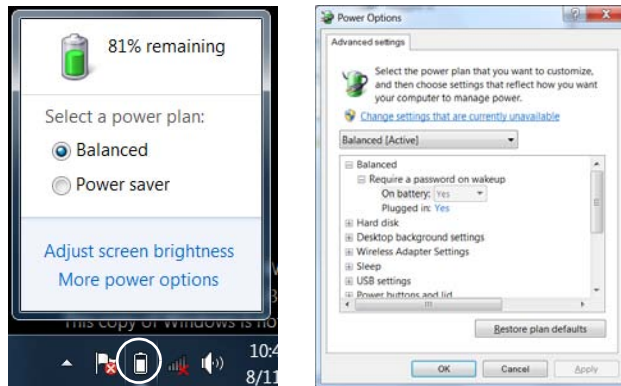


Figure D - 13
**Battery Icon
(Taskbar) & Battery
Advanced Settings**



Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.




Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

Figure D - 14
Windows Mobility Center

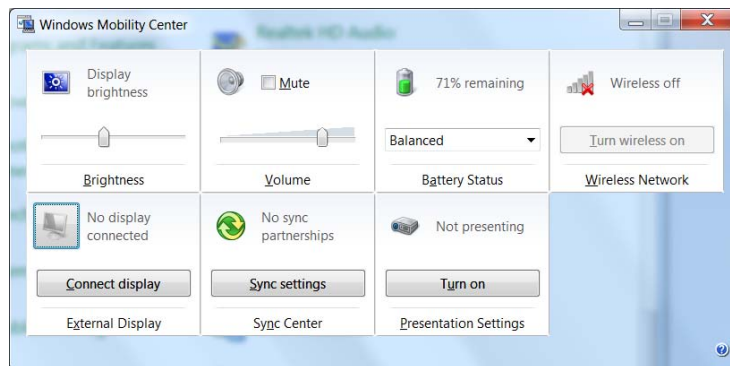

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days.**

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see ***“Removing the Battery” on page 6 - 3.***

New Battery

Always completely discharge, then fully charge, a new battery (see ***“Battery FAQ” on page D - 27*** for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. (Refer to ***“LED Indicators” on page 1 - 9*** for information on the battery charge status, and to ***“Battery Information” on page D - 23*** for more information on how to maintain and properly recharge the battery pack.)



Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances
- DO NOT expose the battery to fire or high temperatures, it may explode
- DO NOT connect the metal terminals (+, -) to each other



Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your service center. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create a power plan** for discharging the battery and set all the options to **Never**.
3. Click **Change plan settings** (after creating it) and click **Change plan settings > Change advanced power settings**.

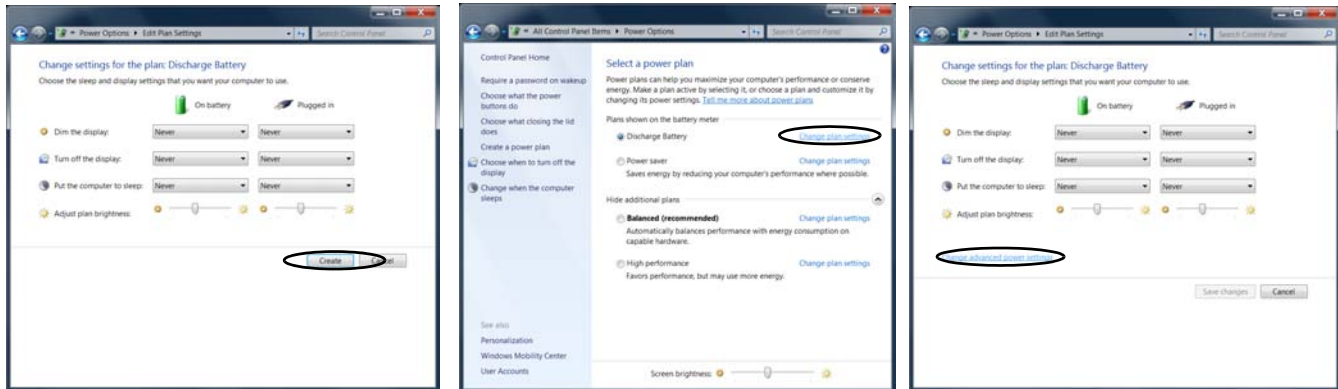


Figure D - 15 - Create Power Plan - Discharge Battery

Windows 7 Information

4. Scroll down to **Battery** and click **+** to expand the battery options.
5. Choose the options below (click **Yes** if a warning appears):

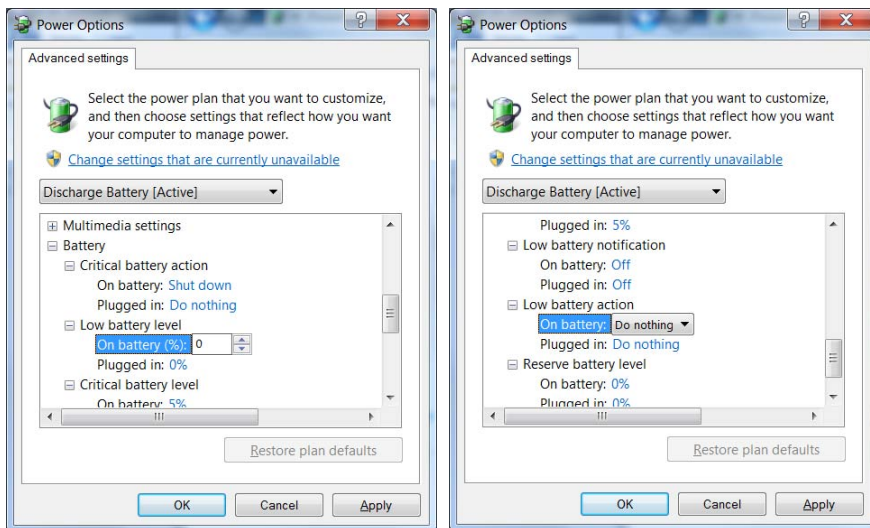


Figure D - 16 - Power Options Advanced Settings - Battery

- Low battery levels = 0%
- Critical battery Levels = 0%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

Battery Charging & Maintenance

How do I fully charge the battery?
When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?
Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc, click **Install Drivers/Option Drivers** (button) and then click the appropriate driver name from the **Drivers Installer** menu. Follow the instructions to install the driver. Alternatively click **Start**, navigate (**Browse..**) to the executable file and then follow the manual setup instructions.



Figure 5 - Drivers Installer Screen 1

1. Check the driver installation order from [Table D - 4](#) (the **drivers must be installed in this order**) which is the same as that listed in the **Drivers Installer** menu below.
2. Click to select the driver you wish to install, after installing each driver it will become greyed out (if you need to reinstall any driver, click the **Unlock** button).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.



Figure 6 - Drivers Installer Screen 2

Windows 7 Drivers	Page #
<i>Chipset</i>	<i>Page D - 31</i>
<i>Video</i>	<i>Page D - 31</i>
<i>Audio</i>	<i>Page D - 32</i>
<i>Modem</i>	<i>Page D - 32</i>
<i>LAN</i>	<i>Page D - 32</i>
<i>TouchPad</i>	<i>Page D - 32</i>
<i>CardReader</i>	<i>Page D - 32</i>
<i>Hot Key</i>	<i>Page D - 32</i>
<i>MEI Driver</i>	<i>Page D - 33</i>
<i>Wireless LAN Module (Win 7)</i>	<i>Page D - 35</i>
<i>3.75G/HSPA Module</i>	<i>Page 7 - 29/Page 7 - 38</i>
<i>Fingerprint Reader Module</i>	<i>Page 7 - 43</i>
<i>PC Camera Module</i>	<i>Page 7 - 49</i>

Table D - 4 - Driver Installation

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver. To do this go to the **Control Panel** in the *Windows OS* and double-click the **Programs and Features** item (**Programs > Uninstall a program**). If you see the individual driver listed (if not see below), uninstall it, following the on screen prompts (it may be necessary to restart the computer). Go to the appropriate section of the manual to complete the update/reinstall procedure for the driver in question.

If the driver is not listed in the **Programs and Features** item:

1. Click **Start** and click **Control Panel**.
2. Double-click **System** (icon); System (icon) is in **System and Security** (category).
3. Click **Device Manager** (in the left menu).
4. Double-click the **device** you wish to update/reinstall the driver for (you may need to click "+").
5. Look for the **Update Driver** button (check the **Driver** tab) and follow the on screen prompts.



Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual disc* and click **Install Drivers** (button).

Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

Video

1. Click **2.Install Video Driver > Yes**.
2. Click **Next > Install** (button).
3. Click the **Express** (or **Custom** if you prefer to manually configure the driver installation settings) button and click **Next**.
4. Click **Accept** (button) and click **Yes**.
5. Click **Finish**.

Audio

1. Click **3.Install Audio Driver > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.

Modem

1. Click **4.Install Modem Driver > Yes**.
2. Click **OK**.
3. The modem is ready for dial-up configuration.

LAN

1. Click **5.Install LAN Driver > Yes**.
2. Click **Install**.
3. Click **Finish**.
4. The network settings can now be configured.

TouchPad

1. Click **6.Install Touchpad Driver > Yes**.
2. Click **Next**.
3. Click the button to accept the license, and then click **Next**.
4. Click **Finish > Restart Now** to restart the computer.

CardReader

1. Click **7.Install CardReader Driver > Yes**.
2. Click **Install**.
3. Click **Finish**.

Hot Key

1. Click **8.Install Hotkey Driver > Yes**.
2. Click **Next > Install**.
3. Click **Finish > Finish** to restart the computer.

It is recommended you now install the **MEI Drive** (see over).

MEI Driver

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install MEI Driver > Yes**.
4. Click **Next > Yes > Next > Next**.
5. Click **Finish**.

Windows Experience Index

After the drivers are installed follow this procedure to ensure an accurate rating from the *Windows Experience Index*:

1. Click **Start**, and click **Control Panel**.
2. Click **Performance Information and Tools** (**System and Security > System > Check the Windows Experience Index**).
3. Click "**Rate this computer**".
4. The computer will take a few minutes to assess the system performance.
5. Close the control panel.

Windows 7 Information

Optional Drivers

See the pages indicated for the driver installation procedures for any modules included in your purchase option. Where **Windows 7** information differs from **Windows Vista** it will be included in this chapter; if **Windows 7** information is the same as **Windows Vista** then refer to **Chapter 7** as indicated on the following page.



Figure D - 1 - Drivers Installer - Option Drivers Menu

Bluetooth Module (Win 7)

Note: The operating system is the default setting for **Bluetooth** control in *Windows 7*, and does not require a driver. See *“Bluetooth Module (Win 7)” on page D - 36* for configuration instructions.

Wireless LAN Module (Win 7)

See the specific **Windows 7** driver installation and configuration information in *“Wireless LAN Module (Win 7)” on page D - 41*.

3.75G/HSPA Module

See *“3.75G/HSPA Module” on page 7 - 25* for driver installation and configuration information.

Fingerprint Reader Module (Win 7)

See the introduction in *“Fingerprint Reader Module (Win 7)” on page D - 47*, and check the installation procedure.

PC Camera Module

See *“PC Camera Module” on page 7 - 48* for driver installation and configuration information.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F12** key combination to toggle power to the Bluetooth module, and check the LED indicator to see if the module is powered on or not (see [Table 1 - 6](#), on page 1 - 13/ [Table 1 - 4](#), on page 1 - 9).

Bluetooth Module (Win 7)

The operating system's **Bluetooth Devices** control panel is used to configure the Bluetooth settings in *Windows Vista*, and therefore does not require a driver. Use the **Fn + F12** key combination (see *“Function/Hot Key Indicators”* on page D - 5) to toggle power to the Bluetooth module. When the Bluetooth module is powered on, the LED will be **orange** and the on-screen indicator will briefly be displayed.



Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported **in one direction only (simultaneous data transfer is not supported)**. Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

Bluetooth Module & Resuming From Sleep Mode




The Bluetooth module's default state will be off after resuming from the **Sleep** power-saving state. Use the key combination (**Fn + F12**) to power on the Bluetooth module after the computer resumes from Sleep.

Bluetooth Configuration in Windows 7

Setup your Bluetooth Device so the Computer Can Find it


1. Turn your Bluetooth device (e.g. PDA, mobile phone etc.) on.
2. Make the device discoverable (to do this check your device documentation).

To Turn the Bluetooth Module On

1. Press the **Fn + F12** key combination to power on the Bluetooth module.
2. A Bluetooth icon  will appear in the taskbar.
3. You can then do any of the following to access the **Bluetooth Devices** control panel.
 - **Double-click** the taskbar icon  to access the **Bluetooth Devices** control panel.
 - **Click/Right-click** the taskbar icon  and choose an option from the menu.



Add a device

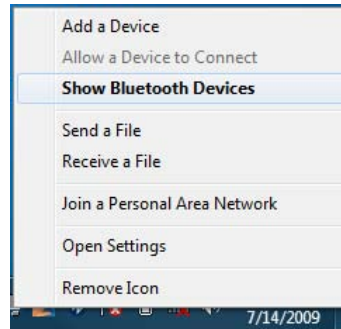

Right-Click Taskbar Icon 



Add a Device

Click **Start**, and click **Control Panel** and then click **Devices and Printers (Hardware and Sound)**. Click **Add a device** to search for any available Bluetooth devices.

Figure D - 2
Bluetooth Devices & Click Icon Menu



Pairing Options

If a device has been previously connected then the pairing option menu will appear when you attempt subsequent connections. You can choose to have the computer create a pairing code for you, use the device's existing pairing code or you can pair certain devices without using a code.

To Add a Bluetooth Device

1. Access the **Bluetooth Devices** control panel and click **Add a device**.
2. Double-click the device you want to pair with the computer.


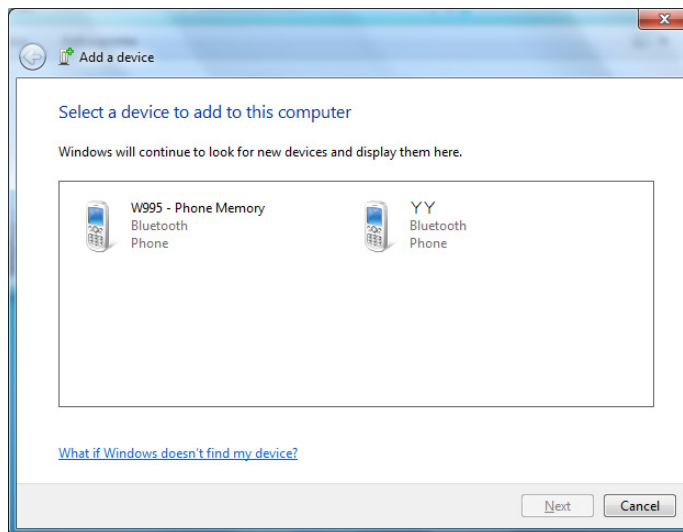


Figure D - 3
Add a Device

3. On first connection the computer will provide you with a pairing code to be entered onto the device.

4. Enter the code into your Bluetooth enabled device and follow any on-screen instructions to complete the pairing.

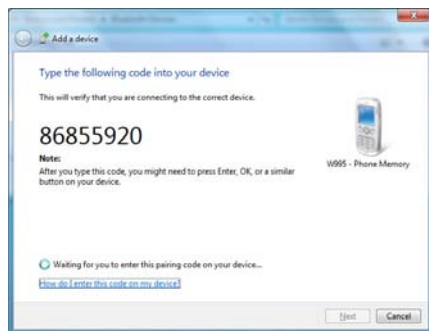

Pairing Codes

The example outlined here shows a connection to a mobile device. Other devices e.g. computers, may have a slightly different connection procedure, and may require you to confirm a pairing code is correct on both devices. Follow the on-screen instructions to complete the pairing.

Figure D - 4
Pairing Code Example

5. **Windows** will check to see if any drivers are required to complete the pairing.
6. Follow any on-screen instructions on the computer if device drivers are required to be installed.
7. Click **Close**.

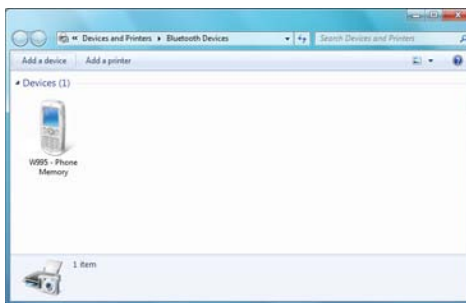


Figure D - 5
Pairing Complete & Bluetooth Device Enabled



Bluetooth Help

To get help on Bluetooth configuration and settings, select **Help and Support** from the **Start** menu. Type Bluetooth in the **Search Help** box, and select an item from the returned search results to get more information.

To Change Settings for the Bluetooth Device

1. Click the taskbar icon and select **Show Bluetooth Devices**.
2. Right-click on the device you want to change and click **Properties** to:
 - Change the **name** of the device (click **Bluetooth**, type a new name and click **OK**).
 - Enable/Disable a **service** (click **Services**, clear/tick the check box next to the service and click **OK**).

To Make your Computer Discoverable to Bluetooth Devices

1. Click the taskbar icon and select **Open Settings**.
2. Click **Options**, and make sure that **Allow Bluetooth devices to find this computer** check box (**Discovery**) has a tick inside it.
3. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

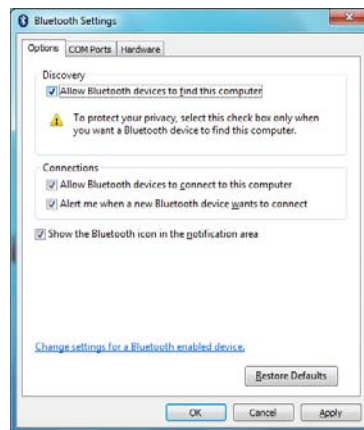




Figure D - 6
**Bluetooth Settings -
Options**

Wireless LAN Module (Win 7)

If you have included an **Intel® Wi-Fi Link 5300 Series (802.11 a/g/n), 3rd Party 802.11b/g or 3rd Party 802.11b/g/n WLAN** module in your purchase option, make sure that the Wireless LAN module is on before installing the driver.

Use the **Fn + F11** key combination (see *“Function/Hot Key Indicators” on page 1 - 13*) to toggle power to the Wireless LAN module. When the WLAN module is powered on, the  LED will be green and the indicator  will briefly be displayed. Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the module(s) are OFF if you are using the computer aboard aircraft.

Use the **Fn + F11** key combination to toggle power to the WLAN module, and check the indicator to see if the module is powered on or not (see *Table 1 - 6, on page 1 - 13*; *Table 1 - 4, on page 1 - 9*).

Windows 7 Information

Intel® Wi-Fi Link 5300 Series (802.11 a/g/n) Driver Installation

If you see the message “**Found New Hardware**” click **Cancel** to close the window.

1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. An on-screen message will appear to show the progress of the WLAN installation.
5. When the message disappears the driver will be installed.

Note: The operating system is the default setting for Wireless LAN control in *Windows 7* (see overleaf).

3rd Party 802.11b/g/n or 802.11b/g/n Driver Installation


If you see the message “**Found New Hardware**” click **Cancel** to close the window.


1. Make sure the module is powered on, then insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Choose the language you prefer and click **Next**.
5. Click **Next > Install**.
6. Click **Finish**.

Note: The operating system is the default setting for Wireless LAN control in *Windows 7* (see overleaf).

Connecting to a Wireless Network

Make sure the Wireless LAN module is turned on.

1. **Click** the taskbar wireless icon , and then double-click an access point to connect to or click to **Open Network and Sharing Center** if you do not see a network you want to connect to in the taskbar menu (a list of options will appear allowing setting changes, and creating a new network).

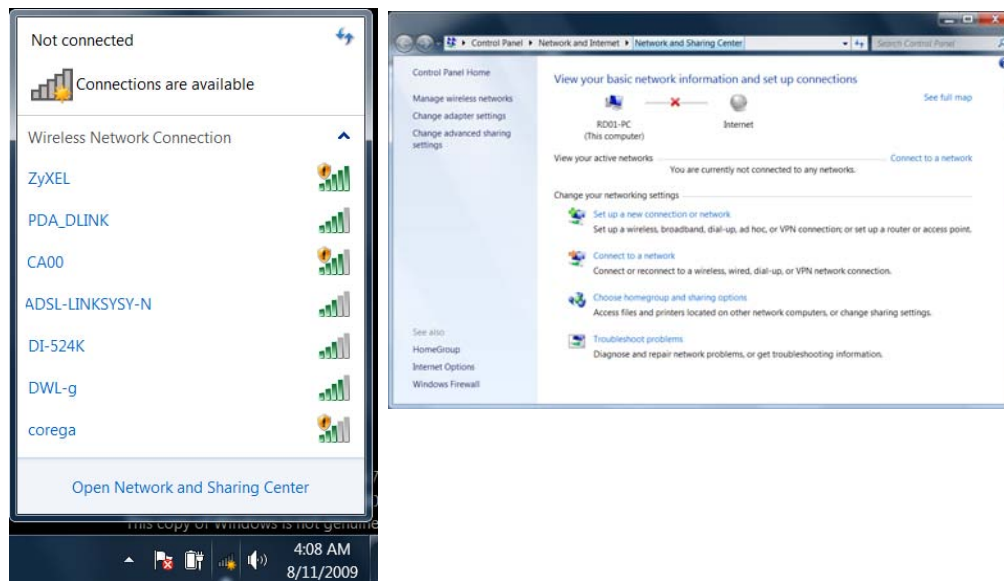

Network and Sharing Center

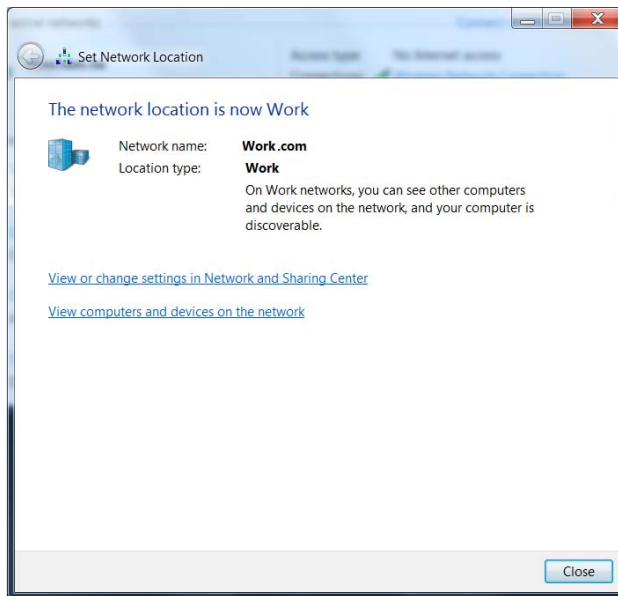
You can also use the **Network and Sharing Center** control panel in Windows (**Network and Internet**) to connect to any available wireless networks.



Figure D - 7
Click Taskbar Icon Menu & Network and Sharing Center

Windows 7 Information

2. You may need to enter a security key for any access point to which you are trying to connect.
3. Click to select a network location (e.g. **Home, Work or Public**).
4. Click “**View or change settings in Network and Sharing Center**” to access further options for the connection.

Figure D - 8
**Network Location
Set**



5. Click the taskbar icon  to see any currently connected networks.
6. To disconnect from the wireless network you can click the taskbar wireless icon , click the active connection and then click **Disconnect** (button).



Security Enabled Networks

You should try to make sure that any network you are connecting to is a secure network.

Connecting to unsecure networks may allow unauthorized access to your computer, documents, websites and files etc.

Figure D - 9
**Click Taskbar Icon
Menu - Disconnect**

Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

To access the Windows Mobility Center:


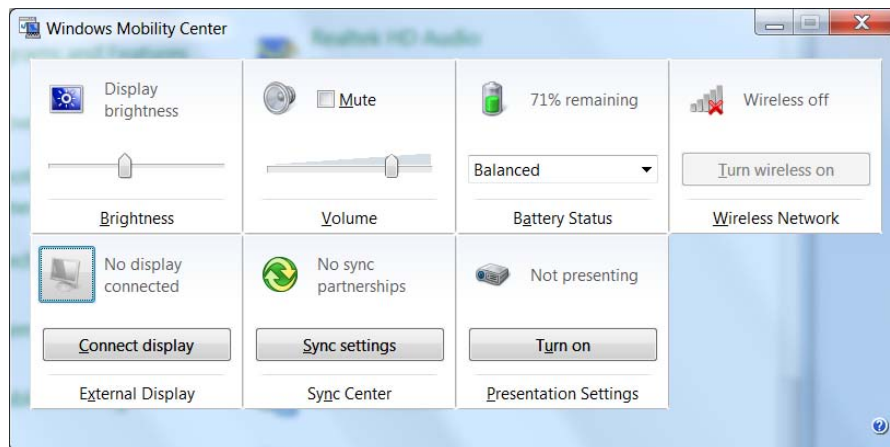
1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**).
2. Double-click **Windows Mobility Center (Mobile PC)**.
3. Click the button to **Turn wireless off/on**, or click the icon  to access the network menu.

Figure D - 10
Windows Mobility Center



Fingerprint Reader Module (Win 7)

The fingerprint reader module provides a high level of security for your computer. Make sure you have administrator's rights to your computer, and have a **Windows** password enabled for full security protection.


Before beginning the enrollment process it is recommended that you go through the fingerprint tutorial. To run the tutorial click **Start > Programs/All Programs > Protector Suite QL > Fingerprint Tutorial** after installing the driver.

Fingerprint Reader Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers** (button).
3. Click **4.Install FingerPrint Driver > Yes**.
4. Click **Software Installation**.
5. Click **Next > Next > Next**.
6. Click **Finish > Yes** to restart the computer.



Help & Manual

Right-click the taskbar icon  to bring up the menu to select **Help**.

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Option Drivers** (button). Click **Unlock** (button) and then click **4.Install FingerPrint Driver >Yes**.

Click **Documentation** to open the folder containing the manual in .pdf format.

To install the Adobe Acrobat Reader software to read the file, insert the *Device Drivers & Utilities + User's Manual* disc and click **User's Manual** (button), and click **Install Acrobat Reader** (button).

User Enrollment


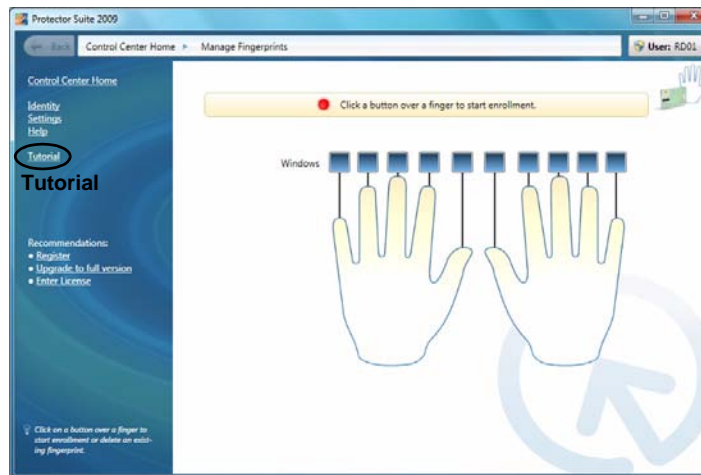

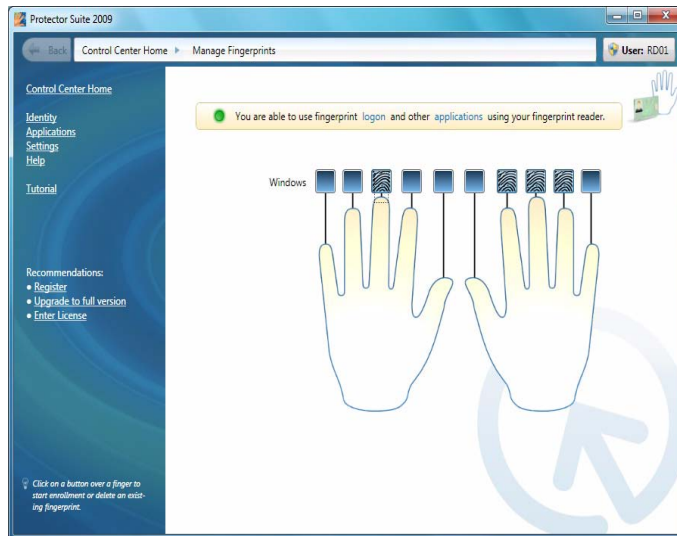
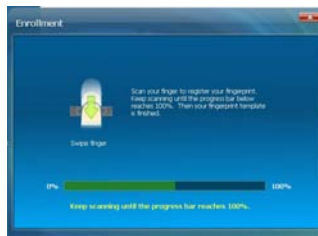
1. Click **Start > Control Center (Start > All Programs > Protector Suite > Control Center)**, or double click the taskbar icon .
2. On the first run of the program you will be asked to click the **Accept** button to accept the license.
3. If you have not set a **Windows** password you will be prompted to do so (**note**: If you have not set a password **Protector Suite** cannot secure access to your computer).
4. Click **Submit** when you have entered password.
5. You will then be prompted to enroll your fingerprints (you can click **Tutorial** to get help with fingerprint enrollment at any time).

Figure D - 11
Fingerprint Enrollment



6. Click the button above any of the fingers to begin the enrollment process for that finger.
7. Swipe the finger until the progress bar reaches **100%** to enroll that finger.
8. Repeat the process for all the fingers you wish to enroll (see sidebar), and then click the close  button to close the window.



Fingerprint Enrollment

Note that it is strongly recommended that you **enroll more than one finger** in case of injury etc.

Figure D - 12
Fingerprints Enrolled


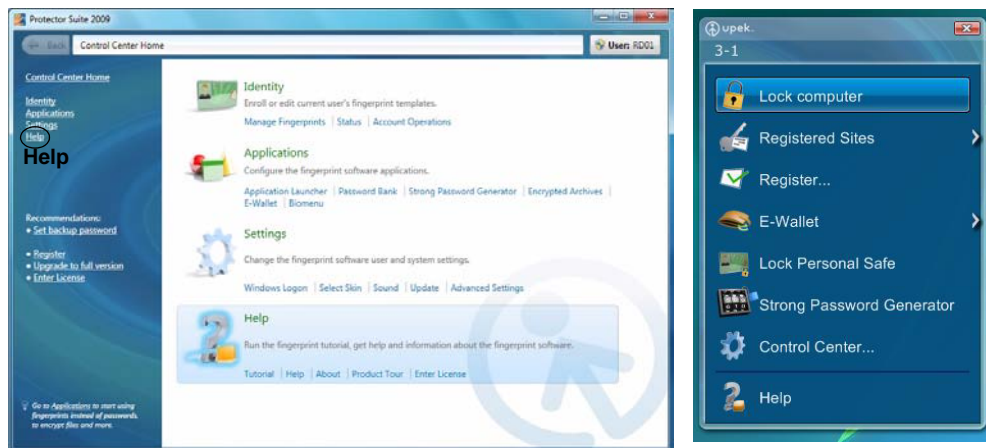
9. Click the taskbar icon  and select **Start Control Center** (and then swipe a finger) to allow you to **Edit Fingerprints**, register **Applications**, edit **Settings** and access the **Help** menu etc. You can also run the **Control Center** from the **Start** menu or **Protector Suite > Control Center** item in the **All Programs** menu.
10. Click "**Help**" in **Control Center Home** to get more information on any topic.
11. You can also run the **Tutorial**, or **Product Tour** video to get more information.

Figure D - 13
Fingerprint Control Center & Biomenu



12. See **"Help & Manual" on page D - 47** for further details.
13. If you swipe your finger over the reader at any time you can access the **Biomenu** to **lock the computer**, register websites, access the **Personal Safe**, **E-Wallet** or **Strong Password Generator**, open the **Control Center** and access the **Help** menu.

Fingerprint Control Center Features

Application Launcher

The **Application Launcher** allows you to register applications to be launched when assigned to a particular finger. Simply copy the application icon on to one of the registered fingers and then click OK to close the application window. Once registered the application will launch when you swipe the appropriate finger across the sensor.

Password Bank

The **Password Bank** stores registrations of user names, passwords and other settings for web sites etc.

Strong Password Generator

Strong Password Generator helps you to create complicated passwords resistant to dictionary attacks from the Internet.

E-Wallet

The **E-Wallet** provides biometric security for important personal information such as credit card details, account numbers etc.



Help

For more information on these and other features simply access “**Help**” in the **Fingerprint Control Center** and select the item from the menu on the left.

